


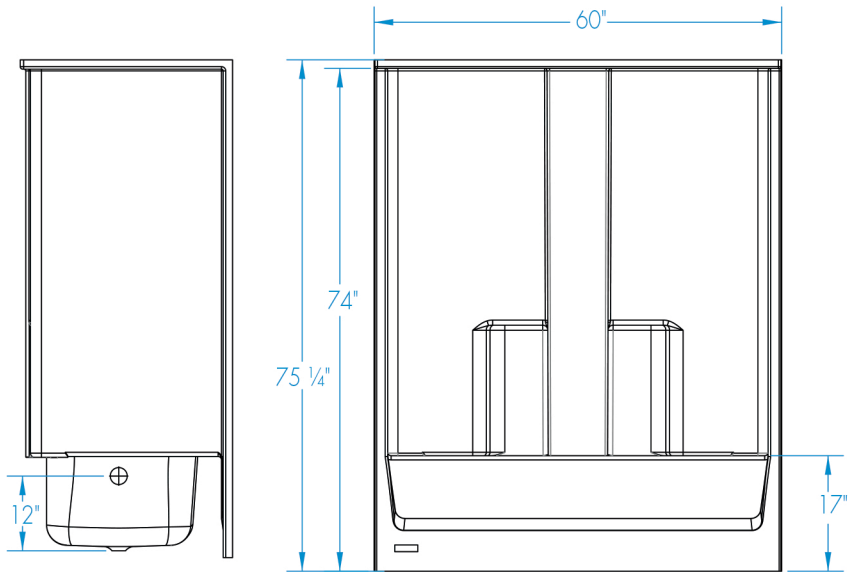

AFR: Allows for above the floor installation
of waste, overflow and drainage.

