



Parts List

Coils..... 2-4

Air Handlers..... 5-32

AAC..... 5

AAL..... 6-7

AAM..... 8-11

AAW..... 11-12

ABL..... 13

ABM..... 14-16

ABW..... 17-18

AEC..... 19

AEL..... 20-21

AEM..... 22-25

AEW..... 25-26

AFL..... 27

AFM..... 28-30

AFW..... 31-32

Parts List - Coils

Part #	Description
MISC	AIR PREP CABINET
MISC	AIR PREP DOORS
Z01	DRAIN PAN 23-1/2X19.375 *
Z01 DD	DRAIN PAN 23-1/2X19.375
Z01 SS	DRAIN PAN 23-1/2X19.375 *
Z10	DRAIN PAN 13.5 X19.75
Z10 DD	DRAIN PAN 13.5 X19.75
Z10 SS	DRAIN PAN 13.5 X19.75
Z11	DRAIN PAN 14-3/4X19.375
Z11 DD	DRAIN PAN 14-3/4X19.375
Z11 SS	DRAIN PAN 14-3/4X19.375 *
Z12	DRAIN PAN 15-3/4X19.375
Z12 DD	DRAIN PAN 15-3/4X19.375
Z12 SS	DRAIN PAN 15-3/4X19.375 *
Z13	DRAIN PAN 16-3/4X19.375
Z13 DD	DRAIN PAN 16-3/4X19.375
Z13 SS	DRAIN PAN 16-3/4X19.375
Z14	DRAIN PAN 16 X19.375 (4 ROW)"
Z14 DD	DRAIN PAN 16 X19.375(4 ROW)"
Z14 SS	DRAIN PAN 16 X19.375(4 ROW)"
Z15	DRAIN PAN 18-1/2X19.375 N*
Z15 DD	DRAIN PAN 18-1/2X19.375
Z15 SS	DRAIN PAN 18-1/2X19.375
Z16	DRAIN PAN 19-1/2X19.375
Z16 DD	DRAIN PAN 19-1/2X19.375
Z16 SS	DRAIN PAN 19-1/2X19.375
Z17	DRAIN PAN 20-1/4X19.375
Z17 DD	DRAIN PAN 20-1/4X19.375
Z17 SS	DRAIN PAN 20-1/4X19.375
Z18	DRAIN PAN 21-1/4X19.375
Z18 DD	DRAIN PAN 21-1/4X19.375
Z18 SS	DRAIN PAN 21-1/4X19.375 *
Z19	DRAIN PAN 22-3/4X19.375
Z19 DD	DRAIN PAN 22-3/4X19.375
Z19 SS	DRAIN PAN 22-3/4X19.375 *
Z20	DRAIN PAN 23-1/2X21.375
Z20 DD	DRAIN PAN 23-1/2X21.375
Z20 SS	DRAIN PAN 23-1/2X21.375
Z21	DRAIN PAN 24-1/2X19.375
Z21 SS	DRAIN PAN 24-1/2X19.375 *
Z22	DRAIN PAN 25-3/4X19.375
Z22 DD	DRAIN PAN 25-3/4X19.375

Continued on next page....

Parts List - Coils

(Continued)

Part #	Description
Z22 SS	DRAIN PAN 25-3/4X19.375 *
Z23	DRAIN PAN 20-1/4X19.375 *
Z23 DD	DRAIN PAN 20-1/4X19.375
Z23 SS	DRAIN PAN 20-1/4X19.375 *
Z24	DRAIN PAN 22.75 X 21.375
Z24 SS	DRAIN PAN 22.75 X 21.375 *
Z25	DRAIN PAN 26-1/2X25-1/2"
Z26	DRAIN PAN 27-1/2X25-1/2"
Z27	DRAIN PAN 25-3/4X22-1/2" *
Z28	DRAIN PAN 29-1/4X25-1/2"
Z29	DRAIN PAN 17.0000X22.0000 BLANK *
Z30 PAN	DRAIN PAN - 13" GLPP (1826)
Z30-ML	DRAIN PAN - 13" GLPP METAL REPLACEMENT LEFT
Z30-MR	DRAIN PAN - 13" GLPP METAL REPLACEMENT RIGHT
Z31 PAN	DRAIN PAN - 16" GLPP (1827)
Z31-ML	DRAIN PAN - 16" GLPP METAL REPLACEMENT LEFT
Z31-MR	DRAIN PAN - 16" GLPP METAL REPLACEMENT RIGHT
Z32 PAN	DRAIN PAN - 19.5" GLPP (8591)
Z32-ML	DRAIN PAN - 19.5" GLPP METAL REPLACEMENT LEFT
Z32-MR	DRAIN PAN - 19.5" GLPP METAL REPLACEMENT RIGHT
Z33 PAN	DRAIN PAN - 23" GLPP (8593)
Z33-ML	DRAIN PAN - 23" GLPP METAL REPLACEMENT LEFT
Z33-MR	DRAIN PAN - 23" GLPP METAL REPLACEMENT RIGHT
Z35 PAN	DRAINPAN CB, CP GLPP (1836)
Z36 PAN	DRAIN PAN FTB 1821 GLPP
Z37	CB, CP FAB METAL DRAIN PAN 21.00 X 23.50 BBL62
Z38	DRAIN PAN 20-1/4X21.375
Z38 DD	DRAIN PAN 20-1/4X21.375
Z39	21.00 X 24.00 SIDEWAYS
Z4	DRAIN PAN MOBILE HOME FAB 4 ROW *
Z40	17 X 19.625 HORZ PAN *
Z41	21 X 19.625 HORZ PAN
Z41P	21 X 19.625 HORZ PAN PLASTIC
Z42	25 X 19.625 HORZ PAN
Z42P	25 X 19.625 HORZ PAN PLASTIC
Z43	28 X 19.625 HORZ PAN
Z43P	28 X 19.625 HORZ PAN PLASTIC
Z44	28 X 21.625 HORZ PAN
Z46 PAN	DRAIN PAN AAW
Z49	DRAIN PAN 23.7500X38.0000 BLANK
Z5	DRAIN PAN MOBILE HOME GLPP (1820)

Continued on next page....

Parts List - Coils

(Continued)

Part #	Description
Z50	INTERNAL FULL-DEPTH METAL DRAIN CQ COILS
Z51	DRAIN PAN 23.7500X51.2500 BLANK
Z7	DRAIN PAN 13 X19.375 (4 ROW) FAB *
Z7 DD	DRAIN PAN 13 X19.375(4 ROW) FAB
Z8 PAN	DRAIN PAN HI VELOCITY SMALL FORM FACTOR N/U
Z9 PAN	DRAIN PAN HI VELOCITY COIL LARGE FORM *
ZK	DRAIN PAN 16-3/4X19-3/4"
DP-H-34.00 DD	DRAIN PAN SLAB HORIZONTAL BHA
DP-V-MVR42 48	DRAIN PAN MVR 4 ROW FAB
DP-V-APA16	DRAIN PAN BVR24 24 APA12 13 1/2 x 19
4200	1.5 - 3.5 TON R-410A TXV KIT N/B (X5-3)
4202	4-5-6 TON R-410A TXV KIT N/B (X5-5)
4203	1.5 - 3.5 TON R-410A TXV KIT 20% BLEED PORT (X6-3)
4204	4-5-6 TON R-410A TXV KIT 20% BLEED PORT (X6-5)
4044	1.5 - 3.5 TON R22 TXV KIT N/B (X3-3)
4050	4-5-6 TON R22 TXV KIT N/B (X3-5)
4190	1.5 - 3.5 TON R22 TXV KIT 20% BLEED PORT (X2-3)
4195	4-5-6 TON R22 TXV KIT 20% BLEED PORT (X2-5)
3947	7.5-10 TON R410A TXV N/B (X4-10)
3946	7.5 TON R22 TXV N/B (X1-7.5)
3940	10 TON R22 TXV N/B (X1-10)
4113	TEFLON SEAL O RING (BAG OF 25)
4444	ELIMINATOR TAIL PIECE
4451	NUT FOR ELIMINATORS
TP-001	TAILPIECE SUB-ASSEMBLY (4113, 4451 & 4444)
1765	90 DEG ELBOW FOR MOBILE HOME COIL
1773	HOSE FOR MOBILE HOME COILS
3999	PISTON SIZE 0.055
4000	PISTON SIZE 0.059
3987	PISTON SIZE 0.068
4001	PISTON SIZE 0.074
3990	PISTON SIZE 0.080
3991	PISTON SIZE 0.084
3998	PISTON SIZE 0.092

Parts List - Air Handlers

AAC

Part #	Description	Unit
129111	COIL ASSY WITH DRAIN PAN	AAC 18/24
129112	COIL ASSY WITH DRAIN PAN	AAC 30/36
129113	COIL ASSY WITH DRAIN PAN	AAC 37
131014	COIL ASSY W/O DRAIN PAN - 2 ROW	AAC 18/24
131015	COIL ASSY W/O DRAIN PAN - 3 ROW	AAC 30/36
131016	COIL ASSY W/O DRAIN PAN - 4 ROW	AAC 37
130059	DRAIN PAN ASSY - 2&3 ROW	AAC 18 - 36
130004	DRAIN PAN ASSY - 4 ROW	AAC 37
131027	950 CFM, 1/5 HP BLOWER MOTOR ASSY	AAC 18/24
131026	1300 CFM 1/3 HP BLOWER MOTOR ASSY	AAC 30 - 37
130555	TOP AND BOTTOM DOOR ASSY - BREAKER	ALL MODELS
8550	BLOWER HOUSING & WHEEL ASSY 10X4	AAC 18/24
8727	BLOWER HOUSING & WHEEL ASSY 10X6	AAC 30 - 37
8098	BLOWER MOTOR - 1/5TH HP, 230 V	AAC 18/24
8099	BLOWER MOTOR - 1/3RD HP, 230 V	AAC 30 - 37
8116	CAPACITOR - 5 µF/340 V	AAC 18/24
8117	CAPACITOR - 7.5 µF/340 V	AAC 30-37
8271	CIRCUIT BREAKER - 15 A - 2 POLE	00 KW
8272	CIRCUIT BREAKER - 20 A - 2 POLE	03 KW
8273	CIRCUIT BREAKER - 30 A - 2 POLE	05 KW
8275	CIRCUIT BREAKER - 50 A - 2 POLE	08 KW
8276	CIRCUIT BREAKER - 60 A - 2 POLE	10 KW
8558	CIRCUIT BREAKER - 25 A - 2 POLE	04 KW
8559	CIRCUIT BREAKER - 35 A - 2 POLE	06 KW
8232	HEAT SEQUENCER	ALL MODELS
8722	MICRO PROCESSOR CONTROL BOARD	ALL MODELS
8694	LIMIT CONTROL THERMOSTAT - 170°F	ALL MODELS
8246	TRANSFORMER 230V - 40VA	ALL MODELS
8713	HEATER ELEMENT 3 KW	ALL MODELS
8714	HEATER ELEMENT 4 KW	ALL MODELS
8715	HEATER ELEMENT 5 KW	ALL MODELS
4200	NON BLEED, R-410A TXV	ALL MODELS
3999	PISTON, 0.055	
4000	PISTON, 0.059	
3987	PISTON, 0.068	
4001	PISTON, 0.074	

Parts List - Air Handlers

AAL

Part #	Description	Unit
110002	BLOWER ASSEMBLY	AALS 600-800 CFM
110003	BLOWER ASSEMBLY	AALM 1000-1200 CFM
110001	BLOWER ASSEMBLY	AALL 1400-2000 CFM
8201	9 X 6 BLOWER HOUSING & WHEEL	AALS 600-800 CFM
8200	10 X 8 BLOWER HOUSING & WHEEL	AALM 1000-1200 CFM
8527	12 X 9 BLOWER HOUSING & WHEEL	AALL 1400-2000 CFM
8098	MOTOR - 230V - 1/5 HP	AALS 600-800 CFM
8099	MOTOR - 230V - 1/3 HP	AALM 1000-1200 CFM
8524	MOTOR - 230V - 3/4 HP	AALL 1400-2000 CFM
8532	MOTOR MOUNT BAND - 1EA.	AALL 1400-2000 CFM
8533	MOTOR MOUNT LEG - 3EA.	AALL 1400-2000 CFM
8116	CAPACITOR - 5 MFD / 370V	AALS 600-800 CFM
8117	CAPACITOR - 7.5 MFD / 370V	AALM 1000-1200 CFM
8530	CAPACITOR - 15 MFD / 370V	AALL 1400-2000 CFM
8271	BREAKER - 15A - 2 POLE (8271SD)	Kit ECS 00
8272	BREAKER -20A - 2 POLE (8272SD)	Kit ECS 03
8558	BREAKER -25A - 2 POLE (8558SD)	Kit ECL 03
8273	BREAKER -30A - 2 POLE(8273SD)	Kit ECS 05
8559	BREAKER -35A - 2 POLE(8559SD)	Kit ECL 06
8275	BREAKER -50A - 2 POLE(8275SD)	Kit ECS 08
8276	BREAKER -60A - 2 POLE(8276SD)	Kit ECS/L 10
8273SD & 8276SD	(2)BREAKERS(30A+60A)	Kit ECL 15
8275SD & 8276SD	(2)BREAKERS(50A+60A)	Kit ECL 20
8273SD, 8276SD & 8276SD	(3)BREAKERS(30A+60A+60A)	Kit ECL 25
8275SD, 8276SD & 8276SD	(3)BREAKERS(50A+60A+60A)	Kit ECL 30
8657	4 POLE SINGLE POINT CONNECTOR	2 Circuit Breaker (15-20kw)
8658	6 POLE SINGLE POINT CONNECTOR	3 Circuit Breaker (25-30kw)
8432	TERMINAL BLOCK-2 POLE-10KW OR LESS	AAL all
8231	BLOWER TIME DELAY RELAY (TDR)	AAL all
8232	HEATER SEQUENCER	05/08/10 kw
8246	TRANSFORMER 230V - 40VA	AAL all
8694	LIMIT CONTROL T'STAT- 170°	AAL all
126679	TOP ASSEMBLY	AALS, AALM
126655	TOP ASSEMBLY	AALL
126693	TOP DOOR ASSEMBLY	AALS
126755	TOP DOOR ASSEMBLY	AALM

Continued on next page....

Parts List - Air Handlers

AAL (Continued)

Part #	Description	Unit
126745	TOP DOOR ASSEMBLY	AALL
126695	FILTER DOOR	AALS, AALM
126665	FILTER DOOR	AALL
127028	WIRING HARNESS-FEMALE SOCKET	AAL All
127030	WIRING HARNESS-2 WIRE MALE PLUG	AAL No Heat Kit
ECL00	00KW CIRCUIT BREAKER	AALL 42thru 61
ECL05	05KW CIRCUIT BREAKER	AALL 42thru 61
ECL10	10KW CIRCUIT BREAKER	AALL 42thru 61
ECL15	15KW CIRCUIT BREAKER	AALL 42thru 61
ECL20	20KW CIRCUIT BREAKER	AALL 42thru 61
ECL25	25KW CIRCUIT BREAKER	AALL 42thru 61
ECL30	30KW CIRCUIT BREAKER	AALL 42thru 61
ECS00	00KW CIRCUIT BREAKER	AALS/M 18thru 37
ECS03	03KW CIRCUIT BREAKER	AALS/M 18thru 37
ECS05	05KW CIRCUIT BREAKER	AALS/M 18thru 37
ECS08	08KW CIRCUIT BREAKER	AALS/M 18thru 37
ECS10	10KW CIRCUIT BREAKER	AALS/M 18thru 37
ECS15	15KW CIRCUIT BREAKER	AALS/M 18thru 37
ETL00	00KW TERMINAL BLOCK	AALL 42thru 61
ETL05	05KW TERMINAL BLOCK	AALL 42thru 61
ETL10	10KW TERMINAL BLOCK	AALL 42thru 61
ETS00	00KW TERMINAL BLOCK	AALS/M 18thru 37
ETS03	03KW TERMINAL BLOCK	AALS/M 18thru 37
ETS05	05KW TERMINAL BLOCK	AALS/M 18thru 37
ETS10	10KW TERMINAL BLOCK	AALS/M 18thru 37

Parts List - Air Handlers

AAM

Part #	Description	Unit
110002	BLOWER ASSEMBLY	AAM 18/19,24/25
110003	BLOWER ASSEMBLY	AAM 30/31,36/37
110001	BLOWER ASSEMBLY	AAM 42,43,48,49,60,61
8201	9 X 6 BLOWER HOUSING & WHEEL	AAM 18/19,24/25
8200	10 X 8 BLOWER HOUSING & WHEEL	AAM 30/31,36/37
8527	12 X 9 BLOWER HOUSING & WHEEL	AAM 42,43,48,49,60,61
8098	MOTOR - 230V - 1/5 HP	AAM 18/19,24/25
8099	MOTOR - 230V - 1/3 HP	AAM 30/31,36/37
8524	MOTOR - 230V - 3/4 HP	AAM 42,43,48,49,60,61
8532	MOTOR MOUNT BAND - 1EA.	AAM 42,43,48,49,60,61
8533	MOTOR MOUNT LEG - 3EA.	AAM 42,43,48,49,60,61
8116	CAPACITOR - 5 MFD / 370V	AAM 18/19,24/25
8117	CAPACITOR - 7.5 MFD / 370V	AAM 30/31,36/37
8530	CAPACITOR - 15 MFD / 370V	AAM 42,43,48,49,60,61
8271	BREAKER - 15A - 2 POLE-EA	Kit ECS 00
8272	BREAKER - 20A - 2 POLE-EA	Kit ECS 03
8558	BREAKER - 25A - 2 POLE-EA	Kit ECL 03
8273	BREAKER - 30A - 2 POLE-EA	Kit ECS 05
8559	BREAKER - 35A - 2 POLE-EA	Kit ECL 05
8275	BREAKER - 50A - 2 POLE-EA	Kit ECS 08
8276	BREAKER - 60A - 2 POLE-EA.	Kit ECS/L 10
8273SD & 8276SD	(2)BREAKERS(30A+60A)	Kit ECL 15
8276SD & 8276SD	(2)BREAKERS(60A+60A)	Kit ECL 20
8273SD, 8276SD & 8276SD	(3)BREAKERS(30A+60A+60A)	Kit ECL 25
8276SD, 8276SD & 8276SD	(3)BREAKERS(60A+60A+60A)	Kit ECL 30
8657	4 POLE SINGLE POINT CONNECTOR	2 Circuit Breaker (15-20kw)
8658	6 POLE SINGLE POINT CONNECTOR	3 Circuit Breaker (25-30kw)
8432	TERMINAL BLOCK-2 POLE-10KW OR LESS	AAM all
8722	BLOWER CIRCUIT BOARD (TDR)	AAM all
8231	BLOWER TIME DELAY RELAY (TDR)	AAM all
8232	HEATER SEQUENCER	05/08/10 kw
8246	TRANSFORMER 230V - 40VA	AAM all
8694	LIMIT CONTROL T'STAT- 170°	AAM all
129013	A COIL ASSEMBLY - 3 ROW 12 X 16	AAM 18
129012	A COIL ASSEMBLY - 3 ROW 14 X 16	AAM 24
129012+X	A COIL ASSEMBLY - 3 ROW 14 X 16	AAM 24+4190TXV

Continued on next page....

Parts List - Air Handlers

AAM (Continued)

Part #	Description	Unit
129012+B	A COIL ASSEMBLY - 3 ROW 14 X 16	AAM 24+4044TXV
129012+4	A COIL ASSEMBLY - 3 ROW 14 X 16	AAM 24+4200TXV
129009	A COIL ASSEMBLY - 3 ROW 16 X 16	AAM 30
129014	A COIL ASSEMBLY - 3 ROW 18 X 16	AAM 36
129015	A COIL ASSEMBLY - 3 ROW 20 X 16	AAM 42
129016	A COIL ASSEMBLY - 3 ROW 22 X 16	AAM 48
129016+X	A COIL ASSEMBLY - 3 ROW 22 X 16	AAM 48+4195TXV
129016+B	A COIL ASSEMBLY - 3 ROW 22 X 16	AAM 48+4050TXV
129016+4	A COIL ASSEMBLY - 3 ROW 22 X 16	AAM 48+4202TXV
129011	A COIL ASSEMBLY - 3 ROW 24 X 16	AAM 60
129031	A COIL ASSEMBLY - 4 ROW 14 X 16	AAM 19,25
129031+X	A COIL ASSEMBLY - 4 ROW 14 X 16	AAM 19,25
129031+B	A COIL ASSEMBLY - 4 ROW 14 X 16	AAM 19,25
129031+4	A COIL ASSEMBLY - 4 ROW 14 X 16	AAM 19,25
129033	A COIL ASSEMBLY - 4 ROW 20 X 16	AAM 31,37
129035	A COIL ASSEMBLY - 4 ROW 24 X 16	AAM 43,49
129035+X	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4195TXV
129035+B	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4150TXV
129035+4	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4202TXV
129028	A COIL ASSEMBLY - 4 ROW 26 X 16	AAM 61
129028+X	A COIL ASSEMBLY - 4 ROW 26 X 16	AAM 61 +4195TXV
129028+B	A COIL ASSEMBLY - 4 ROW 26 X 16	AAM 61 +4050TXV
129028+4	A COIL ASSEMBLY - 4 ROW 26 X 16	AAM 61 +4202TXV
3999	PISTON .055	AAM 18
4000	PISTON .059	AAM 24/25
3987	PISTON .068	AAM 30
4001	PISTON .074	AAM 36/37/38
3990	PISTON .080	AAM 42
3991	PISTON .084	AAM 48
3998	PISTON .092	AAM 60
4190	1.5 - 3.5T R22 TXV KIT 20% B- PORT (X2-3)	AAM 18thru 37
4195	4-5-6T R22 TXV KIT 20% B- PORT (X2-5)	AAM 42thru 61
4200	1.5 - 3.5 T R-410A TXV KIT N/B (X5-3)	AAM 18thru 37
4202	4-5-6 T R-410A TXV KIT N/B (X5-5)	AAM 42thru 61
126679	TOP ASSEMBLY	AAM 18...37
126655	TOP ASSEMBLY	AAM 42...61
126693	TOP DOOR ASSEMBLY	AAM 18thru 25
126694	TOP DOOR ASSEMBLY	AAM 30thru 37
126663	TOP DOOR ASSEMBLY	AAM 42thru 61
126717	COIL DOOR ASSEMBLY -LEFT	AAM 18,19
126718	COIL DOOR ASSEMBLY -RIGHT	AAM 18,19
126719	COIL DOOR ASSEMBLY -LEFT	AAM 24,25

Continued on next page....

Parts List - Air Handlers

AAM (Continued)

Part #	Description	Unit
126720	COIL DOOR ASSEMBLY -RIGHT	AAM 24,25
126715	COIL DOOR ASSEMBLY -LEFT	AAM 30,31
126716	COIL DOOR ASSEMBLY -RIGHT	AAM 30,31
126713	COIL DOOR ASSEMBLY -LEFT	AAM 36,37
126714	COIL DOOR ASSEMBLY -RIGHT	AAM 36,37
126669	COIL DOOR ASSEMBLY -LEFT	AAM 42,43
126670	COIL DOOR ASSEMBLY -RIGHT	AAM 42,43
126667	COIL DOOR ASSEMBLY -LEFT	AAM 48,49
126668	COIL DOOR ASSEMBLY -RIGHT	AAM 48,49
126664	COIL DOOR ASSEMBLY -LEFT	AAM 60,61
126666	COIL DOOR ASSEMBLY -RIGHT	AAM 60,61
126695	FILTER DOOR	AAM 18thru 37
126665	FILTER DOOR	AAM 42 thru 61
126599	DOWNFLOW COIL KIT	AAM 18thru 61
8591	A - COIL DRAIN PAN-PLASTIC	AAM 18thru 37
126676	HORIZONTAL DRAIN PAN	AAM 18thru 37
8593	A – COIL DRAIN PAN-PLASTIC	AAM 42thru 61
126652	HORIZONTAL DRAIN PAN	AAM 42 & 48
126793	HORIZONTAL DRAIN PAN LRG	AAM 43,49,60 & 61
127028	WIRING HARNESS-FEMALE SOCKET	All AAM
127030	WIRING HARNESS-2 WIRE MALE PLUG	AAM No Heat Kit
E3L00	00KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3L12	12KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3L15	15KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3L18	18KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3L24	24KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3L30	30KW 3-PHASE CIRCUIT BREAKER	AAM 42thru 61
E3S00	00KW 3-PHASE CIRCUIT BREAKER	AAM 18thru 37
E3S12	12KW 3-PHASE CIRCUIT BREAKER	AAM 18thru 37
E3S15	15KW 3-PHASE CIRCUIT BREAKER	AAM 18thru 37
ECL00	00KW CIRCUIT BREAKER	AAM 42thru 61
ECL05	05KW CIRCUIT BREAKER	AAM 42thru 61
ECL10	10KW CIRCUIT BREAKER	AAM 42thru 61
ECL15	15KW CIRCUIT BREAKER	AAM 42thru 61
ECL20	20KW CIRCUIT BREAKER	AAM 42thru 61
ECL25	25KW CIRCUIT BREAKER	AAM 42thru 61
ECL30	30KW CIRCUIT BREAKER	AAM 42thru 61
ECS00	00KW CIRCUIT BREAKER	AAM 18thru 37
ECS03	03KW CIRCUIT BREAKER	AAM 18thru 37
ECS05	05KW CIRCUIT BREAKER	AAM 18thru 37
ECS08	08KW CIRCUIT BREAKER	AAM 18thru 37
ECS10	10KW CIRCUIT BREAKER	AAM 18thru 37

Continued on next page....

Parts List - Air Handlers

AAM (Continued)

Part #	Description	Unit
ECS15	15KW CIRCUIT BREAKER	AAM 18thru 37
ETL00	00KW TERMINAL BLOCK	AAM 42thru 61
ETL05	05KW TERMINAL BLOCK	AAM 42thru 61
ETL10	10KW TERMINAL BLOCK	AAM 42thru 61
ETS00	00KW TERMINAL BLOCK	AAM 18thru 37
ETS03	03KW TERMINAL BLOCK	AAM 18thru 37
ETS05	05KW TERMINAL BLOCK	AAM 18thru 37
ETS10	10KW TERMINAL BLOCK	AAM 18thru 37

AAW

Part #	Description	Unit
Z46 PAN	DRAIN PAN	AAW all
8201	9 X 6 BLOWER HOUSING & WHEEL	AAW 18/24
8200	10 X 8 BLOWER HOUSING & WHEEL	AAW 30/36
8098	MOTOR - 230 V - 1/5 HP	AAW 18/24
8099	MOTOR - 230 V - 1/3 HP	AAW 30/36
8116	CAPACITOR - 5 MFD / 370V	AAW 18/24
8117	CAPACITOR - 7.5 MFD / 370V	AAW 30/36
131022	BLOWER ASSEMBLY	AAW 18/24
131023	BLOWER ASSEMBLY	AAW 30/36
8722	BLOWER CIRCUIT BOARD (TDR)	AAW all
8231	BLOWER TIME DELAY RELAY	AAW all
8232	HEATER SEQUENCER	AAW all
121631	HEATER PLATE ASSEMBLY - 03 KW	AAW 03 KW
121632	HEATER PLATE ASSEMBLY - 04 KW	AAW 04 KW
121633	HEATER PLATE ASSEMBLY - 05 KW	AAW 05 KW
121634	HEATER PLATE ASSEMBLY - 06 KW	AAW 06 KW
121635	HEATER PLATE ASSEMBLY - 08 KW	AAW 08 KW
121636	HEATER PLATE ASSEMBLY - 10 KW	AAW 10 KW
8246	TRANSFORMER 230 V - 40 VA	AAW all
8271	BREAKER - 15 A - 2 POLE (CB)	FCS00 KW
8273	BREAKER - 30 A - 2 POLE (CB)	FCS05 KW
8275	BREAKER - 50 A - 2 POLE (CB)	FCS08 KW
8276	BREAKER - 60 A - 2 POLE (CB)	FCS10 KW
8515	LIMIT CONTROL 150°	FCS all KW
121584	UPPER DOOR ASSEMBLY	AAW 18/24
121587	UPPER DOOR ASSEMBLY	AAW 30/36
121595	LOWER SOLID PANEL	AAW 18/24
121596	LOWER SOLID PANEL	AAW 30/36
121085	LOWER RETURN PANEL	AAW 18/24

Continued on next page....

Parts List - Air Handlers

AAW (Continued)

Part #	Description	Unit
121088	LOWER RETURN PANEL	AAW 30/36
121075	BOTTOM BRACE	AAW18/36
121076	BOTTOM RETURN BLOCK-OFF	AAW18/24
121077	BOTTOM RETURN BLOCK-OFF	AAW30/36
129054	REFRIGERANT COIL ASSY - 3 ROW	AAW 18
129054+X	REFRIGERANT COIL ASSY - 3 ROW-WITH R22 TXV	AAW 18
129054+4	REFRIGERANT COIL ASSY - 3 ROW-WITH R410A TXV	AAW 18
129040	REFRIGERANT COIL ASSY - 4 ROW	AAW 24
129040+X	REFRIGERANT COIL ASSY - 4 ROW-WITH R22 TXV	AAW 24
129040+4	REFRIGERANT COIL ASSY - 4 ROW-WITH R410A TXV	AAW 24
129049	REFRIGERANT COIL ASSY - 4 ROW	AAW 30/36
129049+X	REFRIGERANT COIL ASSY - 4 ROW-WITH R22 TXV	AAW 30/36
129049+4	REFRIGERANT COIL ASSY - 4 ROW-WITH R410A TXV	AAW 30/36
4190	1.5 - 3.5T R22 TXV KIT 20% BLEED PORT (X2-3)	AAW 18/36
4044	1.5 - 3.5 T R22 TXV KIT N/B (X3-3)	AAW 18/36
4200	1.5 - 3.5 T R-410A TXV KIT N/B (X5-3)	AAW 18/36
3999	PISTON .055	AAW 18
4000	PISTON .059	AAW 24
3987	PISTON .068	AAW 30
4001	PISTON .074	AAW 36
FCS00	00KW CIRCUIT BREAKER	AAW all
FCS03	03KW CIRCUIT BREAKER	AAW all
FCS05	05KW CIRCUIT BREAKER	AAW all
FCS08	08KW CIRCUIT BREAKER	AAW all
FCS10	10KW CIRCUIT BREAKER	AAW all
FTS00	00KW TERMINAL BLOCK	AAW all
FTS03	03KW TERMINAL BLOCK	AAW all
FTS05	05KW TERMINAL BLOCK	AAW all
FTS08	08KW TERMINAL BLOCK	AAW all
FTS10	10KW TERMINAL BLOCK	AAW all
WAD-7	WAD-7(S/L) WALL ACCESS DOOR (FITS AAW 18/24, AEW 18/24)	AAW all
WAD-8	WAD-8(S/L) WALL ACCESS DOOR (FITS AAW 30/36, AEW 30/36)	AAW all

Parts List - Air Handlers

ABL

Part #	Description	Unit
110002	BLOWER ASSEMBLY	ABLS
110003	BLOWER ASSEMBLY	ABLM
110001	BLOWER ASSEMBLY	ABLL
8201	9 X 6 BLOWER HOUSING & WHEEL	ABLS
8200	10 X 8 BLOWER HOUSING & WHEEL	ABLM
8527	12 X 9 BLOWER HOUSING & WHEEL	ABLL
8094	MOTOR - 120V - 1/5 HP	ABLS
8095	MOTOR - 120V - 1/3 HP	ABLM
8537	MOTOR - 120V - 3/4 HP	ABLL
8532	MOTOR MOUNT BAND - 1EA.	ABLL
8533	MOTOR MOUNT LEG - 3EA.	ABLL
8115	CAPACITOR - 10 MFD / 370V	ABLS, ABLM
8530	CAPACITOR - 15 MFD / 370V	ABLL
8432	TERMINAL BLOCK-2 POLE	ABLS, ABLM, ABLL
8517	TERMINAL BLOCK-1 POLE	ABLS, ABLM, ABLL
8518	CIRCUIT BREAKER-1 POLE-15 AMP	ABLS, ABLM, ABLL
8719	HYDRO MICRO PROCESSOR BOARD	ABLS, ABLM, ABLL
8231	BLOWER TIME DELAY RELAY (TDR)	ABLS, ABLM, ABLL
3925	CIRCULATOR PUMP WITH CHECK VALVE	ABLS, ABLM, ABLL
8231	PUMP TIME DELAY RELAY (TDR)	ABLS, ABLM, ABLL
8545	HYDRONIC FREEZE THERMOSTAT	ABLS, ABLM, ABLL
8567	PUMP REPLACEMENT CARTRIDGE	ABLS, ABLM, ABLL
8247	TRANSFORMER 120V - 40VA	ABLS, ABLM, ABLL
126707	TOP ASSEMBLY	ABLS, ABLM
126702	TOP ASSEMBLY	ABLL
126742	TOP DOOR ASSEMBLY	ABLS, ABLM
126663	TOP DOOR ASSEMBLY	ABLL
126695	FILTER DOOR	ABLS, ABLM
126665	FILTER DOOR	ABLL
127028	WIRING HARNESS-FEMALE SOCKET	ABLS, ABLM, ABLL
127030	WIRING HARNESS-MALE PLUG	ABLS, ABLM, ABLL

Parts List - Air Handlers

ABM

Part #	Description	Unit
110004	BLOWER ASSEMBLY	ABM 18,19,24,25
110005	BLOWER ASSEMBLY	ABM 30,31,36,37
110006	BLOWER ASSEMBLY	ABM 42 thru 61
8201	9 X 6 BLOWER HOUSING & WHEEL	ABM 18,19,24,25
8200	10 X 8 BLOWER HOUSING & WHEEL	ABM 30,31,36,37
8527	12 X 9 BLOWER HOUSING & WHEEL	ABM 42 thru 61
8094	MOTOR - 120V - 1/5 HP	ABM 18,19,24,25
8095	MOTOR - 120V - 1/3 HP	ABM 30,31,36,37
8537	MOTOR - 120V - 3/4 HP	ABM 42 thru 61
8532	MOTOR MOUNT BAND - 1EA.	ABM 42 thru 61
8533	MOTOR MOUNT LEG - 3EA.	ABM 42 thru 61
8115	CAPACITOR - 10 MFD / 370V	ABM 18 thru 37
8530	CAPACITOR - 15 MFD / 370V	ABM 42 thru 61
8432	TERMINAL BLOCK-2 POLE	ABM all
8517	TERMINAL BLOCK-1 POLE	ABM all
8518	CIRCUIT BREAKER-1 POLE-15 AMP	ABM all
8719	HYDRO MICRO PROCESSOR BOARD	ABM all
8231	BLOWER TIME DELAY RELAY (TDR)	ABM all
3925	CIRCULATOR PUMP WITH CHECK VALVE	ABM all
8231	PUMP TIME DELAY RELAY (TDR)	ABM all
8230	AUXILIARY RELAY	All wo/pump
8545	HYDRONIC FREEZE THERMOSTAT	ABM all
8567	PUMP REPLACEMENT CARTRIDGE	ABM all
8247	TRANSFORMER 120V - 40VA	ABM all
129087	A COIL ASSEMBLY - 3 ROW 12 X 16	ABM 18
129088	A COIL ASSEMBLY - 3 ROW 14 X 16	ABM 24
129089	A COIL ASSEMBLY - 3 ROW 16 X 16	ABM 30
129090	A COIL ASSEMBLY - 3 ROW 18 X 16	ABM 36
129091	A COIL ASSEMBLY - 3 ROW 20 X 16	ABM 42
129092	A COIL ASSEMBLY - 3 ROW 22 X 16	ABM 48
129093	A COIL ASSEMBLY - 3 ROW 24 X 16	ABM 60
129032	A COIL ASSEMBLY - 4 ROW 14 X 16	ABM 19,25
129034	A COIL ASSEMBLY - 4 ROW 20 X 16	ABM 31,37
129036	A COIL ASSEMBLY - 4 ROW 24 X 16	ABM 43,49
129094	A COIL ASSEMBLY - 4 ROW 26 X 16	ABM 61
129037	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	ABM18-37 W*2SP
129038	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	ABM18-37 W*3SP
129039	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	ABM30-37 W*4SP
129021	HYDRONIC COIL ASSEMBLY W/O PUMP 2 ROW	ABM18-37 W*2SL
129022	HYDRONIC COIL ASSEMBLY W/O PUMP 3 ROW	ABM18-37 W*3SL
129023	HYDRONIC COIL ASSEMBLY W/O PUMP 4 ROW	ABM30-37 W*4SL

Continued on next page....

Parts List - Air Handlers

ABM (Continued)

Part #	Description	Unit
129017	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	ABM42-61 W*2LP
129018	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	ABM42-61 W*3LP
129019	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	ABM42-61 W*4LP
129024	HYDRONIC COIL ASSEMBLY W/O PUMP 2 ROW	ABM42-61 W*2LL
129025	HYDRONIC COIL ASSEMBLY W/O PUMP 3 ROW	ABM42-61 W*3LL
129026	HYDRONIC COIL ASSEMBLY W/O PUMP 4 ROW	ABM42-61 W*4LL
3999	PISTON - .055	ABM 18,19
4000	PISTON - .059	ABM 24/25
3987	PISTON - .068	ABM 30/31
4001	PISTON - .074	ABM 36/37
3990	PISTON - .080	ABM 42/43
3991	PISTON - .084	ABM 48/49
3998	PISTON - .092	ABM 60/61
4044	1.5 - 3.5T R22 TXV KIT N/B (X3-3)	ABM 18 thru 37
4050	4-5-6T R22 TXV KIT N/B (X3-5)	ABM 42thru 61
4190	1.5 - 3.5 T R22 TXV KIT 20% B- PORT (X2-3)	ABM 18 thru 37
4195	4-5-6 T R22 TXV KIT 20% B- PORT (X2-5)	ABM 42thru 61
4200	1.5 - 3.5 T R-410A TXV KIT N/B (X5-3)	ABM 18 thru 37
4202	4-5-6 T R-410A TXV KIT N/B (X5-5)	ABM 42thru 61
126707	TOP ASSEMBLY	ABM 18 thru 37
126702	TOP ASSEMBLY	ABM 42thru 61
126693	TOP DOOR ASSEMBLY	ABM 18/19/24/25
126694	TOP DOOR ASSEMBLY	ABM 30/31/36/37
126663	TOP DOOR ASSEMBLY	ABM 42thru 61
126717	COIL DOOR ASSEMBLY -LEFT	ABM 18/19
126718	COIL DOOR ASSEMBLY -RIGHT	ABM 18/19
126719	COIL DOOR ASSEMBLY -LEFT	ABM 24/25
126720	COIL DOOR ASSEMBLY -RIGHT	ABM 24/25
126715	COIL DOOR ASSEMBLY -LEFT	ABM 30/31
126716	COIL DOOR ASSEMBLY -RIGHT	ABM 30/31
126713	COIL DOOR ASSEMBLY -LEFT	ABM 36/37
126714	COIL DOOR ASSEMBLY -RIGHT	ABM 36/37
126669	COIL DOOR ASSEMBLY -LEFT	ABM 42/43
126670	COIL DOOR ASSEMBLY -RIGHT	ABM 42/43
126667	COIL DOOR ASSEMBLY -LEFT	ABM 48/49
126668	COIL DOOR ASSEMBLY -RIGHT	ABM 48/49
126664	COIL DOOR ASSEMBLY -LEFT	ABM 60/61
126666	COIL DOOR ASSEMBLY -RIGHT	ABM 60/61
126695	FILTER DOOR	ABM 18 thru 37
126665	FILTER DOOR	ABM 42 thru 61
126099	DOWNFLOW COIL KIT	ABM 18 thru 61
8591	A - COIL DRAIN PAN-PLASTIC	ABM 18 thru 37

Continued on next page....

Parts List - Air Handlers

ABM (Continued)

Part #	Description	Unit
126676	HORIZONTAL DRAIN PAN	ABM 18 thru 37
8593	A – COIL DRAIN PAN-PLASTIC	ABM 42 thru 61
126652	HORIZONTAL DRAIN PAN	ABM 42 thru 61
127028	WIRING HARNESS-FEMALE SOCKET	All ABM
127030	WIRING HARNESS-2 WIRE MALE PLUG	All ABM No Heat Kit
129095	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	WC2SR
129096	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	WC3SR
129097	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	WC4SR
129098	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	WC2LR
129099	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	WC3LR
129100	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	WC4LR
8699	CIRCULATOR PUMP 009-HS6-1IFC	WC**R
8118	CAPACITOR – 14MFD / 250 VOLT	WC**R
WC2LL	2 ROW CIRCUIT BREAKER LESS PUMP	ABM 42 thru 61
WC2LP	2 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 42 thru 61
WC2LR	2 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 42 thru 61
WC2SL	2 ROW CIRCUIT BREAKER LESS PUMP	ABM 18 thru 37
WC2SP	2 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 18 thru 37
WC2SR	2 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 18 thru 37
WC3LL	3 ROW CIRCUIT BREAKER LESS PUMP	ABM 42 thru 61
WC3LP	3 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 42 thru 61
WC3LR	3 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 42 thru 61
WC3SL	3 ROW CIRCUIT BREAKER LESS PUMP	ABM 18 thru 37
WC3SP	3 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 18 thru 37
WC3SR	3 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 18 thru 37
WC4LL	4 ROW CIRCUIT BREAKER LESS PUMP	ABM 42 thru 61
WC4LP	4 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 42 thru 61
WC4LR	4 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 42 thru 61
WC4SL	4 ROW CIRCUIT BREAKER LESS PUMP	ABM 18 thru 37
WC4SP	4 ROW CIRCUIT BREAKER 1/40 HP PUMP	ABM 18 thru 37
WC4SR	4 ROW CIRCUIT BREAKER 1/8 HP PUMP	ABM 18 thru 37
WT2LL	2 ROW TERMINAL BLOCK LESS PUMP	ABM 42 thru 61
WT2LP	2 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 42 thru 61
WT2SL	2 ROW TERMINAL BLOCK LESS PUMP	ABM 18 thru 37
WT2SP	2 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 18 thru 37
WT3LL	3 ROW TERMINAL BLOCK LESS PUMP	ABM 42 thru 61
WT3LP	3 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 42 thru 61
WT3SL	3 ROW TERMINAL BLOCK LESS PUMP	ABM 18 thru 37
WT3SP	3 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 18 thru 37
WT4LL	4 ROW TERMINAL BLOCK LESS PUMP	ABM 42 thru 61
WT4LP	4 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 42 thru 61
WT4SL	4 ROW TERMINAL BLOCK LESS PUMP	ABM 18 thru 37
WT4SP	4 ROW TERMINAL BLOCK 1/40 HP PUMP	ABM 18 thru 37

Parts List - Air Handlers

ABW

Part #	Description	Unit
Z46 PAN	DRAIN PAN	ABW all
8201	9 X 6 BLOWER HOUSING & WHEEL	ABW 18/24
8200	10 X 8 BLOWER HOUSING & WHEEL	ABW 30/36
8094	MOTOR - 120 V -1/5 HP	ABW 18/24
8095	MOTOR - 120 V -1/3 HP	ABW 30/36
8115	CAPACITOR - 10 MFD / 370V	ABW all
131024	BLOWER ASSEMBLY	ABW18/24
131025	BLOWER ASSEMBLY	ABW30/36
3925	CIRCULATOR PUMP W/ CK VALVE-120V	ABW all
8567	REPLACEMENT PUMP CARTRIDGE	ABW all
8518	CIRCUIT BREAKER-1 POLE-15 AMP	ABW all
8432	TERMINAL BLOCK	ABW all
8230	AUXILIARY RELAY	ABW all (w/o TDR)
8719	HYDRO MICRO PROCESSOR BOARD	ABW all
8231	BLOWER TIME DELAY RELAY	ABW all
8231	PUMP TIME DELAY RELAY	ABW all
8545	HYDRONIC FREEZE THERMOSTAT	ABW all
8564	PUMP RECYCLE TIMER	ABW w/ pump only
8247	TRANSFORMER 120V-40VA	ABW all
121607	UPPER DOOR ASSEMBLY	ABW 30/36
121619	UPPER DOOR ASSEMBLY	ABW 18/24
121595	LOWER SOLID PANEL	ABW 18/24
121596	LOWER SOLID PANEL	ABW 30/36
121085	LOWER RETURN PANEL	ABW 18/24
121088	LOWER RETURN PANEL	ABW 30/36
121075	BOTTOM BRACE	ABW All
121077	BOTTOM RETURN BLOCK-OFF	ABW 18/36
129060	WATER COIL ASSY W/ PUMP - 2 ROW	ABW all
129055	WATER COIL ASSY W/ PUMP - 3 ROW	ABW all
129058	WATER COIL ASSY W / PUMP - 4 ROW	ABW 30/36
129059	WATER COIL ASSY W/O PUMP - 2 ROW	ABW all
129053	WATER COIL ASSY W/O PUMP - 3 ROW	ABW all
129057	WATER COIL ASSY W/O PUMP - 4 ROW	ABW 30/36
129061	REFRIGERANT COIL ASSY - 3 ROW	ABW 18
129061+4	REFRIGERANT COIL ASSY - 3 ROW W/ R410A TXV	ABW 18
129041	REFRIGERANT COIL ASSY - 4 ROW	ABW 24
129041+4	REFRIGERANT COIL ASSY - 4 ROW W/ R410A TXV	ABW 24
129062	REFRIGERANT COIL ASSY - 4 ROW	ABW 30/36
129062+X	REFRIGERANT COIL ASSY - 4 ROW W/R22 TXV	ABW 30/36
129062+4	REFRIGERANT COIL ASSY - 4 ROW W/R410A TXV	ABW 30/36
4190	1.5 - 3.5T R22 TXV KIT 20% BLEED PORT (X2-3)	ABW 18/36

Continued on next page....

Parts List - Air Handlers

ABW (Continued)

Part #	Description	Unit
4044	1.5 - 3.5 T R22 TXV KIT N/B (X3-3)	ABW 18/36
4200	1.5 - 3.5 T R-410A TXV KIT N/B (X5-3)	ABW 18/36
3999	055 PISTON	ABW18
4000	059 PISTON	ABW24
3987	068 PISTON	ABW30
4001	074 PISTON	ABW36
UC2SL	2 ROW CIRCUIT BREAKER LESS PUMP	ABW 18/36
UC2SP	2 ROW CIRCUIT BREAKER WITH PUMP	ABW 18/36
UC3SL	3 ROW CIRCUIT BREAKER LESS PUMP	ABW 18/36
UC3SP	3 ROW CIRCUIT BREAKER WITH PUMP	ABW 18/36
UC4SL	4 ROW CIRCUIT BREAKER LESS PUMP	ABW 18/36
UC4SP	4 ROW CIRCUIT BREAKER WITH PUMP	ABW 18/36
UT2SL	2 ROW TERMINAL BLOCK LESS PUMP	ABW 18/36
UT2SP	2 ROW TERMINAL BLOCK WITH PUMP	ABW 18/36
UT3SL	3 ROW TERMINAL BLOCK LESS PUMP	ABW 18/36
UT3SP	3 ROW TERMINAL BLOCK WITH PUMP	ABW 18/36
UT4SL	4 ROW TERMINAL BLOCKR LESS PUMP	ABW 18/36
UT4SP	4 ROW TERMINAL BLOCK WITH PUMP	ABW 18/36
WAD-9	WAD-9(S/L) WALL ACCESS DOOR (ABW, AFW SERIES)	
WAD-10	WAD-10(S/L) WALL ACCESS DOOR (ABW, AFW SERIES)	

Parts List - Air Handlers

AEC

Part #	Description	Unit
129111	COIL ASSY WITH DRAIN PAN	AEC 18/24
129112	COIL ASSY WITH DRAIN PAN	AEC 30/36
129113	COIL ASSY WITH DRAIN PAN	AEC 37
131014	COIL ASSY W/O DRAIN PAN - 2 ROW	AEC 18/24
131015	COIL ASSY W/O DRAIN PAN - 3 ROW	AEC 30/36
131016	COIL ASSY W/O DRAIN PAN - 4 ROW	AEC 37
130059	DRAIN PAN ASSY - 2&3 ROW	AEC 18 - 36
130004	DRAIN PAN ASSY - 4 ROW	AEC 37
131028	950 CFM, 1/3 HP, X-13, BLOWER MOTOR ASSY	AEC 18/24
131029	1300 CFM 1/3 HP BLOWER MOTOR ASSY	AEC 30 - 37
130555	TOP AND BOTTOM DOOR ASSY - BREAKER	ALL MODELS
8550	BLOWER HOUSING & WHEEL ASSY 10X4	AEC 18/24
8727	BLOWER HOUSING & WHEEL ASSY 10X6	AEC 30 - 37
8644	X-13 BLOWER MOTOR - 1/3 HP, 240 V	AEC 18/24
8646	X-13 BLOWER MOTOR - 1/2 HP, 240 V	AEC 30 - 37
8116	CAPACITOR - 5 μ F/340 V	AEC 18/24
8117	CAPACITOR - 7.5 μ F/340 V	AEC 30-37
8271	CIRCUIT BREAKER - 15 A - 2 POLE	00 KW
8272	CIRCUIT BREAKER - 20 A - 2 POLE	03 KW
8273	CIRCUIT BREAKER - 30 A - 2 POLE	05 KW
8275	CIRCUIT BREAKER - 50 A - 2 POLE	08 KW
8276	CIRCUIT BREAKER - 60 A - 2 POLE	10 KW
8558	CIRCUIT BREAKER - 25 A - 2 POLE	04 KW
8559	CIRCUIT BREAKER - 35 A - 2 POLE	06 KW
8232	HEAT SEQUENCER	ALL MODELS
8722	MICRO PROCESSOR CONTROL BOARD	ALL MODELS
8694	LIMIT CONTROL THERMOSTAT - 170°F	ALL MODELS
8246	TRANSFORMER 230V - 40VA	ALL MODELS
8713	HEATER ELEMENT 3 KW	ALL MODELS
8714	HEATER ELEMENT 4 KW	ALL MODELS
8715	HEATER ELEMENT 5 KW	ALL MODELS
4200	NON BLEED, R-410A TXV	ALL MODELS
3999	PISTON, 0.055	
4000	PISTON, 0.059	
3987	PISTON, 0.068	
4001	PISTON, 0.074	

Parts List - Air Handlers

AEL

Part #	Description	Unit
110010	BLOWER ASSEMBLY	AELS 600-800 CFM
110011	BLOWER ASSEMBLY	AELM 1000-1200 CFM
110012	BLOWER ASSEMBLY	AELL 1400-2000 CFM
8201	9 X 6 BLOWER HOUSING & WHEEL	AELS 600-800 CFM
8200	10 X 8 BLOWER HOUSING & WHEEL	AELM 1000-1200 CFM
8527	12 X 9 BLOWER HOUSING & WHEEL	AELL 1400-2000 CFM
8644	MOTOR - 230V - 1/3 HP	AELS 600-800 CFM
8646	MOTOR - 230V - 1/2 HP	AELM 1000-1200 CFM
8648	MOTOR - 230V - 1 HP	AELL 1400-2000 CFM
8532	MOTOR MOUNT BAND - 1EA.	AELL 1400-2000 CFM
8533	MOTOR MOUNT LEG - 3EA.	AELL 1400-2000 CFM
8271	BREAKER - 15A - 2 POLE (8271SD)	Kit ECS 00
8272	BREAKER -20A - 2 POLE (8272SD)	Kit ECS 03
8558	BREAKER -25A - 2 POLE (8558SD)	Kit ECL 03
8273	BREAKER -30A - 2 POLE(8273SD)	Kit ECS 05
8559	BREAKER -35A - 2 POLE(8559SD)	Kit ECL 06
8275	BREAKER -50A - 2 POLE(8275SD)	Kit ECS 08
8276	BREAKER -60A - 2 POLE(8276SD)	Kit ECS/L 10
8273SD & 8276SD	(2)BREAKERS(30A+60A)	Kit ECL 15
8275SD & 8276SD	(2)BREAKERS(50A+60A)	Kit ECL 20
8273SD, 8276SD & 8276SD	(3)BREAKERS(30A+60A+60A)	Kit ECL 25
8275SD, 8276SD & 8276SD	(3)BREAKERS(50A+60A+60A)	Kit ECL 30
8657	4 POLE SINGLE POINT CONNECTOR	2 Circuit Breaker (15-20kw)
8658	6 POLE SINGLE POINT CONNECTOR	3 Circuit Breaker (25-30kw)
8432	TERMINAL BLOCK-2 POLE-10KW OR LESS	AEL all
8231	BLOWER TIME DELAY RELAY (TDR)	AEL all
8232	HEATER SEQUENCER	05/08/10 kw
8232	HEATER SEQUENCER - 2EA.	15/20 kw
8232	HEATER SEQUENCER - 3EA.	25/30 kw
8246	TRANSFORMER 230V - 40VA	AEL all
8694	LIMIT CONTROL T'STAT- 170°	AEL all
126679	TOP ASSEMBLY	AELS, AELM
126655	TOP ASSEMBLY	AELL
126693	TOP DOOR ASSEMBLY	AELS
126755	TOP DOOR ASSEMBLY	AELM

Continued on next page....

Parts List - Air Handlers

AEL (Continued)

Part #	Description	Unit
126745	TOP DOOR ASSEMBLY	AELL
126695	FILTER DOOR	AELS, AELM
126665	FILTER DOOR	AELL
127028	WIRING HARNESS-FEMALE SOCKET	AEL All
127030	WIRING HARNESS-2 WIRE MALE PLUG	AEL No Heat Kit
E3L00	00KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3L12	12KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3L15	15KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3L18	18KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3L24	24KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3L30	30KW 3-PHASE CIRCUIT BREAKER	AELL 42thru 61
E3S00	00KW 3-PHASE CIRCUIT BREAKER	AELS/M 18thru 37
E3S12	12KW 3-PHASE CIRCUIT BREAKER	AELS/M 18thru 37
E3S15	15KW 3-PHASE CIRCUIT BREAKER	AELS/M 18thru 37
ECL00	00KW CIRCUIT BREAKER	AELL 42thru 61
ECL05	05KW CIRCUIT BREAKER	AELL 42thru 61
ECL10	10KW CIRCUIT BREAKER	AELL 42thru 61
ECL15	15KW CIRCUIT BREAKER	AELL 42thru 61
ECL20	20KW CIRCUIT BREAKER	AELL 42thru 61
ECL25	25KW CIRCUIT BREAKER	AELL 42thru 61
ECL30	30KW CIRCUIT BREAKER	AELL 42thru 61
ECS00	00KW CIRCUIT BREAKER	AELS/M 18thru 37
ECS03	03KW CIRCUIT BREAKER	AELS/M 18thru 37
ECS05	05KW CIRCUIT BREAKER	AELS/M 18thru 37
ECS08	08KW CIRCUIT BREAKER	AELS/M 18thru 37
ECS10	10KW CIRCUIT BREAKER	AELS/M 18thru 37
ECS15	15KW CIRCUIT BREAKER	AAM 18thru 37
ETL00	00KW TERMINAL BLOCK	AELL 42thru 61
ETL05	05KW TERMINAL BLOCK	AELL 42thru 61
ETL10	10KW TERMINAL BLOCK	AELL 42thru 61
ETS00	00KW TERMINAL BLOCK	AELS/M 18thru 37
ETS03	03KW TERMINAL BLOCK	AELS/M 18thru 37
ETS05	05KW TERMINAL BLOCK	AELS/M 18thru 37
ETS10	10KW TERMINAL BLOCK	AELS/M 18thru 37

Parts List - Air Handlers

AEM

Part #	Description	Unit
110010	BLOWER ASSEMBLY	AEM 18/19,24/25
110011	BLOWER ASSEMBLY	AEM 30/31,36/37
110012	BLOWER ASSEMBLY	AEM 42,43,48,49,60,61
8201	9 X 6 BLOWER HOUSING & WHEEL	AEM 18/19,24/25
8200	10 X 8 BLOWER HOUSING & WHEEL	AEM 30/31,36/37
8527	12 X 9 BLOWER HOUSING & WHEEL	AEM 42,43,48,49,60,61
8644	MOTOR - 230V - 1/3 HP	AEM 18/19,24/25
8646	MOTOR - 230V - 1/2 HP	AEM 30/31,36/37
8648	MOTOR - 230V - 1 HP	AEM 42,43,48,49,60,61
8532	MOTOR MOUNT BAND - 1EA.	AEM 18 thru 61
8563	MOTOR MOUNT LEG - 3EA.	AEM 8,19,24,25,30,31,36,37
8533	MOTOR MOUNT LEG - 3EA.	AEM 42,43,48,49,60,61
8271	BREAKER - 15A - 2 POLE-EA	Kit ECS 00
8272	BREAKER - 20A - 2 POLE-EA 8272SD	Kit ECS 03
8558	BREAKER - 25A - 2 POLE-EA 8558SD	Kit ECL 03
8273	BREAKER - 30A - 2 POLE-EA 8273SD	Kit ECS 05
8559	BREAKER - 35A - 2 POLE-EA 8559SD	Kit ECL 05
8275	BREAKER - 50A - 2 POLE-EA 8275SD	Kit ECS/L 08
8276	BREAKER - 60A - 2 POLE-EA 8276SD	Kit ECS/L 10
8273SD & 8276SD	(2)BREAKERS(30A+60A)	Kit ECL 15
8275SD & 8276SD	(2)BREAKERS(50A+60A)	Kit ECL 20
8273SD, 8276SD & 8276SD	(3)BREAKERS(30A+60A+60A)	Kit ECL 25
8275SD, 8276SD & 8276SD	(3)BREAKERS(50A+60A+60A)	Kit ECL 30
8657	4 POLE SINGLE POINT CONNECTOR	2 Circuit Breaker (15-20kw)
8658	6 POLE SINGLE POINT CONNECTOR	3 Circuit Breaker (25-30kw)
8432	TERMINAL BLOCK-2 POLE-10KW OR LESS	AEM all
8722	BLOWER CIRCUIT BOARD (TDR)	AEM all
8231	BLOWER TIME DELAY RELAY (TDR)	AEM all
8230	RELAY (2 SPEED)	AEM all
128058	2 SPEED RELAY KIT	AEM all
8232	HEATER SEQUENCER	05/08/10 kw
8246	TRANSFORMER 230V - 40VA	AEM all
8694	LIMIT CONTROL - 170°	AEM all
129013	A COIL ASSEMBLY - 3 ROW 12 X 16	AEM 18

Continued on next page....

Parts List - Air Handlers

AEM (Continued)

Part #	Description	Unit
129012	A COIL ASSEMBLY - 3 ROW 14 X 16	AEM 24
129012+X	A COIL ASSEMBLY - 3 ROW 14 X 16	AEM 24+4190TXV
129012+B	A COIL ASSEMBLY - 3 ROW 14 X 16	AEM 24+4044TXV
129012+4	A COIL ASSEMBLY - 3 ROW 14 X 16	AEM 24+4200TXV
129009	A COIL ASSEMBLY - 3 ROW 16 X 16	AEM 30
129014	A COIL ASSEMBLY - 3 ROW 18 X 16	AEM 36
129015	A COIL ASSEMBLY - 3 ROW 20 X 16	AEM 42
129016	A COIL ASSEMBLY - 3 ROW 22 X 16	AEM 48
129016+X	A COIL ASSEMBLY - 3 ROW 22 X 16	AEM 48+4195TXV
129016+B	A COIL ASSEMBLY - 3 ROW 22 X 16	AEM 48+4150TXV
129016+4	A COIL ASSEMBLY - 3 ROW 22 X 16	AEM 48+4202TXV
129011	A COIL ASSEMBLY - 3 ROW 24 X 16	AEM 60
129031	A COIL ASSEMBLY - 4 ROW 14 X 16	AEM 19, 25
129033	A COIL ASSEMBLY - 4 ROW 20 X 16	AEM 31, 37
129033+X	A COIL ASSEMBLY - 4 ROW 20 X 16	AEM 31, 37
129033+B	A COIL ASSEMBLY - 4 ROW 20 X 16	AEM 31, 37
129033+4	A COIL ASSEMBLY - 4 ROW 20 X 16	AEM 31, 37
129035	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49
129035+X	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4195TXV
129035+B	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4150TXV
129035+4	A COIL ASSEMBLY - 4 ROW 24 X 16	AEM 43, 49+4202TXV
129028	A COIL ASSEMBLY - 4 ROW 26 X 16	AEM 61
129028+X	A COIL ASSEMBLY - 4 ROW 26 X 16	AEM 61 +4195TXV
129028+B	A COIL ASSEMBLY - 4 ROW 26 X 16	AEM 61 +4050TXV
129028+4	A COIL ASSEMBLY - 4 ROW 26 X 16	AEM 61 +4202TXV
3999	PISTON .055	AEM 18
4000	PISTON .059	AEM 24/25
3987	PISTON .068	AEM 30
4001	PISTON .074	AEM 36/37/38
3990	PISTON .080	AEM 42
3991	PISTON .084	AEM 48
3998	PISTON .092	AEM 60
4044	1.5 - 3.5T R22 TXV KIT N/B (X3-3)	AEM 18thru 37
4050	4-5-6T R22 TXV KIT N/B (X3-5)	AEM 42thru 61
4190	1.5 -3.5-T R22 TXV KIT 20% B- PORT (X2-3)	AEM 18thru 37
4195	4-5-6T R22 TXV KIT 20% B- PORT (X2-5)	AEM 42thru 61
4200	1.5 - 3.5T R-410A TXV KIT N/B (X5-3)	AEM 18thru 37
4202	4-5-6T R-410A TXV KIT N/B (X5-5)	AEM 42thru 61
126679	TOP ASSEMBLY	AEM 18...37
126655	TOP ASSEMBLY	AEM 42...61
126693	TOP DOOR ASSEMBLY	AEM 18thru 25

Continued on next page...

Parts List - Air Handlers

AEM (Continued)

Part #	Description	Unit
126694	TOP DOOR ASSEMBLY	AEM 30thru 37
126663	TOP DOOR ASSEMBLY	AEM 42thru 61
126717	COIL DOOR ASSEMBLY -LEFT	AEM 18,19
126718	COIL DOOR ASSEMBLY -RIGHT	AEM 18,19
126719	COIL DOOR ASSEMBLY -LEFT	AEM 24,25
126720	COIL DOOR ASSEMBLY -RIGHT	AEM 24,25
126715	COIL DOOR ASSEMBLY -LEFT	AEM 30,31
126716	COIL DOOR ASSEMBLY -RIGHT	AEM 30,31
126713	COIL DOOR ASSEMBLY -LEFT	AEM 36,37
126714	COIL DOOR ASSEMBLY -RIGHT	AEM 36,37
126669	COIL DOOR ASSEMBLY -LEFT	AEM 42,43
126670	COIL DOOR ASSEMBLY -RIGHT	AEM 42,43
126667	COIL DOOR ASSEMBLY -LEFT	AEM 48,49
126668	COIL DOOR ASSEMBLY -RIGHT	AEM 48,49
126664	COIL DOOR ASSEMBLY -LEFT	AEM 60,61
126666	COIL DOOR ASSEMBLY -RIGHT	AEM 60,61
126695	FILTER DOOR	AEM 18thru 37
126665	FILTER DOOR	AEM 42 thru 61
126599	DOWNFLOW COIL KIT	AEM 18thru 61
8591	A - COIL DRAIN PAN-PLASTIC 19 ½"	AEM 18thru 37
126676	HORIZONTAL DRAIN PAN	AEM 18thru 37
8593	A – COIL DRAIN PAN-PLASTIC 23"	AEM 42thru 61
126652	HORIZONTAL DRAIN PAN	AEM 42 & 48
126793	HORIZONTAL DRAIN PAN – LRG	AEM 43, 49, 60 & 61
127028	WIRING HARNESS-FEMALE SOCKET	All AEM
127030	WIRING HARNESS-2 WIRE MALE PLUG	All AEM No Heat Kit
127038	WIRE HARNESS X13 MOTOR MAIN	All AEM
127041	WIRING HARNESS X13 SPEED TAP	All AEM Dual Speed
E3L00	00KW 3-PHASE CIRCUIT BREAKER	AEM 42thru 61
E3L12	12KW 3-PHASE CIRCUIT BREAKER	AEM 42thru 61
E3L15	15KW 3-PHASE CIRCUIT BREAKER	AEM 42thru 61
E3L18	18KW 3-PHASE CIRCUIT BREAKER	AEM 42thru 61
E3L24	24KW 3-PHASE CIRCUIT BREAKER	AFM 42thru 61
E3L30	30KW 3-PHASE CIRCUIT BREAKER	AEM 42thru 61
E3S00	00KW 3-PHASE CIRCUIT BREAKER	AEM 18thru 37
E3S12	12KW 3-PHASE CIRCUIT BREAKER	AEM 18thru 37
E3S15	15KW 3-PHASE CIRCUIT BREAKER	AEM 18thru 37
ECL00	00KW CIRCUIT BREAKER	AEM 42thru 61
ECL05	05KW CIRCUIT BREAKER	AEM 42thru 61
ECL10	10KW CIRCUIT BREAKER	AEM 42thru 61
ECL15	15KW CIRCUIT BREAKER	AEM 42thru 61

Continued on next page....

Parts List - Air Handlers

AEM (Continued)

Part #	Description	Unit
ECL20	20KW CIRCUIT BREAKER	AEM 42thru 61
ECL25	25KW CIRCUIT BREAKER	AEM 42thru 61
ECL30	30KW CIRCUIT BREAKER	AEM 42thru 61
ECS00	00KW CIRCUIT BREAKER	AEM 18thru 37
ECS03	03KW CIRCUIT BREAKER	AEM 18thru 37
ECS05	05KW CIRCUIT BREAKER	AEM 18thru 37
ECS08	08KW CIRCUIT BREAKER	AEM 18thru 37
ECS10	10KW CIRCUIT BREAKER	AEM 18thru 37
ECS15	15KW CIRCUIT BREAKER	AEM 18thru 37
ETL00	00KW TERMINAL BLOCK	AEM 42thru 61
ETL05	05KW TERMINAL BLOCK	AEM 42thru 61
ETL10	10KW TERMINAL BLOCK	AEM 42thru 61
ETS00	00KW TERMINAL BLOCK	AEM 18thru 37
ETS03	03KW TERMINAL BLOCK	AEM 18thru 37
ETS05	05KW TERMINAL BLOCK	AEM 18thru 37
ETS10	10KW TERMINAL BLOCK	AEM 18thru 37

AEW

Part #	Description	Unit
Z46 PAN	DRAIN PAN	AEW all
8201	9 X 6 BLOWER HOUSING & WHEEL	AEW 18/24
8200	10 X 8 BLOWER HOUSING & WHEEL	AEW 30/36
8644	MOTOR - 230 V - 1/3 HP X13	AEW 18/24
8646	MOTOR - 230 V - 1/2 HP X13	AEW 30/36
8532	MOTOR MOUNT BAND - 1 EA	AEW 18/36
8563	MOTOR MOUNT LEG - 3 EA	AEW 18/36
110019	BLOWER ASSEMBLY	AEW 18/24
110020	BLOWER ASSEMBLY	AEW 30/36
8722	BLOWER CIRCUIT BOARD (TDR)	AEW all
8231	BLOWER TIME DELAY RELAY	AEW all
8232	HEATER SEQUENCER	AEW all
121631	HEATER PLATE ASSEMBLY - 03 KW	AEW 03 KW
121632	HEATER PLATE ASSEMBLY - 04 KW	AEW 04 KW
121633	HEATER PLATE ASSEMBLY - 05 KW	AEW 05 KW
121634	HEATER PLATE ASSEMBLY - 06 KW	AEW 06 KW
121635	HEATER PLATE ASSEMBLY - 08 KW	AEW 08 KW
8246	TRANSFORMER 230 V - 40 VA	AEW all
8271	BREAKER - 15 A - 2 POLE (CB)	FCS00 KW
8273	BREAKER - 30 A - 2 POLE (CB)	FCS05 KW
8275	BREAKER - 50 A - 2 POLE (CB)	FCS08 KW
8276	BREAKER - 60 A - 2 POLE (CB)	FCS10 KW

Continued on next page....

Parts List - Air Handlers

AEW (Continued)

Part #	Description	Unit
8515	LIMIT CONTROL 150°	FCS all KW
121584	UPPER DOOR ASSEMBLY	AEW 18/24
121587	UPPER DOOR ASSEMBLY	AEW 30/36
121595	LOWER SOLID PANEL	AEW 18/24
121596	LOWER SOLID PANEL	AEW 30/36
121085	LOWER RETURN PANEL	AEW 18/24
121088	LOWER RETURN PANEL	AEW 30/36
121075	BOTTOM BRACE	AEW18/36
121076	BOTTOM RETURN BLOCK-OFF	AEW18/24
121077	BOTTOM RETURN BLOCK-OFF	AEW30/36
129054	REFRIGERANT COIL ASSY - 3 ROW	AEW 18
129054+X	REFRIGERANT COIL ASSY - 3 ROW-WITH R22 TXV	AEW 18
129054+4	REFRIGERANT COIL ASSY - 3 ROW-WITH R410A TXV	AEW 18
129040	REFRIGERANT COIL ASSY - 4 ROW	AEW 24
129040+X	REFRIGERANT COIL ASSY - 4 ROW-WITH R22 TXV	AEW 24
129040+4	REFRIGERANT COIL ASSY - 4 ROW-WITH R410A TXV	AEW 24
129049	REFRIGERANT COIL ASSY - 4 ROW	AEW 30/36
129049+X	REFRIGERANT COIL ASSY - 4 ROW-WITH R22 TXV	AEW 30/36
129049+4	REFRIGERANT COIL ASSY - 4 ROW-WITH R410A TXV	AEW 30/36
4190	TXV R22 NON-BLEED	AEW 18/36
4044	TXV R22 BLEED	AEW 18/36
4200	TXV R410A NON-BLEED	AEW 18/36
3999	PISTON .055	AEW 18
4000	PISTON .059	AEW 24
3987	PISTON .068	AEW 30
4001	PISTON .074	AEW 36
FCS00	00KW CIRCUIT BREAKER	AEW all
FCS03	03KW CIRCUIT BREAKER	AEW all
FCS05	05KW CIRCUIT BREAKER	AEW all
FCS08	08KW CIRCUIT BREAKER	AEW all
FCS10	10KW CIRCUIT BREAKER	AEW all
FTS00	00KW TERMINAL BLOCK	AEW all
FTS03	03KW TERMINAL BLOCK	AEW all
FTS05	05KW TERMINAL BLOCK	AEW all
FTS08	08KW TERMINAL BLOCK	AEW all
FTS10	10KW TERMINAL BLOCK	AEW all
WAD-7	WAD-7(S/L) WALL ACCESS DOOR (FITS AAW 18/24, AEW 18/24)	AAW all
WAD-8	WAD-8(S/L) WALL ACCESS DOOR (FITS AAW 30/36, AEW 30/36)	AAW all

Parts List - Air Handlers

AFL

Part #	Description	Unit
110013	BLOWER ASSEMBLY	AFLS
110014	BLOWER ASSEMBLY	AFLM
110015	BLOWER ASSEMBLY	AFL
8201	9 X 6 BLOWER HOUSING & WHEEL	AFLS
8200	10 X 8 BLOWER HOUSING & WHEEL	AFLM
8527	12 X 9 BLOWER HOUSING & WHEEL	AFL
8643	MOTOR - 120V - 1/3 HP	AFLS
8645	MOTOR - 120V - 1/2 HP	AFLM
8647	MOTOR - 120V - 1 HP	AFL
8532	MOTOR MOUNT BAND - 1EA.	AFL
8533	MOTOR MOUNT LEG - 3EA.	AFL
8432	TERMINAL BLOCK-2 POLE	AFLS, AFLM, AFL
8517	TERMINAL BLOCK-1 POLE	AFLS, AFLM, AFL
8518	CIRCUIT BREAKER-1 POLE-15 AMP	AFLS, AFLM, AFL
8719	HYDRO MICRO PROCESSOR BOARD	AFLS, AFLM, AFL
8231	BLOWER TIME DELAY RELAY (TDR)	AFLS, AFLM, AFL
3925	CIRCULATOR PUMP WITH CHECK VALVE	AFLS, AFLM, AFL
8231	PUMP TIME DELAY RELAY (TDR)	AFLS, AFLM, AFL
8545	HYDRONIC FREEZE THERMOSTAT	AFLS, AFLM, AFL
8567	PUMP REPLACEMENT CARTRIDGE	AFLS, AFLM, AFL
8247	TRANSFORMER 120V - 40VA	AFLS, AFLM, AFL
126707	TOP ASSEMBLY	AFLS, AFLM
126702	TOP ASSEMBLY	, AFL
126742	TOP DOOR ASSEMBLY	AFLS, AFLM
126663	TOP DOOR ASSEMBLY	AFL
126695	FILTER DOOR	AFLS, AFLM
126665	FILTER DOOR	AFL
127028	WIRING HARNESS-FEMALE SOCKET	AFLS, AFLM, AFL
127030	WIRING HARNESS-MALE PLUG	AFLS, AFLM, AFL

Parts List - Air Handlers

AFM

Part #	Description	Unit
110013	BLOWER ASSEMBLY	AFM 18,19,24,25
110014	BLOWER ASSEMBLY	AFM 30,31,36,37
110015	BLOWER ASSEMBLY	AFM 42 thru 61
8201	9 X 6 BLOWER HOUSING & WHEEL	AFM 18,19,24,25
8200	10 X 8 BLOWER HOUSING & WHEEL	AFM 30,31,36,37
8527	12 X 9 BLOWER HOUSING & WHEEL	AFM 42 thru 61
8643	MOTOR - 120V - 1/3 HPX13	AFM 18,19,24,25
8645	MOTOR - 120V - 1/2 HPX13	AFM 30,31,36,37
8647	MOTOR - 120V - 1 HPX13	AFM 42 thru 61
8532	MOTOR MOUNT BAND - 1EA.	AFM 18 thru 61
8533	MOTOR MOUNT LEG - 3EA.	AFM 42 thru 61
8563	MOTOR MOUNT LEG - 3EA.	AFM 18 thru 37
8432	TERMINAL BLOCK-2 POLE	AFM all
8517	TERMINAL BLOCK-1 POLE	AFM all
8518	CIRCUIT BREAKER-1 POLE-15 AMP	AFM all
8719	HYDRO MICRO PROCESSOR BOARD X13	AFM all
8231	BLOWER TIME DELAY RELAY (TDR)	AFM all
128058	2 SPEED RELAY KIT	AFM all
3925	CIRCULATOR PUMP WITH CHECK VALVE	AFM all
8231	PUMP TIME DELAY RELAY (TDR)	AFM all
8545	HYDRONIC FREEZE THERMOSTAT	AFM all
8567	PUMP REPLACEMENT CARTRIDGE	AFM all
8247	TRANSFORMER 120V - 40VA	AFM all
129087	A COIL ASSEMBLY - 3 ROW 12 X 16	AFM 18
129088	A COIL ASSEMBLY - 3 ROW 14 X 16	AFM 24
129088+4	A COIL ASSEMBLY - 3 ROW 14 X 16	AFM 24+TXV
129089	A COIL ASSEMBLY - 3 ROW 16 X 16	AFM 30
129090	A COIL ASSEMBLY - 3 ROW 18 X 16	AFM 36
129091	A COIL ASSEMBLY - 3 ROW 20 X 16	AFM 42
129092	A COIL ASSEMBLY - 3 ROW 22 X 16	AFM 48
129093	A COIL ASSEMBLY - 3 ROW 24 X 16	AFM 60
129032	A COIL ASSEMBLY - 4 ROW 14 X 16	AFM 19,25
129034	A COIL ASSEMBLY - 4 ROW 20 X 16	AFM 31,37
129036	A COIL ASSEMBLY - 4 ROW 24 X 16	AFM 43,49
129028	A COIL ASSEMBLY - 4 ROW 26 X 16	AFM 61
129037	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	AFM18-37 W*2SP
129038	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	AFM18-37 W*3SP
129039	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	AFM30-37 W*4SP
129021	HYDRONIC COIL ASSEMBLY W/O PUMP 2 ROW	AFM18-37 W*2SL
129022	HYDRONIC COIL ASSEMBLY W/O PUMP 3 ROW	AFM18-37 W*3SL
129023	HYDRONIC COIL ASSEMBLY W/O PUMP 4 ROW	AFM30-37 W*4SL
129017	HYDRONIC COIL ASSEMBLY W/PUMP 2 ROW	AFM42-61 W*2LP

Continued on next page....

Parts List - Air Handlers

AFM (Continued)

Part #	Description	Unit
129018	HYDRONIC COIL ASSEMBLY W/PUMP 3 ROW	AFM42-61 W*3LP
129019	HYDRONIC COIL ASSEMBLY W/PUMP 4 ROW	AFM42-61 W*4LP
129024	HYDRONIC COIL ASSEMBLY W/O PUMP 2 ROW	AFM42-61 W*2LL
129025	HYDRONIC COIL ASSEMBLY W/O PUMP 3 ROW	AFM42-61 W*3LL
129026	HYDRONIC COIL ASSEMBLY W/O PUMP 4 ROW	AFM42-61 W*4LL
4044	1.5 - 3.5T R22 TXV KIT N/B (X3-3)	AFM 18 thru 37
4050	4-5-6T R22 TXV KIT N/B (X3-5)	AFM 42thru 61
4190	1.5 -3.5-T R22 TXV KIT 20% B- PORT (X2-3)	AFM 18 thru 37
4195	4-5-6T R22 TXV KIT 20% B- PORT (X2-5)	AFM 42thru 61
4200	1.5 - 3.5T R-410A TXV KIT N/B (X5-3)	AFM 18 thru 37
4202	4-5-6T R-410A TXV KIT N/B (X5-5)	AFM 42thru 61
3999	PISTON - .055	AFM 18,19
4000	PISTON - .059	AFM 24/25
3987	PISTON - .068	AFM 30/31
4001	PISTON - .074	AFM 36/37
3990	PISTON - .080	AFM 42/43
3991	PISTON - .084	AFM 48/49
3998	PISTON - .092	AFM 60/61
126707	TOP ASSEMBLY	AFM 18 thru 37
126702	TOP ASSEMBLY	AFM 42thru 61
126693	TOP DOOR ASSEMBLY	AFM 18/19/24/25
126694	TOP DOOR ASSEMBLY	AFM 30/31/36/37
126663	TOP DOOR ASSEMBLY	AFM 42thru 61
126717	COIL DOOR ASSEMBLY -LEFT	AFM 18/19
126718	COIL DOOR ASSEMBLY -RIGHT	AFM 18/19
126719	COIL DOOR ASSEMBLY -LEFT	AFM 24/25
126720	COIL DOOR ASSEMBLY -RIGHT	AFM 24/25
126715	COIL DOOR ASSEMBLY -LEFT	AFM 30/31
126716	COIL DOOR ASSEMBLY -RIGHT	AFM 30/31
126713	COIL DOOR ASSEMBLY -LEFT	AFM 36/37
126714	COIL DOOR ASSEMBLY -RIGHT	AFM 36/37
126669	COIL DOOR ASSEMBLY -LEFT	AFM 42/43
126670	COIL DOOR ASSEMBLY -RIGHT	AFM 42/43
126667	COIL DOOR ASSEMBLY -LEFT	AFM 48/49
126668	COIL DOOR ASSEMBLY -RIGHT	AFM 48/49
126664	COIL DOOR ASSEMBLY -LEFT	AFM 60/61
126666	COIL DOOR ASSEMBLY -RIGHT	AFM 60/61
126695	FILTER DOOR	AFM 18 thru 37
126665	FILTER DOOR	AFM 42 thru 61
126599	DOWNFLOW COIL KIT	AFM 18 thru 61
8591	A - COIL DRAIN PAN-PLASTIC	AFM 18 thru 37
126676	HORIZONTAL DRAIN PAN	AFM 18 thru 37

Continued on next page....

Parts List - Air Handlers

AFM (Continued)

Part #	Description	Unit
8593	A – COIL DRAIN PAN-PLASTIC	AFM 42 thru 61
126652	HORIZONTAL DRAIN PAN	AFM 42 thru 61
127028	WIRING HARNESS-FEMALE SOCKET	All AFM
127030	WIRING HARNESS-2 WIRE MALE PLUG	All AFM No Heat Kit
127038	WIRE HARNESS X13 MOTOR MAIN	All AFM
127041	WIRING HARNESS X13 SPEED TAP	All AFM Dual Speed
WC2LL	2 ROW CIRCUIT BREAKER LESS PUMP	AFM 42 thru 61
WC2LP	2 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 42 thru 61
WC2LR	2 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 42 thru 61
WC2SL	2 ROW CIRCUIT BREAKER LESS PUMP	AFM 18 thru 37
WC2SP	2 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 18 thru 37
WC2SR	2 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 18 thru 37
WC3LL	3 ROW CIRCUIT BREAKER LESS PUMP	AFM 42 thru 61
WC3LP	3 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 42 thru 61
WC3LR	3 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 42 thru 61
WC3SL	3 ROW CIRCUIT BREAKER LESS PUMP	AFM 18 thru 37
WC3SP	3 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 18 thru 37
WC3SR	3 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 18 thru 37
WC4LL	4 ROW CIRCUIT BREAKER LESS PUMP	AFM 42 thru 61
WC4LP	4 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 42 thru 61
WC4LR	4 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 42 thru 61
WC4SL	4 ROW CIRCUIT BREAKER LESS PUMP	AFM 18 thru 37
WC4SP	4 ROW CIRCUIT BREAKER 1/40 HP PUMP	AFM 18 thru 37
WC4SR	4 ROW CIRCUIT BREAKER 1/8 HP PUMP	AFM 18 thru 37
WT2LL	2 ROW TERMINAL BLOCK LESS PUMP	AFM 42 thru 61
WT2LP	2 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 42 thru 61
WT2SL	2 ROW TERMINAL BLOCK LESS PUMP	AFM 18 thru 37
WT2SP	2 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 18 thru 37
WT3LL	3 ROW TERMINAL BLOCK LESS PUMP	AFM 42 thru 61
WT3LP	3 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 42 thru 61
WT3SL	3 ROW TERMINAL BLOCK LESS PUMP	AFM 18 thru 37
WT3SP	3 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 18 thru 37
WT4LL	4 ROW TERMINAL BLOCK LESS PUMP	AFM 42 thru 61
WT4LP	4 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 42 thru 61
WT4SL	4 ROW TERMINAL BLOCK LESS PUMP	AFM 18 thru 37
WT4SP	4 ROW TERMINAL BLOCK 1/40 HP PUMP	AFM 18 thru 37

Parts List - Air Handlers

AFW

Part #	Description	Unit
Z46 PAN	DRAIN PAN	AFW all
8201	9 X 6 BLOWER HOUSING & WHEEL	AFW 18/24
8200	10 X 8 BLOWER HOUSING & WHEEL	AFW 30/36
8643	MOTOR - 120 V -1/3 HP	AFW 18/24
8645	MOTOR - 120 V -1/2 HP	AFW 30/36
8532	MOTOR MOUNT BAND – 1 EA	AFW18/36
8563	MOTOR MOUNT LEG – 3 EA	AFW 18/36
110021	BLOWER ASSEMBLY	AFW18/24
110022	BLOWER ASSEMBLY	AFW30/36
3925	CIRCULATOR PUMP W/ CK VALVE-120V	AFW all
8567	REPLACEMENT PUMP CARTRIDGE	AFW all
8518	CIRCUIT BREAKER-1 POLE-15 AMP	AFW all
8432	TERMINAL BLOCK	AFW all
8230	AUXILIARY RELAY	AFW all (w/o TDR)
8719	HYDRO MICRO PROCESSOR BOARD	AFW all
8231	BLOWER TIME DELAY RELAY	AFW all
8231	PUMP TIME DELAY RELAY	AFW all
8545	HYDRONIC FREEZE THERMOSTAT	AFW all
8564	PUMP RECYCLE TIMER	AFW w/ pump only
8247	TRANSFORMER 120V-40VA	AFW all
121607	UPPER DOOR ASSEMBLY	AFW 30/36
121619	UPPER DOOR ASSEMBLY	AFW 18/24
121595	LOWER SOLID PANEL	AFW 18/24
121596	LOWER SOLID PANEL	AFW 30/36
121085	LOWER RETURN PANEL	AFW 18/24
121088	LOWER RETURN PANEL	AFW 30/36
121075	BOTTOM BRACE	AFW All
121077	BOTTOM RETURN BLOCK-OFF	AFW 18/36
129060	WATER COIL ASSY W/ PUMP - 2 ROW	AFW all
129055	WATER COIL ASSY W/ PUMP - 3 ROW	AFW all
129058	WATER COIL ASSY W / PUMP - 4 ROW	AFW 30/36
129059	WATER COIL ASSY W/O PUMP - 2 ROW	AFW all
129053	WATER COIL ASSY W/O PUMP - 3 ROW	AFW all
129057	WATER COIL ASSY W/O PUMP - 4 ROW	AFW 30/36
129061	REFRIGERANT COIL ASSY - 3 ROW	AFW 18
129041	REFRIGERANT COIL ASSY - 4 ROW	AFW 24
129062	REFRIGERANT COIL ASSY - 4 ROW	AFW 30/36
4190	1.5 - 3.5T R22 TXV KIT 20% BLEED PORT (X2-3)	AFW 18/36
4044	1.5 - 3.5 T R22 TXV KIT N/B (X3-3)	AFW 18/36
4200	1.5 - 3.5 T R-410A TXV KIT N/B (X5-3)	AFW 18/36
3999	055 PISTON	AFW18

Continued on next page....

Parts List - Air Handlers

AFW (Continued)

Part #	Description	Unit
4000	059 PISTON	AFW24
3987	068 PISTON	AFW30
4001	074 PISTON	AFW36
127028	WIRING HARNESS-FEMALE SOCKET	All AFW
127030	WIRING HARNESS-2 WIRE MALE PLUG	All AFW No Heat Kit
127038	WIRE HARNESS X13 MOTOR MAIN	All AFW
127041	WIRING HARNESS X13 SPEED TAP	All AFW Dual Speed
UC2SL	2 ROW CIRCUIT BREAKER LESS PUMP	AFW 18/36
UC2SP	2 ROW CIRCUIT BREAKER WITH PUMP	AFW 18/36
UC3SL	3 ROW CIRCUIT BREAKER LESS PUMP	AFW 18/36
UC3SP	3 ROW CIRCUIT BREAKER WITH PUMP	AFW 18/36
UC4SL	4 ROW CIRCUIT BREAKER LESS PUMP	AFW 18/36
UC4SP	4 ROW CIRCUIT BREAKER WITH PUMP	AFW 18/36
UT2SL	2 ROW TERMINAL BLOCK LESS PUMP	AFW 18/36
UT2SP	2 ROW TERMINAL BLOCK WITH PUMP	AFW 18/36
UT3SL	3 ROW TERMINAL BLOCK LESS PUMP	AFW 18/36
UT3SP	3 ROW TERMINAL BLOCK WITH PUMP	AFW 18/36
UT4SL	4 ROW TERMINAL BLOCKR LESS PUMP	AFW 18/36
UT4SP	4 ROW TERMINAL BLOCK WITH PUMP	AFW 18/36
WAD-9	WAD-9(S/L) WALL ACCESS DOOR ABW, AFW SERIES	
WAD-10	WAD-10(S/L) WALL ACCESS DOOR ABW, AFW SERIES	