



CSA B125-93
ASME A112.18.1M-96




Drinking Water Systems Components
CLASSIFIED BY
UNDERWRITERS LABORATORIES INC.
In Accordance with Standard
ANSI/NSF 61-97b
21PL

TWO HANDLE KITCHEN FAUCETS

MODELS: ROC2002ACP-Less Spray,
ROC2002LCP-Less Spray

MODELS: ROC2012ACP-With Spray,
ROC2012LCP-With Spray

IMPORTANT: USE TEFLON® TAPE ON ALL
THREADED CONNECTIONS

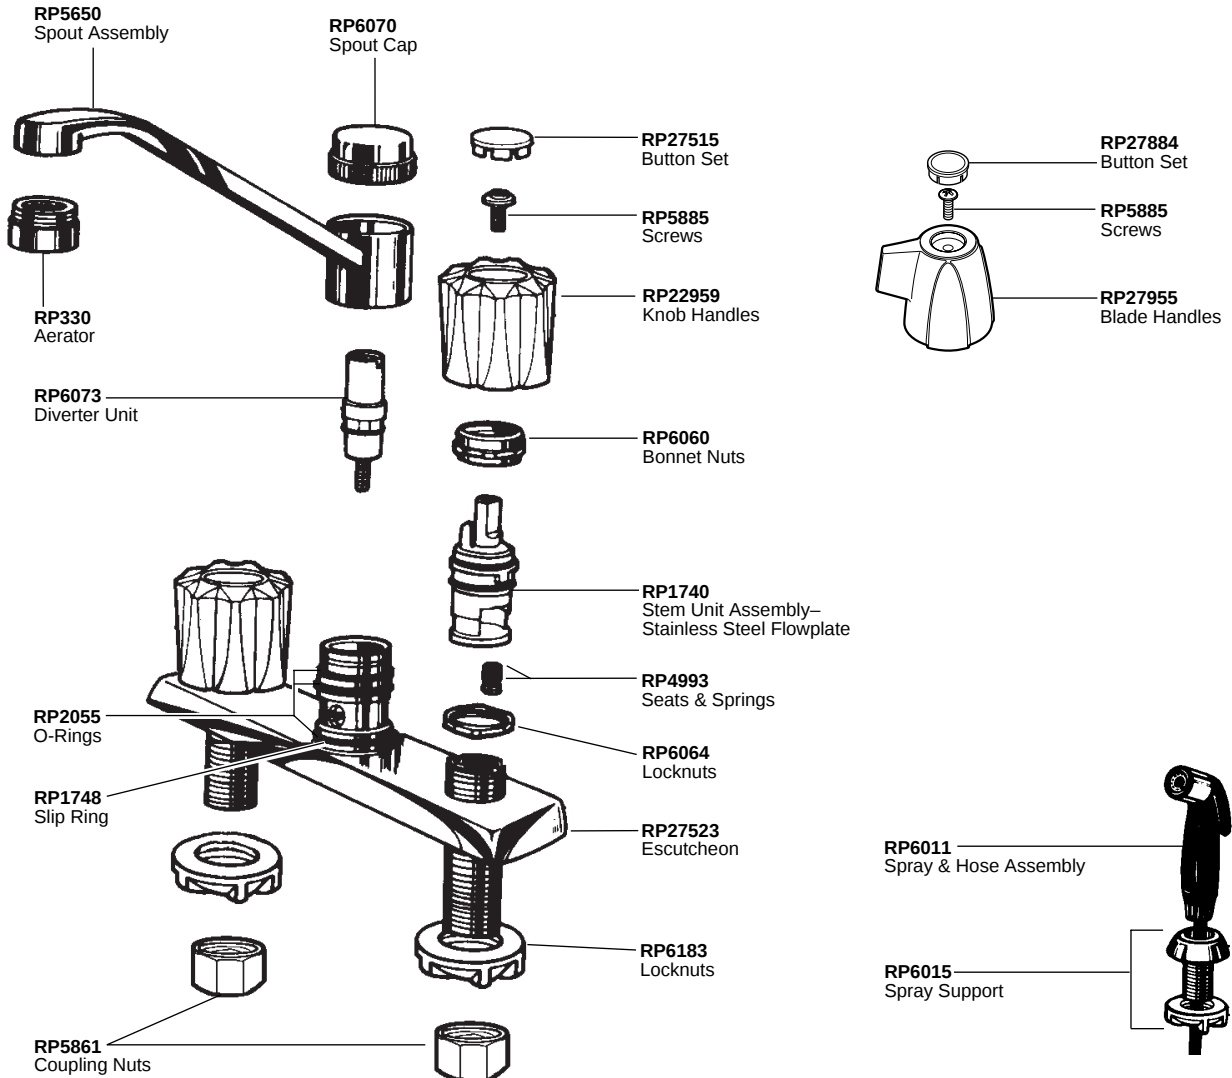

ROCAILLE FIVE YEAR FAUCET LIMITED WARRANTY

All parts of the *Rocaille* faucet are warranted to the original purchaser to be free from defects in material and workmanship for a period of five (5) years. This warranty is made to the original consumer purchaser and shall be effective from date of purchase as shown on purchaser's receipt.


Ferguson Enterprises, Inc. ("Ferguson") will replace, free of charge, during the warranty period, any part which proves defective in material and/or workmanship under normal installation, use and service. Ferguson's obligation under this warranty shall be limited to the replacement of any part or parts which prove defective upon Ferguson's inspection of such product. Replacement parts can be obtained by returning the defective part to your local Ferguson location, transportation charges prepaid, with a copy of the purchase receipt. For the Ferguson location nearest you, consult your telephone directory or call 757-874-7795. THIS WARRANTY IS THE ONLY EXPRESS WARRANTY MADE BY FERGUSON AND IS LIMITED TO THE DURATION OF THIS WARRANTY AND ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WHETHER IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED. UNDER NO CIRCUMSTANCES, AND IN NO EVENT, WILL FERGUSON BE LIABLE FOR PERSONAL INJURY OR PROPERTY DAMAGE OR ANY OTHER LOSS, DAMAGE, COST OF REPAIRS OR INCIDENTAL, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGE OF ANY KIND, WHETHER BASED UPON WARRANTY, CONTRACT, STRICT LIABILITY, NEGLIGENCE OR ANY OTHER CAUSE OF ACTION ARISING IN CONNECTION WITH THE DESIGN, MANUFACTURE, SALE, TRANSPORTATION, INSTALLATION, USE OR REPAIR OF THE PRODUCTS SOLD BY FERGUSON. BUYER HEREBY ACKNOWLEDGES AND AGREES THAT UNDER NO CIRCUMSTANCES, AND IN NO EVENT, SHALL FERGUSON'S LIABILITY, IF ANY, EXCEED THE REPLACEMENT OF THE DEFECTIVE PRODUCT(S); NO ADDITIONAL ALLOWANCE SHALL BE MADE FOR THE LABOR OR EXPENSE OF REPAIRING OR REPLACING DEFECTIVE PRODUCTS OR WORKMANSHIP OR DAMAGE RESULTING FROM THE SAME. EXCEPT AS EXPRESSLY SET FORTH IN THIS PARAGRAPH, ALL PRODUCTS AND/OR SERVICES PROVIDED BY FERGUSON AND ITS EMPLOYEES AND AGENTS ARE PROVIDED "AS IS," "WHERE IS," AND "WITH ALL FAULTS."

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.


This warranty is void for any damage to this faucet due to misuse, abuse, neglect, accident, improper installation, any use in violation of instructions furnished by us, or any use of replacement parts other than genuine *Rocaille* parts.

INSTALLATION STEPS


STEP 1. SHUT OFF WATER SUPPLIES. Disconnect and remove old faucet. If you are installing faucet MODEL ROC2002ACP or ROC2002LCP without spray attachment, move on to STEP 3. For MODEL ROC2012ACP or ROC2012LCP mount spray support assembly in far right hole in sink and hand tighten locknut. Insert hose down through spray support and then up through second hole from left on sink.

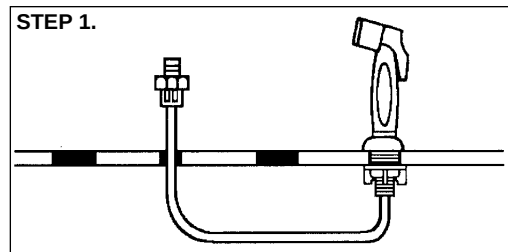

STEP 2. Attach hose tightly to spray hose nipple using a wrench. Use Teflon® tape on threads of hose adapter.

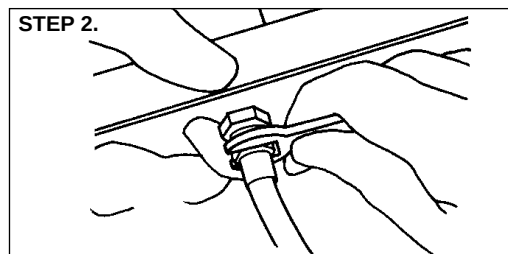

STEP 3. Liberally apply a bead of silicone sealant to underside edge of escutcheon. Set faucet into place and screw locknuts onto faucet shanks. Hand tighten only. No wrench is required. Remove excess sealant.

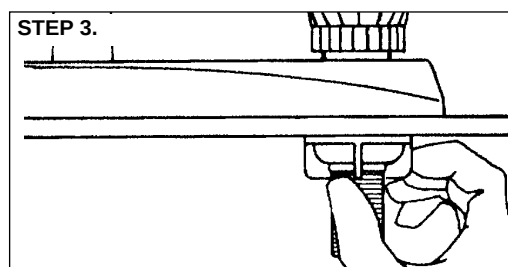


STEP 4. MAKE CONNECTIONS TO WATER SUPPLIES.


SUGGESTION: Before going to buy any necessary adapters or fittings, measure and know what you must connect to. The threaded shank is 1/2" iron pipe size. Measure distance to floor or wall lines. Know pipe diameter and type (iron or copper). Know size of any fittings. A small sketch might help the store salesman help you.

STEP 5. FOR MODEL ROC2002ACP OR ROC2002LCP WITHOUT SPRAY:

After installation is complete, remove aerator, turn handles to full ON position. Turn on water supplies, check for leaks and let lines flush for one minute without moving faucet handles. This will remove debris from lines which can damage internal parts of faucet and create leaks. After flushing shut off water at faucet and replace aerator.

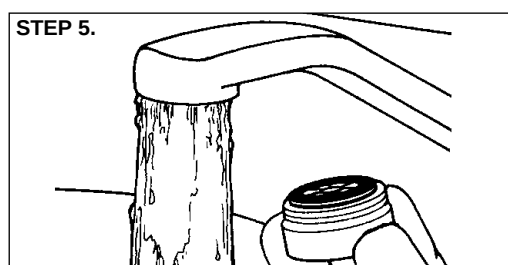

STEP 6. FOR MODEL ROC2012ACP OR ROC2012LCP WITH SPRAY: Remove aerator, then unscrew spout cap. Unscrew diverter using a coin. Replace spout cap and flush hot and cold lines for one minute each. Replace aerator and diverter. NOTE: Tighten diverter lightly, to original degree of tightness.

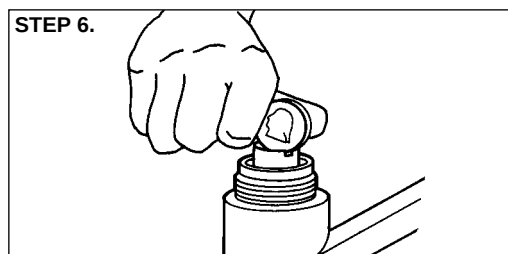

CLEANING AND CARE

Your new faucet is designed and engineered in accordance with the highest quality and performance standards. With proper care, it will give you years of trouble-free service. Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.

WARNING! DOW BATHROOM CLEANER WITH SCRUBBING BUBBLES AND LYSOL FOAMING BASIN TUB AND TILE CLEANER MUST NOT BE USED ON THE CLEAR KNOB HANDLES AND LEVERS. USE OF THESE CLEANERS CAN RESULT IN CRACKED OR SEVERELY DAMAGED HANDLES. IF OVERSPRAY GETS ONTO THE HANDLES, IMMEDIATELY WIPE THEM DRY WITH A SOFT COTTON CLOTH.