


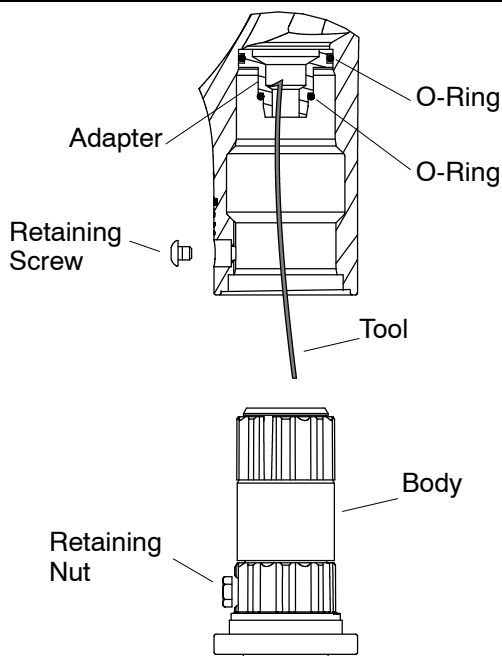

Adapter and O-Ring Replacement

- ☐ Turn off the hot and cold water supplies.
- ☐ Use a 1/8" hex wrench to remove the retaining screw from the faucet body.
- ☐ Lift the faucet off the lower body by lifting straight up on the spout.
- ☐ Use a hooked tool to remove the adapter and O-rings from the faucet. Make sure that the lower O-ring did not stay in the lower valve body.
- ☐ Install the new adapter and both O-rings in the faucet.
- ☐ Make sure that the retaining nut is in place in the lower valve. Slide the faucet over the lower body, aligning the hole in the faucet with the nut.
- ☐ Install the retaining screw through the faucet and into the lower valve body. Use the 1/8" hex wrench to tighten the screw.
- ☐ Turn on the water supplies and check for leaks.

USA: 1-800-4-KOHLER

kohler.com
© 2004 Kohler Co.

1036772-9-**A**