


INSTALLATION INSTRUCTIONS

FOR CONVERTING CASED COILS TO

REPLACEMENT COILS WITH COIL SHIELDS

KIT MODEL NUMBER	COILS APPLICATION
RXCE-AN01	RCF2414S
RXCE-AN02	RCF2417S
RXCE-AN03	RCF2417H RCF2417M RCF3617S
RXCE-AN04	RCF2421H RCF2421M RCF3621S
RXCE-AN05	RCF3621M RCF4821S
RXCE-AN06	RCF3624M RCF4824S
RXCE-AN07	RCF3624H RCF4824H RCF6024S RCF6024H

Remove coil from casing. Rear coil shields should be installed first. Remove screws from rear of coil assembly for one coil shield at a time to ease installation. Install shield with screws removed from coil assembly. See figure 1.

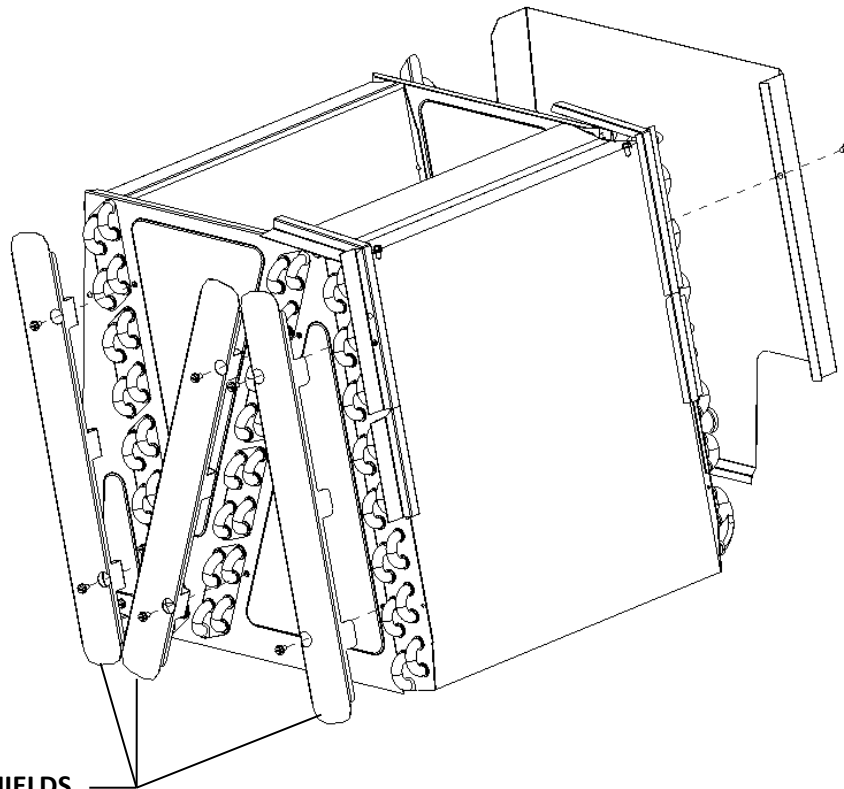

REAR COIL SHIELDS
RXCE-AN01 ONLY
HAS TWO REAR
SHIELDS

FIGURE 1

Front coil shield should be installed last. For coils utilizing a horizontal coil brace the front coil shield must be installed after attaching horizontal brace to coil case. See figure 3. Remove screws from coil assembly to attach front coil shield. Install front coil shield with screws removed from coil assembly. See figure 2. Lower edge of front coil shield should be inside drain pan.

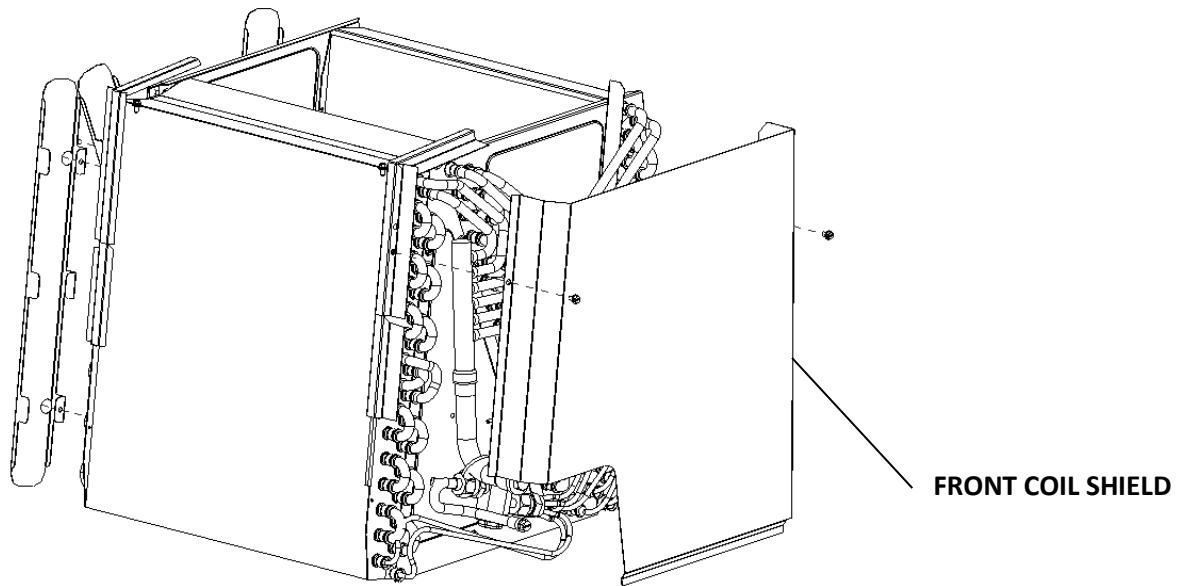


FIGURE 2

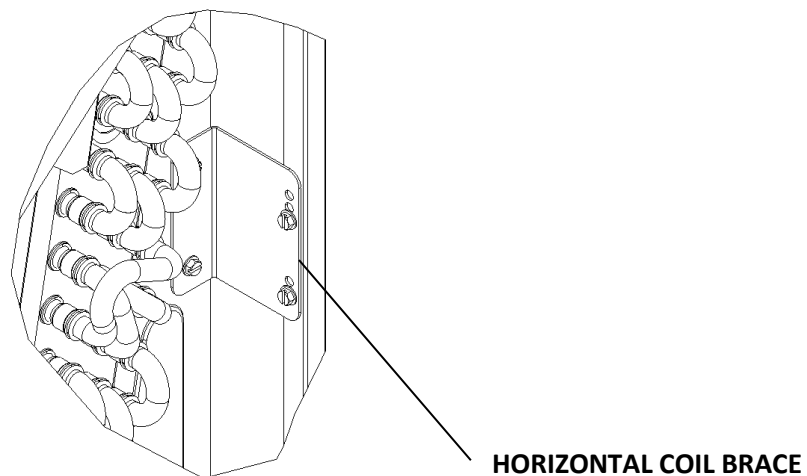


FIGURE 3