

ADDENDUM TO INSTALLATION INSTRUCTIONS GFCI CONVENIENCE OUTLET 7½, 8½, 10, 12½, 15, 17½, 20 AND 25 TON ROOFTOP AND PACKAGED A/C

ALL OTHER INFORMATION IN THE INSTALLATION INSTRUCTIONS APPLIES.

▲ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS KIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION, ADJUSTMENT, OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

▲ WARNING

BEFORE BEGINNING ANY MODIFICATION, BE SURE TO TURN OFF THE MAIN ELECTRICAL POWER AT THE BRANCH CIRCUIT DISCONNECT CLOSEST TO THE UNIT. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. TAG DISCONNECT WITH A SUITABLE WARNING LABEL.


▲ CAUTION

ROUTING THE POWER WIRING FOR THE UNIT AND THE CONVENIENCE OUTLET THROUGH A COMMON CONDUIT IS NOT PERMISSIBLE UNLESS THE INSULATION FOR ALL THE CONDUCTORS ARE RATED FOR THE HIGHEST VOLTAGE APPLIED.

INSTALLATION PROCEDURE

1. Connect the 3 wires to the receptacle.
2. Attach the GFCI outlet to the outlet box using the two 6-32 x 1/4" screws provided with the GFCI outlet.
3. Install plugs in the unused holes in the outlet box.
4. Install the outlet box assembly on the panel using the two 6-32 x 3/4" screws supplied with the GFCI outlet.
5. Install receptacle cover to the panel using the two 6-32 x 1/2" screws provided with the receptacle cover.
6. Connect the three wires to an external 110 volt power source.



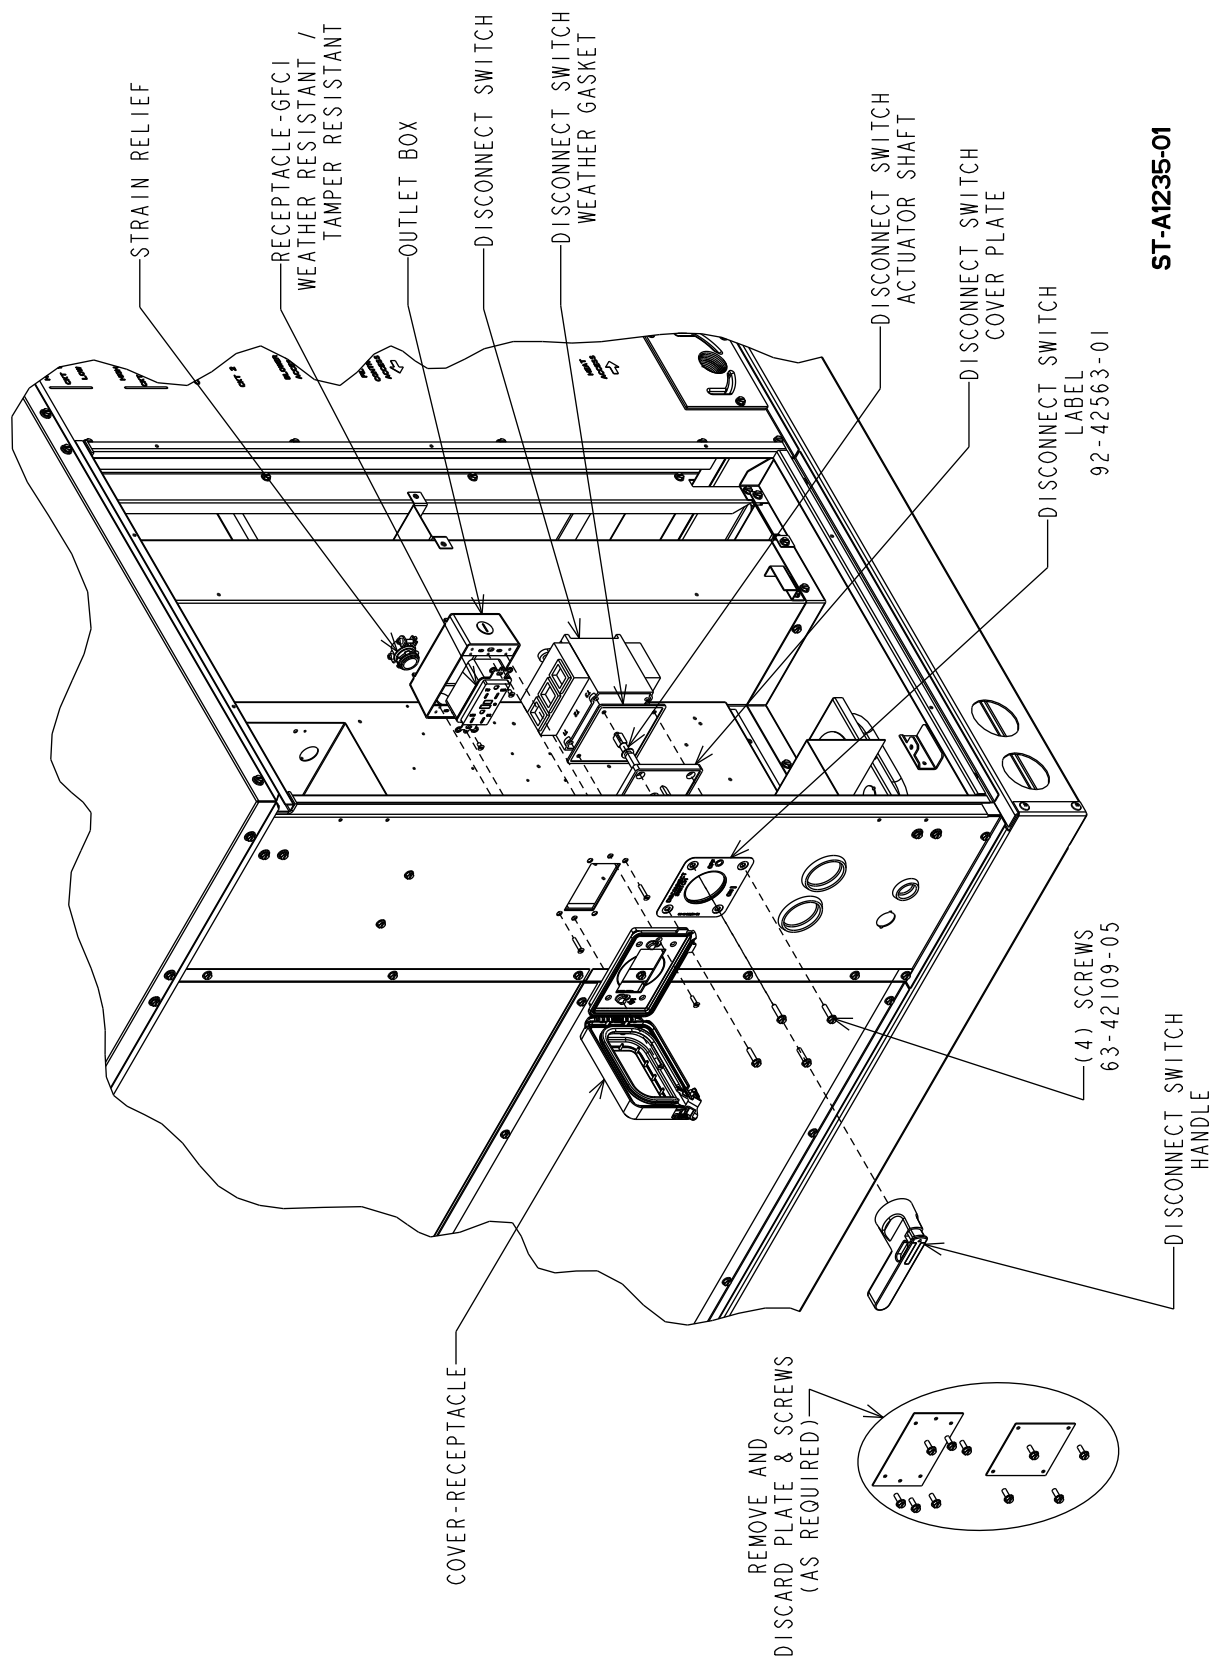

ST-A1235-01

FIGURE 1