

How to install the COOL/HEAT Selector


Accessories

Name	COOL/HEAT Selector	Housing	Housing	M4X16 Screw	C/W CHANGE
Q'ty	1	1	1	2	1
Form		SLS 5.08/3(ORG) 	BLZF 5.08/3(ORG) 		

Installation of the Cooling/Heating Selector


- (1) Disassemble the Cooling/Heating Selector by making use of its hole.
- (2) Connect a C/W CHANGE to the OPT1 connector on outdoor unit PCB.
- (3) Connector the Cooling/Heating Selector with the outdoor unit PCB as the following connection drawing.
- (4) After the completion of connection, screw as the figure.
- (5) Reassemble the Cooling/Heating Selector.

Assembly drawing

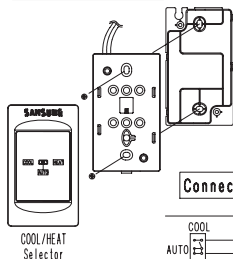


How to connect the housing

In order to connect the wire, insert it with a driver into the housing hole and press it to the down.
(Insert the naked part only with care to prevent a pressing of the covered part.)

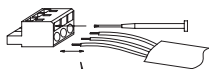

Connection drawing

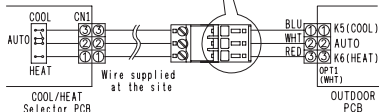

If the connection is wrong, the Cooling/Heating Selector does not operate in normal.