


Direct-Vent Wall Furnace

CONTROL ASSEMBLY - 14038 SERIES

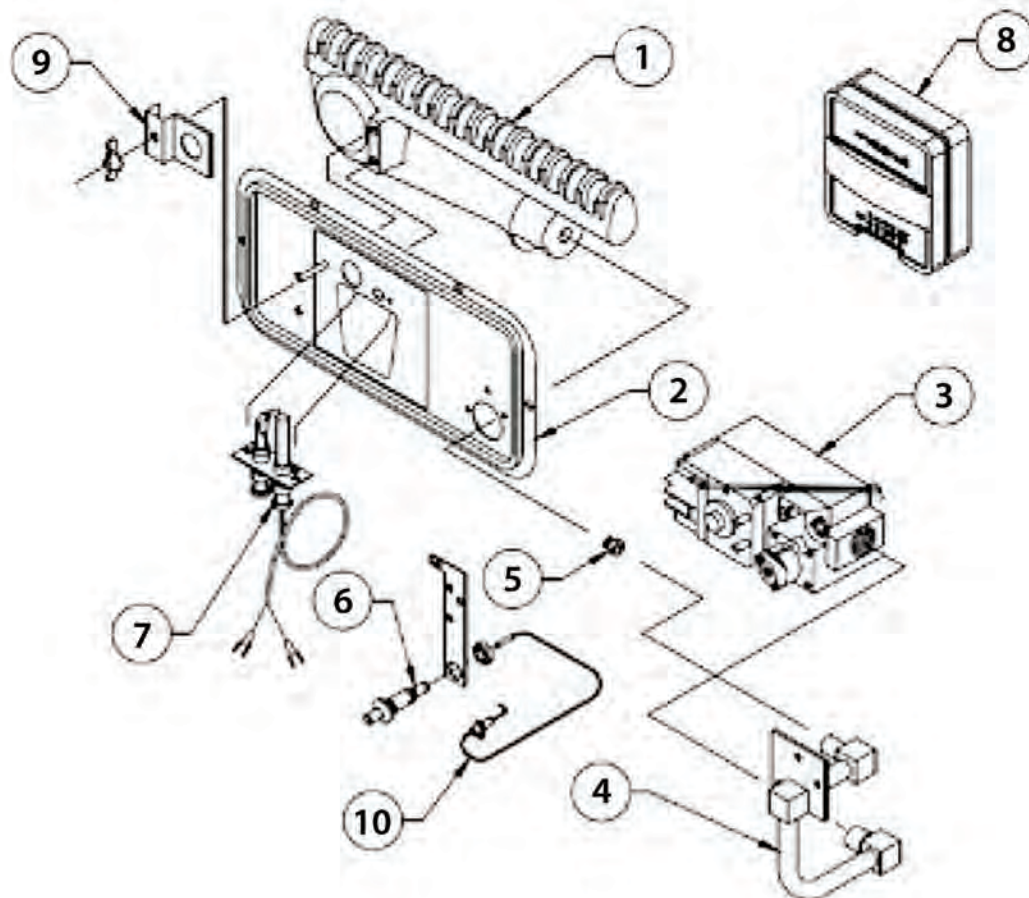


CONTROL ASSEMBLY - 14038 SERIES

Reference Number	Description	1403821	1403822
		1413821	1413822
		1433821	1453822
		1453821	1453822
1	Burner	P168400	P168400
2	Control Door	8A103	8A103
**	Control Door Gasket	P500677	P500677
3	Gas Valve	P295201A	P295200A
4	Manifold	P323659	P323659
**	Manifold Gasket	P147200	P147200
5	See Burner Orifice Sizing Chart		
6	Manual Spark Igniter	P285500	P285500
7	Pilot	P322399	P322398
**	Pilot Gasket	P142700	P142700
8	Thermostat	P322016	P322016
9	Observation Door	12B40	12B40
**	Observation Door Gasket	P100100	P100100
10	Electrode	P322400	P322400

** Not shown

Direct-Vent Wall Furnace

Model Numbers: 2203831, 2213831, 2233831, 2253831, 2203822, 2213822, 2233822, 2253822
3003821, 3013821, 3033821, 3053821, 3003822, 3013822, 3033822, 3053822

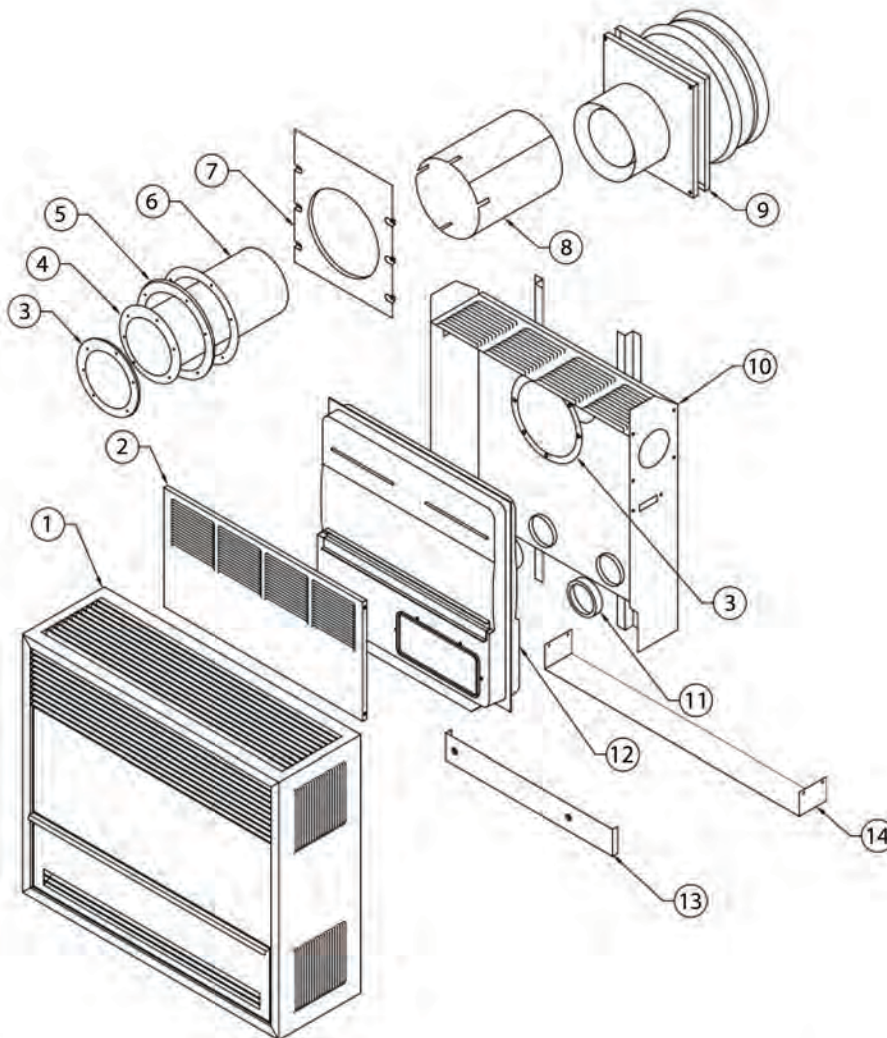


CABINET PARTS

Reference Number	Description	2203821 2213821 2233821 2253821	2203822 2213822 2233822 2253822
1	Face Panel	4313	4313
2	Combustion Chamber Shield	6B149	6B149
3	Flue Tube Gasket (2 Required)	P147001	P147001
4	Flue Extension (Standard Maximum 9" Thick Wall)	8A51	8A51
5	Air Inlet Gasket	P147000	P147000
6	Air Inlet Collar (Standard Maximum 9" Thick Wall)	6C60	6C60
7	Mounting Spacer Plate	6C66	6C66
8	Air Inlet Shield (Standard Maximum 9" Thick Wall)	6C54-1	6C54-1
9	Vent Cap	9306	9306
10	Inner Casing	6D20	6D20
11	Air Inlet Gasket (2 Required)	P121800	P121800
12	Combustion Chamber	6304	6304
13	Leg Cover Plate	6B25	6B25
14	Bottom Heat Shield	-	-

Direct-Vent Wall Furnace

CONTROL ASSEMBLY - 20038 AND 30038 SERIES

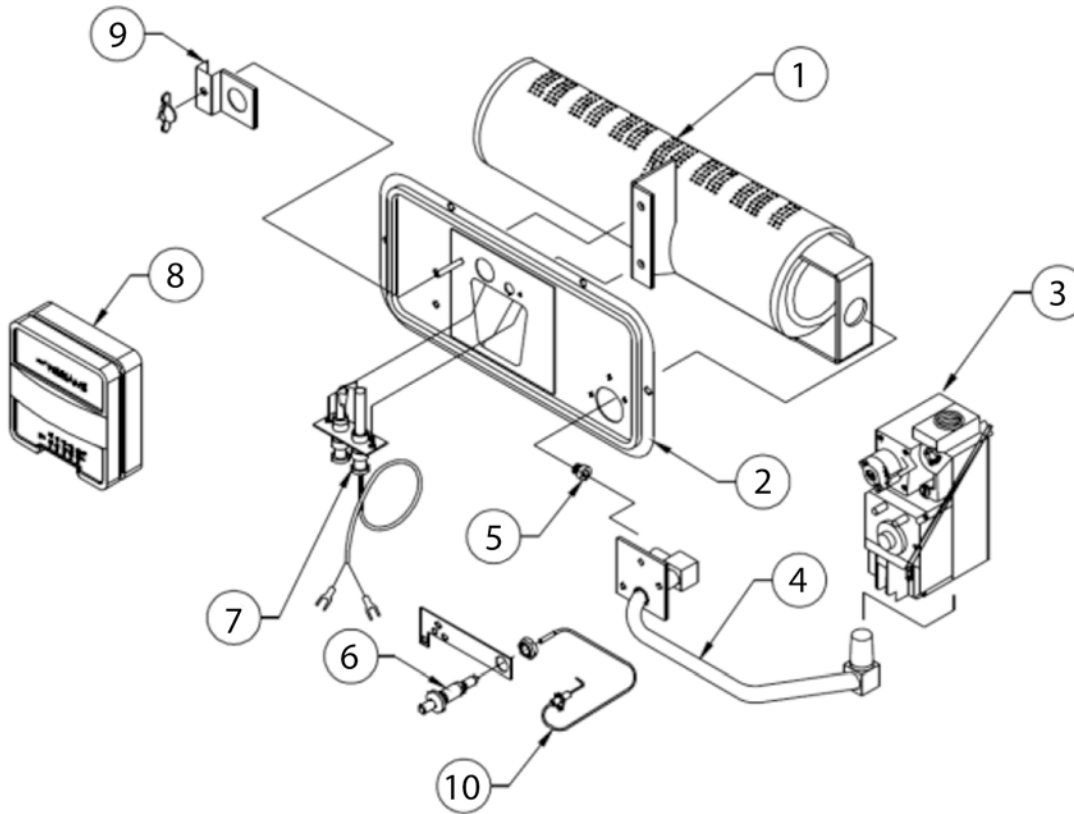


CONTROL ASSEMBLY - 20038 AND 30038 SERIES

Reference Number	Description	2003821	2003822	3003821	3003822
		2013821	2013822	3013821	3013822
		2033821	2033822	3033821	3033822
		2053821	2053822	3053821	3053822
1	Burner	P168404	P168404	P168404	P168404
2	Control Door with P500677 Gasket	8A135	8A135	8A135	8A135
3	Gas Valve	P295201A	P295200A	P295201A	P295200A
4	Manifold with P147200 Gasket	P323655	P323655	P323655	P323655
5	See Burner Orifice Sizing Chart				
6	Manual Spark Igniter	P285500	P285500	P285500	P285500
7	Pilot (P142700 Gasket Not Included)	P322399	P322398	P322399	P322398
8	Thermostat	P322016	P322016	P322016	P322016
9	Observation Door with P100100 Gasket	12B40	12B40	12B40	12B40
10	Electrode	P322400	P322400	P322400	P322400

Direct-Vent Blower Accessory


BLOWER ASSEMBLY MODEL 2302

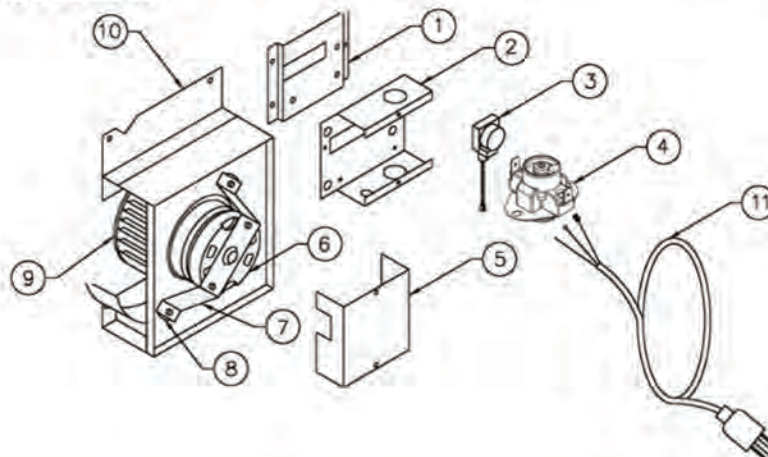

MODEL 2302

Reference Number	Part Number	Description
1	6A24	Switch Box Bracket
2	6B33	Switch Box
3	P321017	Fan Switch (Pull Chain)
4	P332490	Automatic Fan Switch
5	6A23	Switch Box Cover
6	P130600	Motor
7	6A93	Motor Support
8	P128400	Vibration Isolator (2 Required)
9	P130700	Blower Wheel
10	6B64	Blower Frame
11	P323335	Plug and Cord

BLOWER ASSEMBLY MODEL 2303

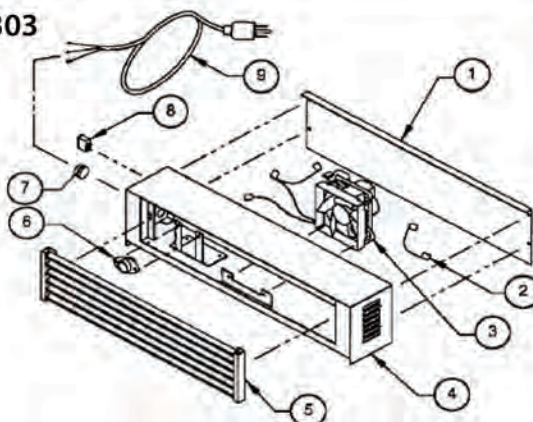


MODEL 2303

Reference Number	Part Number	Description
1	8A128	Back Plate
2	P101000	Wire
3	8B94	Fan Blower Assembly
4	8B93	Blower Casing Assembly
5	8B90	Louver Assembly
6	P323095	Heat Sensor Switch
7	P500158	Strain Relief
8	P323080	Fan Switch
9	P323335	Plug and Cord

Direct-Vent Wall Furnace

Model Numbers: 1403821, 1413821, 1433821, 1453821, 1403822, 1413822, 1433822, 1453822

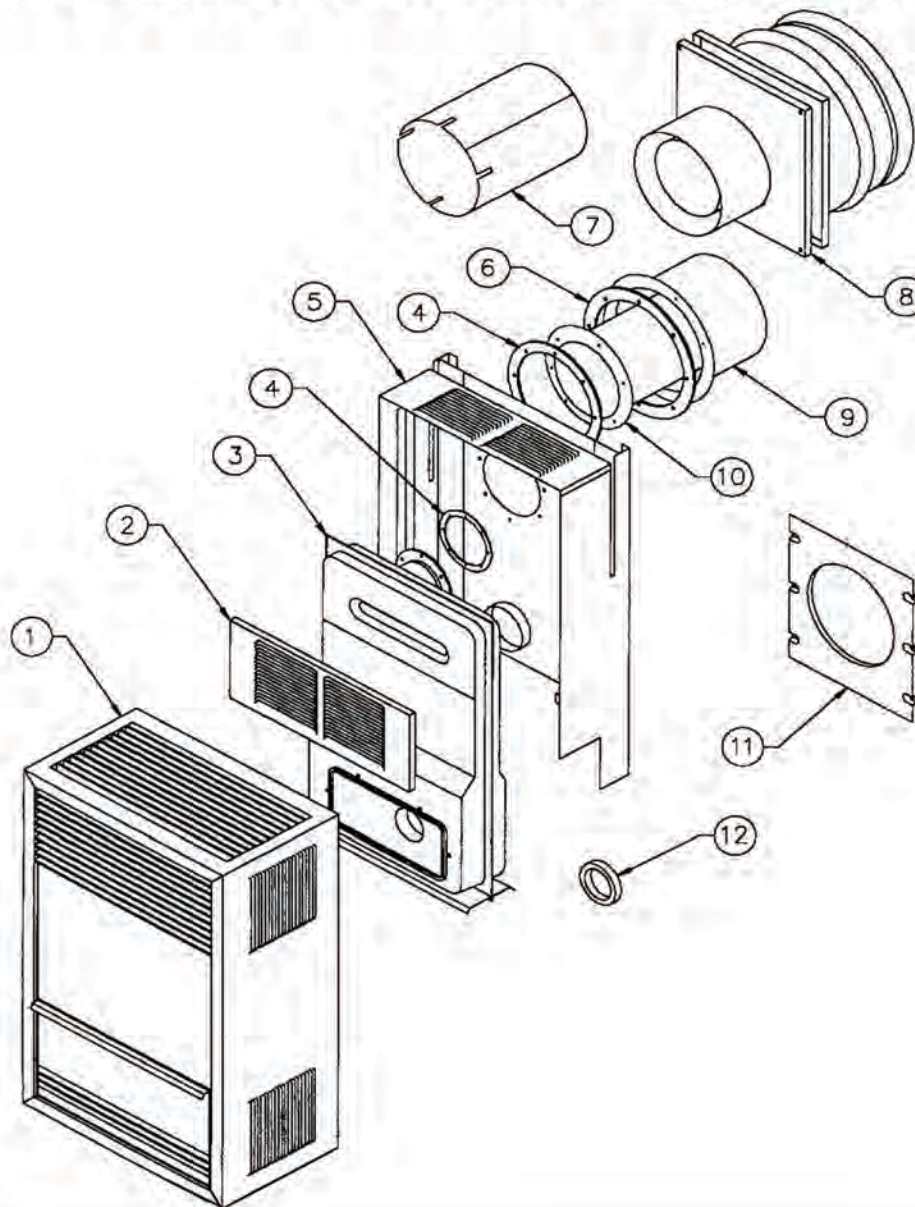

CABINET PARTS

Reference Number	Description	1403821 1413821 1433821 1453821	1403822 1413822 1433822 1453822
1	Face Panel	4309	4309
2	Combustion Chamber Shield	8A72	8A72
3	Combustion Chamber	8B77	8B77
4	Flue Tube Gasket (2 Required)	P147001	P147001
5	Inner Casing	8B62	8B62
6	Air Inlet Gasket	P147000	P147000
7	Air Inlet Shield (Standard Maximum 9" Thick Wall)	6C54-1	6C54-1
8	Vent Cap	9306	9306
9	Air Inlet Collar (Standard Maximum 9" Thick Wall)	6C60	6C60
10	Flue Extension (Standard Maximum 9' Thick Wall)	6A193	6A193
11	Mounting Spacer Plate	8B64	8B64
12	Air Inlet Gasket	P121800	P121800