

INSTALLATION INSTRUCTIONS

MODELS (-)XRD-01RKCCM3, (-)XRD-01RKCDM3, (-)XRD-01RHCCM3, & (-)XRD-01RHCDM3

CONVERTIBLE AIRFLOW ECONOMIZERS

▲WARNING

THIS ACCESSORY IS TO BE INSTALLED BY A QUALIFIED, LICENSED SERVICE PERSON. TO AVOID UNSATISFACTORY OPERATION OR DAMAGE TO THE PRODUCT AND POSSIBLE UNSAFE CONDITIONS, INCLUDING ELECTRICAL SHOCK, REFRIGERANT LEAKAGE AND FIRE, THE INSTALLATION INSTRUCTIONS PROVIDED WITH THIS ACCESSORY MUST BE STRICTLY FOLLOWED AND THE PARTS SUPPLIED USED WITHOUT SUBSTITUTION. DAMAGE TO THE PRODUCT RESULTING FROM NOT FOLLOWING THE INSTRUCTIONS OR USING UNAUTHORIZED PARTS MAY BE EXCLUDED FROM THE MANUFACTURER'S WARRANTY COVERAGE.

▲WARNING

DISCONNECT ELECTRICAL POWER TO THE UNIT. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

▲WARNING

THE SMOKE DETECTOR MUST NOT BE RELIED UPON AS THE PRIMARY SMOKE DETECTION IN BUILDING SAFETY. THE ECONOMIZER SMOKE DETECTOR DE-ENERGIZES THE SUPPLY FAN AND CLOSES THE OUTSIDE AIR DAMPER WHEN SMOKE IS DETECTED. REFER TO ENCLOSED SMOKE DETECTOR INSTRUCTIONS (SECTION 7) FOR TESTING OF ADEQUATE SMOKE SENSOR AIRFLOW UPON INSTALLATION OF (-)XRD-01RKCDM3 or (-)XRD-01RHCDM3 ECONOMIZER WITH SMOKE DETECTOR. SUFFICIENT DUCTED AIR VELOCITY MUST BE PRESENT ACROSS THE SMOKE DETECTOR SAMPLING TUBE TO ENSURE PROPER OPERATION. ADDING POWERED EXHAUST MAY BE REQUIRED IN BUILDINGS WITH EXCESSIVE ENVELOPE AIR LOSSES AND/OR RESTRICTIVE RETURN AIR CONDITIONS TO THE UNIT PREVENTING ADEQUATE RETURN AIR TO THE UNIT WHEN ECONOMIZER IS OPEN TO OUTSIDE AIR.

TOOLS REQUIRED FOR INSTALLATION:

$\frac{3}{8}$ " electric drill with $\frac{5}{16}$ " socket	$\frac{1}{8}$ " diameter drill bit for sheet metal.	Sheet metal tools (e.g. shears)
---	---	---------------------------------

PACKAGE CONTENTS

economizer with controller, actuator, and outside enthalpy sensor attached

(-)XRD-01RKCCM3
(-)XRD-01RKCDM3

(-)XRD-01RHCCM3
(-)XRD-01RHCDM3


ITEM	DESCRIPTION	PART No.	PART No.
1			
2	Permanent Filter	420000078 15 $\frac{1}{2}$ " x 21 $\frac{3}{8}$ "	420000079 15 $\frac{1}{2}$ " x 27 $\frac{3}{8}$ "
3	Bird Screen	6036020C\PERF	6036008C\PERF
4	OA Rainhood – Filter Access	**36020C\FAP	**36008C\FAP
5	OA Rainhood Assy – (1) Left and (1) Right Hood side	**36020C\EHS	**36008C\EHS
6	OA Rainhood Assy – Bottom	**36020C\EHB	**36008C\EHB
7	OA Rainhood – Top	**36020C\EHT	**36008C\EHT
8	OA Rainhood – Filter Retainer	6036020C\FCH1	6036008C\FCH1
9	BR Rainhood Assy – (1) Left and (1) Right Hood side	**36020C\EHS2	**36008C\EHS2
10	BR Rainhood Assy – Bottom	**36020C\EHB2	**36008C\EHB2
11	BR Rainhood – Top	**36020C\EHT2	**36008C\EHT2
12	BR Rainhood – Bird Screen Retainer	**36020C\FCH2	**36008C\FCH2
13	Hood Extension – Top	**36020C\ATP	**36008C\ATP
14	Hood Extension – Divider	**36020C\EDD	**36008C\EDD
15	Hood Extension – Bottom	**36020C\ABP	**36008C\ABP
16	Hood Extension – Sides	**36020C\ASP	**36008C\ASP
17	Smoke Detector – *DM3 models only	610431412	610431412
18	Hardware Bag	6036D20\HDW	6036D08\HDW
19			
20	Sample Tube – *DM3 models only	610431413	610431413

** = Paint Color. 59 = Warm Dark Grey, 60 = Green, 61 = R-410A Beige, 62 = Light Grey

SUPERSEDES 10-15-15
NOVEMBER 4, 2015

RMIGED20

FIGURE 1
 (-)XRD-01RKCCM3 Shown
 Other Models Similar

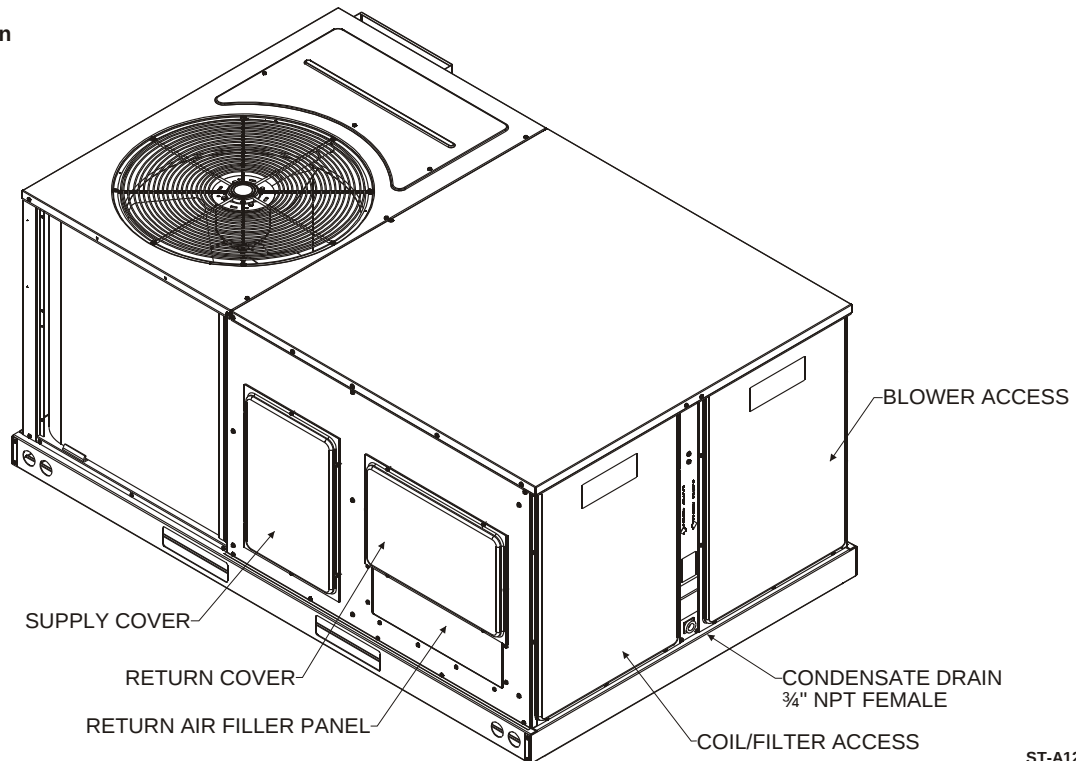

ST-A1214-02

STEP 1:

Immediately upon receipt, all cartons and contents should be inspected for transit damage. Units with damaged cartons should be opened immediately. If damage is found, it should be noted on the delivery papers and a damage claim filed with the last carrier. Compare carton(s) contents to PACKAGE CONTENTS List (**TABLE 1**) above to note any missing items.

STEP 2:

Remove RETURN COVER and COIL/FILTER ACCESS PANEL from the unit and retain for reuse (**SEE FIGURE 1**). Retain screws.

STEP 3:

Remove the RETURN AIR FILLER and carefully cut insulation attached to fully expose return air opening. Discard the RETURN AIR FILLER.

STEP 4:


For sideflow applications, install the RETURN COVER in the bottom return opening. Discard the RETURN COVER for downflow applications.

STEP 5:

For sideflow applications, remove the barometric relief damper from economizer prior to installation in unit. This component will be relocated to the sideflow return air duct along with the barometric relief hood (**SEE FIGURE 2**).

FIGURE 2


SIDEFLOW APPLICATIONS ONLY

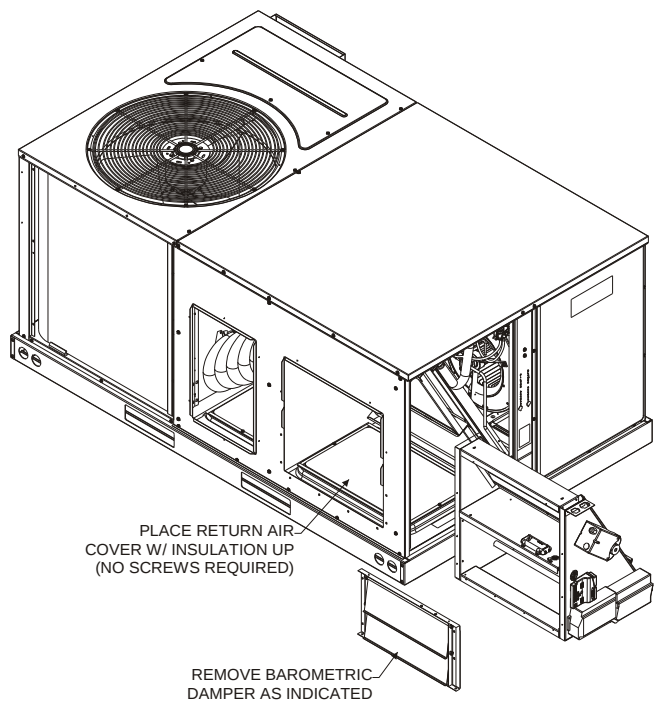


ST-A1214-01

STEP 6:

Slide economizer into unit return air section being careful not to tear the insulation on the rear panel (**SEE FIGURE 3**). After the economizer is installed, unplug the unit economizer jumper plug and connect it to the new economizer (if the economizer is equipped with a smoke detector, save the jumper plug in the compartment for diagnostic purposes). **If this jumper is not connected, neither the unit nor the economizer will work.** Connect the unit economizer harness to the economizer harness using the matching plugs.

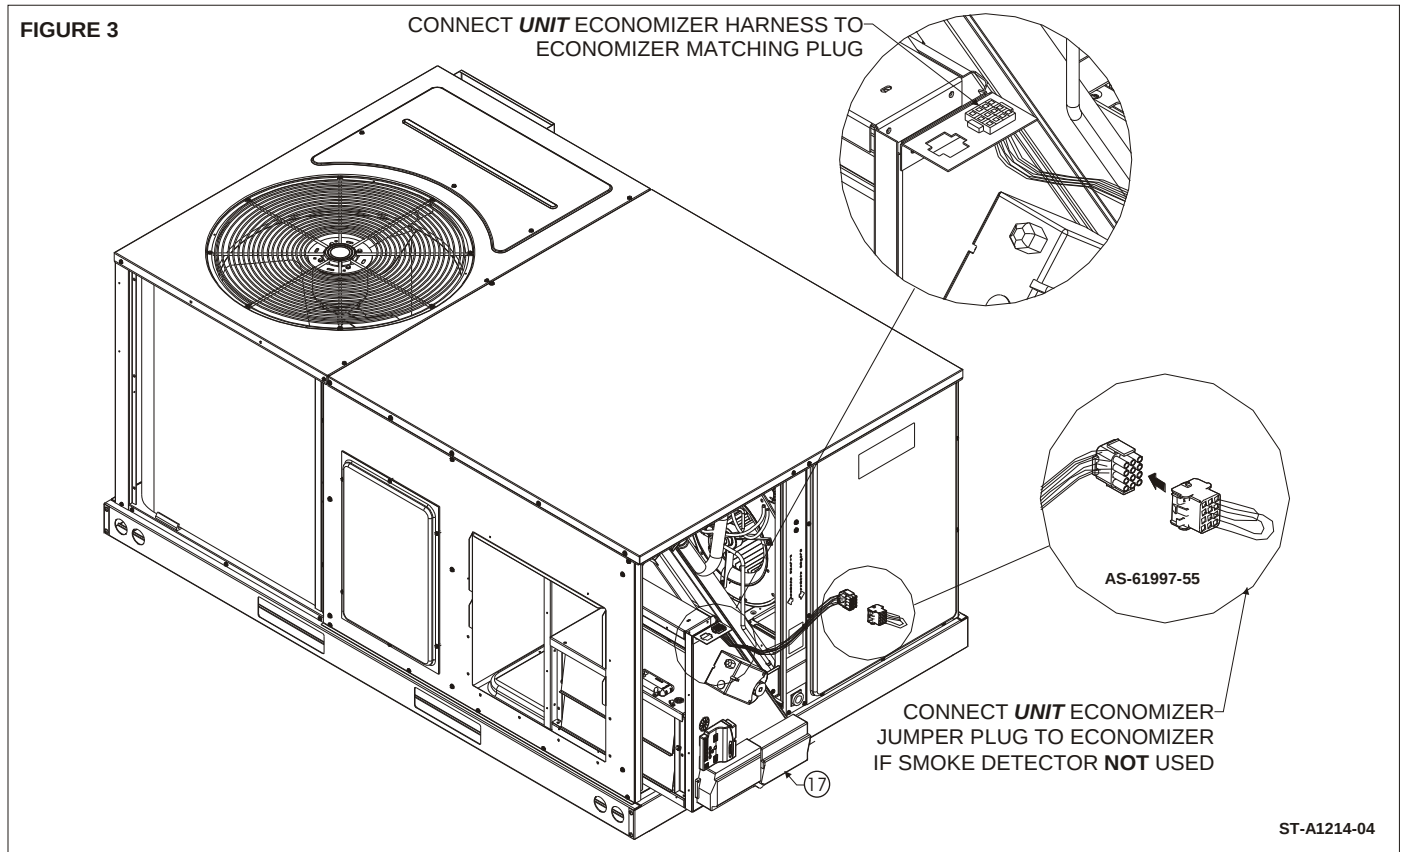**STEP 7:**

Using the holes located above the return air opening on the unit attach the economizer to the REAR PANEL using the screws removed in **STEP 2** (**SEE FIGURE 4**).

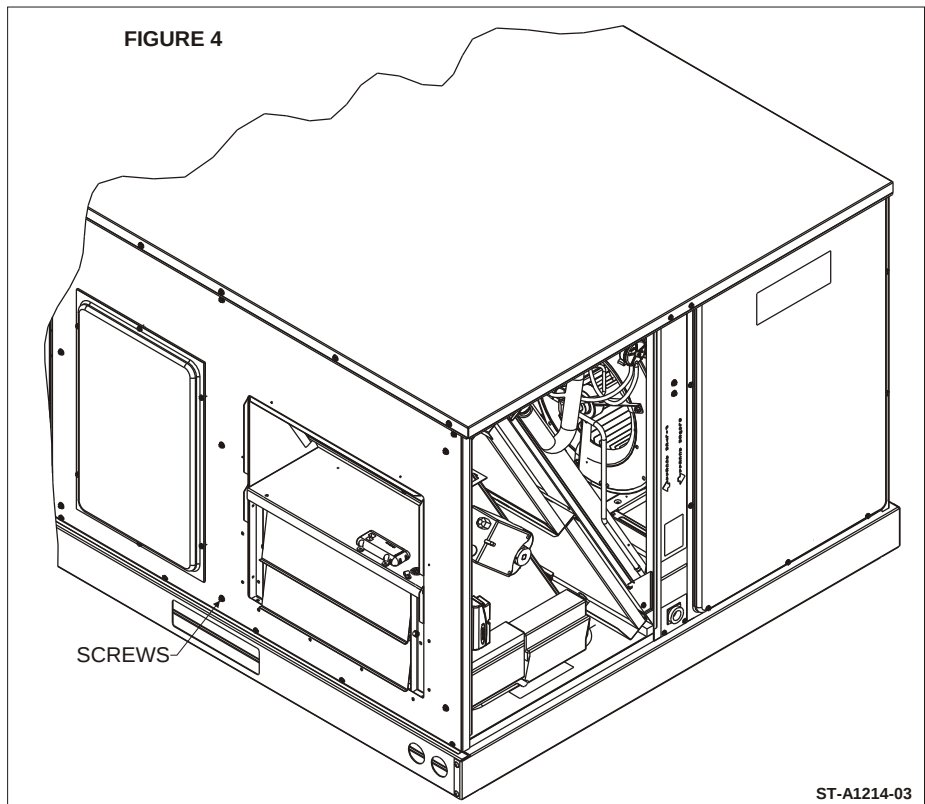

ECONOMIZER RAIN HOOD (FRESH AIR) ASSEMBLY

STEP 8:

Fasten (6) OA RAINHOOD ASSY – BOTTOM to the (5) OA RAINHOOD ASSY – LEFT SIDE and the OA RAINHOOD ASSY – RIGHT SIDE.

STEP 9:

Attach the two (8) OA RAINHOOD – FILTER RETAINERS to the (5) OA RAINHOOD ASSY – LEFT SIDE and the OA RAINHOOD ASSY – RIGHT SIDE from **STEP 8** above. Please notice that the flange on the (8) OA RAINHOOD – FILTER RETAINERS must be as shown in (**SEE FIGURE 5**) to retain the (2) PERMANENT FILTER.



STEP 10:

Fasten (7) OA RAINHOOD – TOP to the (5) OA RAINHOOD ASSY – LEFT SIDE and the OA RAINHOOD ASSY – RIGHT SIDE.

STEP 11:

Slide (2) PERMANENT FILTER between (8) OA RAINHOOD – FILTER RETAINERS and back into the (6) OA RAINHOOD ASSY – BOTTOM. Attach (4) OA RAINHOOD – FILTER ACCESS to the front/top of (5) OA RAINHOOD ASSY – LEFT SIDE and the OA RAINHOOD ASSY – RIGHT SIDE.

FIGURE 5
(-)XRD-01RKCCM3 Shown Other Models Similar.

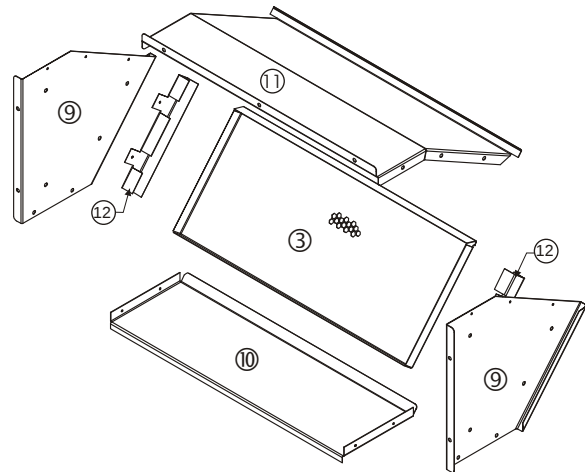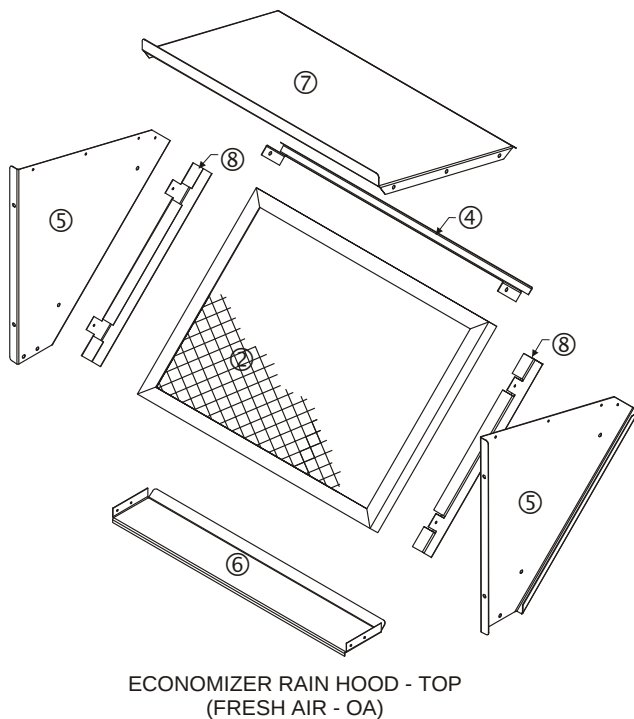

ST-A1214-05

ECONOMIZER RAIN HOOD (BAROMETRIC DAMPER) ASSEMBLY

STEP 12:

Fasten (10) BR RAINHOOD ASSY – BOTTOM to the remaining (9) BR RAINHOOD ASSY – LEFT SIDE and the remaining BR RAINHOOD ASSY – RIGHT SIDE.

STEP 13:

Attach the two (12) BR RAINHOOD – BIRDSCREEN RETAINERS to the (9) BR RAINHOOD ASSY - LEFT SIDE and the BR RAINHOOD ASSY – RIGHT SIDE from **STEP 12** above. Please notice that the flange on the (12) BR RAINHOOD – BIRDSCREEN RETAINERS must be as shown in (**SEE FIGURE 5**) to retain the (3) BIRD SCREEN.

STEP 14:

Slide (3) BIRD SCREEN between (12) BR RAINHOOD – FILTER RETAINERS and back into the (10) BR RAINHOOD ASSY – BOTTOM.

STEP 15:

Fasten (11) BR RAINHOOD – TOP to the (9) BR RAINHOOD ASSY - LEFT SIDE and the BR RAINHOOD ASSY – RIGHT SIDE.

STEP 16:

Fasten (16) HOOD EXTENSION SIDES to the outside of (15) HOOD EXTENSION BOTTOM and (14) HOOD EXTENSION DIVIDER with screws provided with economizer. Fasten (13) HOOD EXTENSION TOP to the **OUTSIDE** OF (16) HOOD EXTENSION SIDES. (**SEE FIGURE 6.**)

STEP 17:

Install HOOD EXTENSION ASSEMBLY and economizer with remaining screws removed in **STEP 2**. (**SEE FIGURE 6.**)

NOTE:
COIL NOT SHOWN
FOR CLARITY

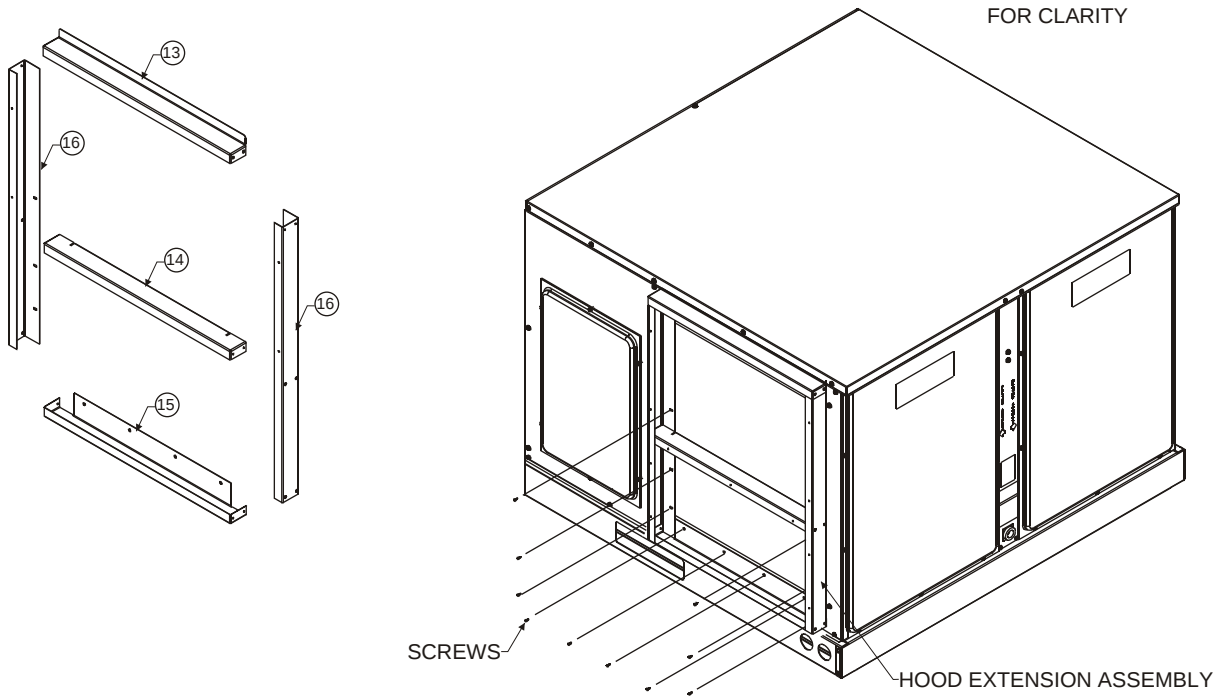


FIGURE 6

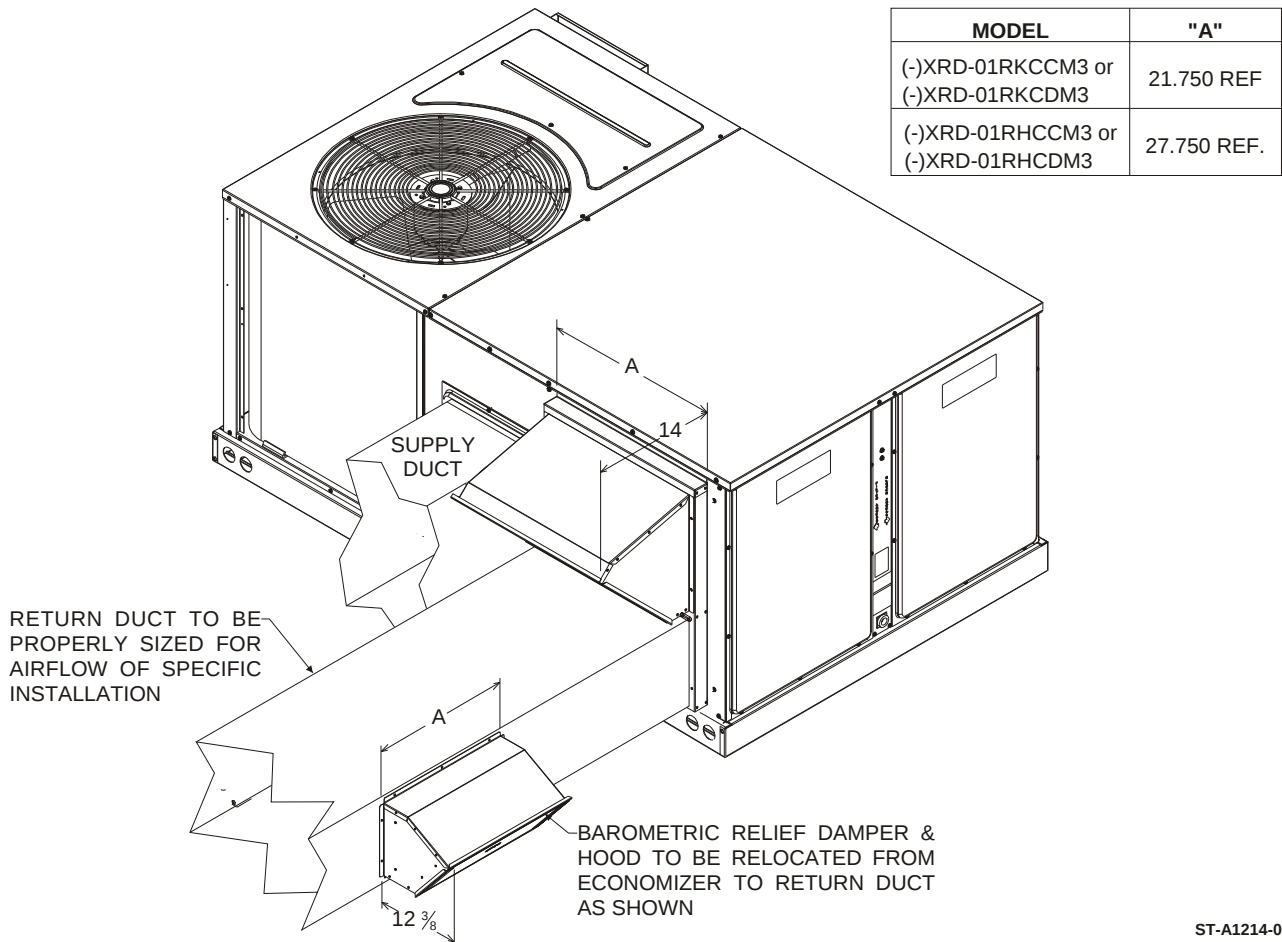


FIGURE 7

ST-A1214-06

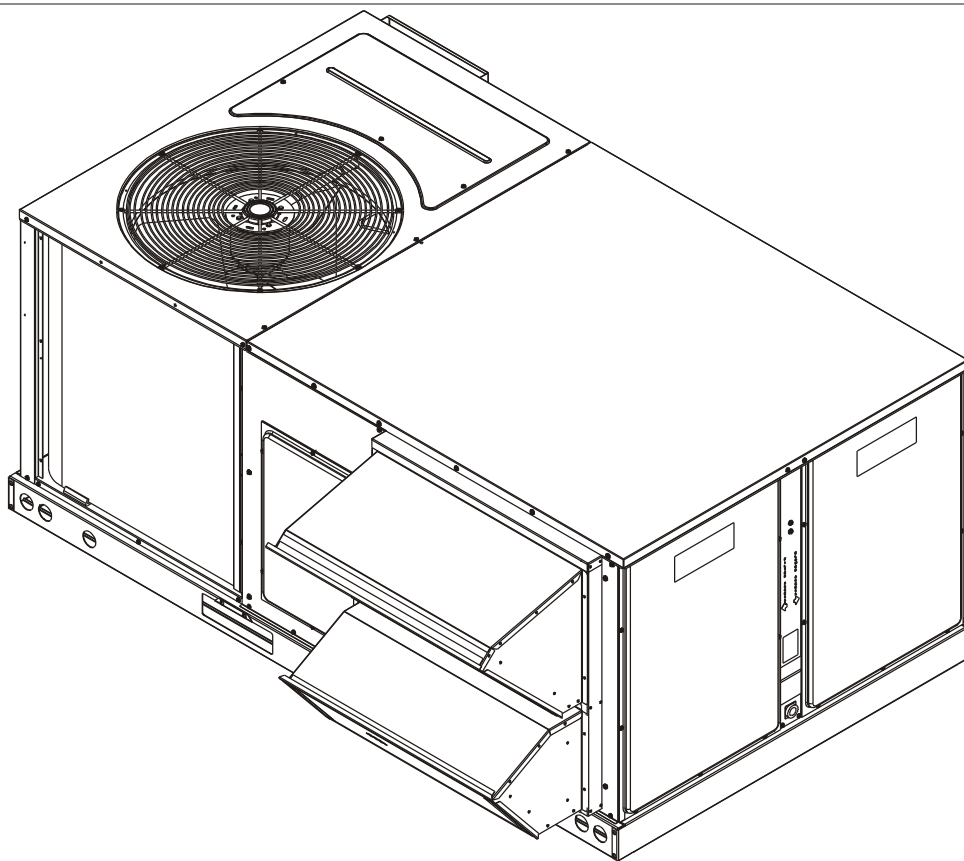


FIGURE 8

ST-A1214-07

STEP 18:

On downflow applications, the barometric relief hood mounts directly to the lower part of the HOOD EXTENSION opening using holes provided. On sideflow applications the barometric relief hood is attached to the return air duct.

STEP 19:

Mount the fresh air (upper) hood {consisting of (2) PERMANENT FILTER, (5) OA RAINHOOD ASSY – LEFT SIDE & OA RAINHOOD ASSY – RIGHT SIDE, (6) OA RAINHOOD ASSY – BOTTOM, (7) OA RAINHOOD – TOP, (8) OA RAINHOOD – FILTER RETAINERS}. Slide the fresh air hood flange under the (13) HOOD EXTENSION top panel flange, align holes and secure with screw(s) provided (**SEE FIGURE 6**).

STEP 20:

Upon start-up check the economizer sequence of operation using the steps provided in these instructions. After testing unit operation and setting outside air damper minimum position, replace COIL/FILTER ACCESS PANEL with remaining screws.

DIRECT MOUNT ECONOMIZER SEQUENCE OF OPERATION

GENERAL

This accessory economizer package is designed to save energy costs by using outdoor air for cooling and ventilation in place of mechanical cooling whenever possible. The economizer continuously monitors indoor and outdoor air conditions and compares them to a user-selected setpoint to determine if free cooling is available.

ACCESSORIES

RXXR-AV03 – Dual Enthalpy Upgrade Kit

For maximum energy savings, this upgrade kit will allow the economizer to compare the outdoor enthalpy to the return air enthalpy, instead of a user-selected setpoint to determine if "free cooling" is available.

RXXR-AR02 - Wall-Mounted Carbon Dioxide Sensor

For installations requiring Demand Control Ventilation (DCV) based upon indoor air levels of carbon dioxide (CO₂). When the unit supply fan is running, the CO₂ sensor modulates the outside air damper to maintain a user-selected CO₂ level inside the occupied space. Energy savings are achieved by not bringing in excessive amounts of outdoor air when the indoor air conditions are suitable. Energy savings can be substantial on buildings with highly variable occupancy rates.

Wall-Mounted Remote Potentiometer

For installations requiring remote adjustment of damper minimum position by the occupants, a remote potentiometer (270 ohm), such as the Honeywell S963B1136 can be used.

Power Exhaust Kit

(-)XRX-BGF03C, (-)XRX-BGF03D, (-)XRX-BGF03Y
(-)XRX-BGF04C, (-)XRX-BGF04D, (-)XRX-BGF04Y
(-)XRX-BGF06C, (-)XRX-BGF06D, (-)XRX-BGF06Y

For installations requiring more space static pressure relief than can be obtained with the standard barometric relief damper included with the economizer, a power exhaust kit can be added.

STARTUP


Attach 12-pin Rooftop unit wiring harness to 12-pin harness on economizer. Attach 4-pin Rooftop unit wiring harness directly to economizer logic module (ELM). A separate mixed air sensor is not required. It is supplied with the Rooftop unit and communicates the temperature and other information to the ELM via the 4-pin plug.

ADJUSTMENTS ON ELM CONTROLLER

3 potentiometers with screwdriver adjustment slots, starting from top of controller (See Figure 5).


Note: Before any adjustments are made, the Rooftop Unit Controller should be placed in "Occupied" Mode.

FIGURE 5

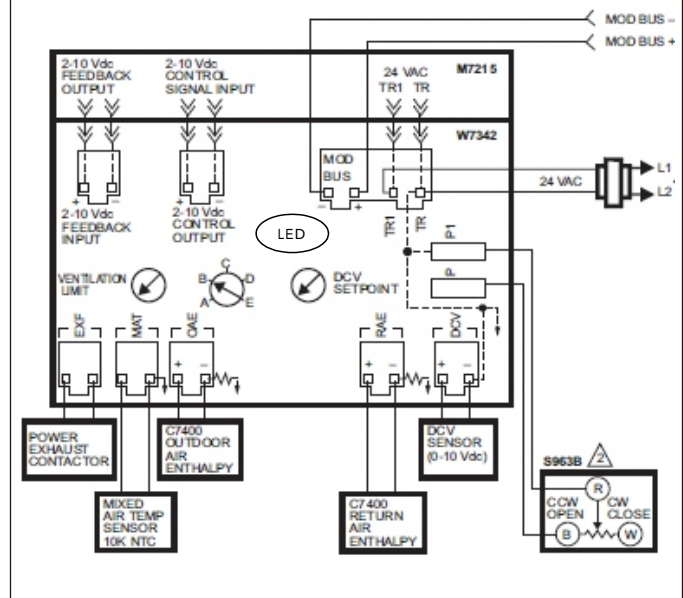

1. Ventilation Limit – Outside Air Damper minimum position
 - A. Adjust the Ventilation Limit potentiometer to allow the minimum amount of outdoor air, as required by local codes, to enter the building (See Figure 6). The CO₂ sensor, if present, should be disconnected or **DISABLED** during this step.


FIGURE 6

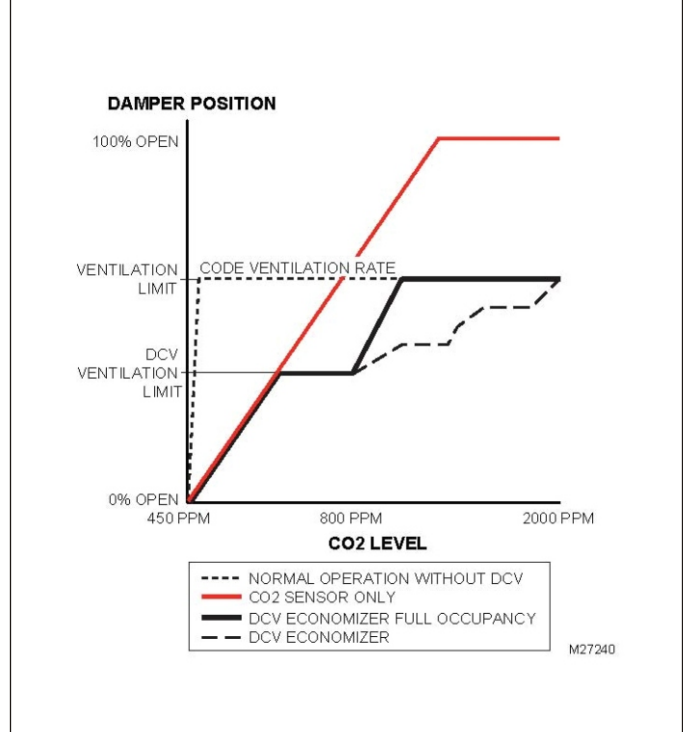

- B. Range of adjustment is from 0-100% (2-10Vdc output); in most applications the minimum position is adjusted to allow 10% to 25% outside air to enter the system.
- C. Whenever the supply fan signal is present, the damper will open to this minimum position unless:
 - i. It may modulate to a lesser position if overridden by the CO₂ sensor (DCV).
 - ii. It may not open if overridden by the discharge air temperature sensor (Freeze Protect Mode).
 - iii. The unit controller or communication network may override any adjustments made to the economizer controller. Adjustments may be made from the Rooftop Unit Controller keypad and display or the communication network and has priority over the potentiometer setting.

2. Economizer Setpoint

- A. Only the coolest, driest outside air is used for economizer operation when the potentiometer is on setting "E". For greatest energy savings, the potentiometer is on setting "A" (See Figure 7).

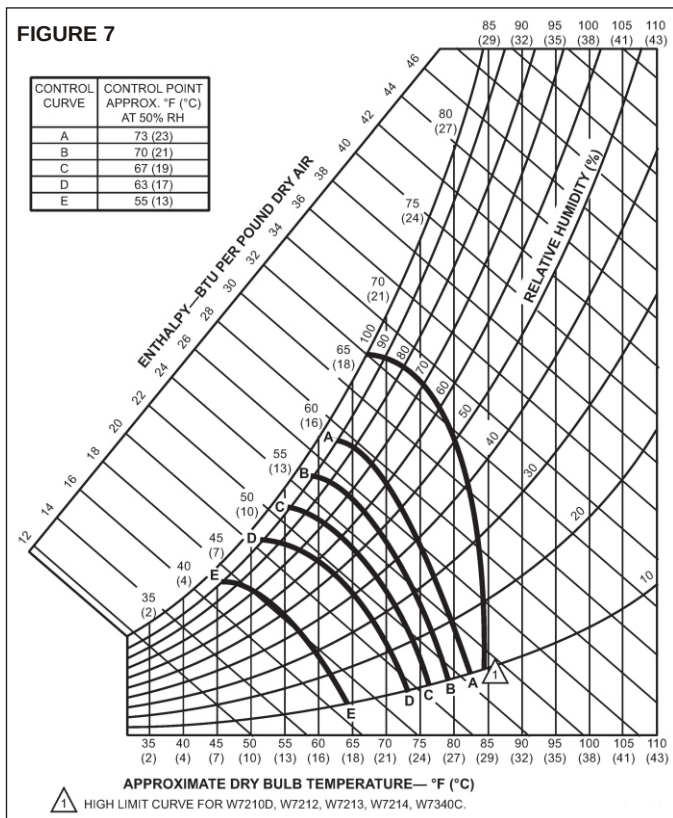

- B. Adjustment range is A, B, C, D, or E.
 - i. Setting "A" = 73°F db or 27 Btu/lbm @ 50% RH
 - ii. Setting "B" = 70°F db or 25 Btu/lbm @ 50% RH
 - iii. Setting "C" = 67°F db or 23 Btu/lbm @ 50% RH
 - iv. Setting "D" = 63°F db or 22 Btu/lbm @ 50% RH
 - v. Setting "E" = 55°F db or 18 Btu/lbm @ 50% RH

- C. Economizer Setpoint potentiometer can be adjusted at any time, but not through the Rooftop Unit Controller keypad or network.
- D. The controller compares the enthalpy sensor input with the economizer setpoint to determine if free cooling is available.
 - i. Single enthalpy strategy: If outdoor air enthalpy is lower than the setpoint, then free cooling is available.
 - ii. Dual enthalpy strategy: If outdoor air enthalpy is lower than return air enthalpy, then free cooling is available (if using dual enthalpy, the Economizer Setpoint must be at the "D" setting).
- 3. DCV Setpoint – Demand Control Ventilation (DCV) Setpoint
 - A. The DCV can be any sensor that provides a 0-10Vdc output. The DCV modulates the outdoor damper to provide ventilation based on occupancy. Typically a carbon dioxide sensor (CO₂) is used to indirectly monitor occupancy level.
 - B. No cooling signal is required for the DCV to override the outdoor air damper when ventilation requires outdoor air.
 - C. The controller must receive a supply fan signal to open the damper.
 - D. Range of adjustment is from 0 volts to 10 volts.
 - E. The DCV setpoint can be adjusted at any time. The default setting is 50% of the Ventilation Limit setting.
 - F. The Rooftop Unit Controller or communication network may override any adjustments made to the economizer controller and has priority over the potentiometer setting.
 - G. The controller compares the CO₂ sensor input to the DCV setpoint to determine the damper minimum position. If a CO₂ sensor is present, the damper modulates between the DCV setpoint and the Ventilation Limit.
 - i. If the actual CO₂ level is below the setpoint, then the damper minimum position is determined by the DCV setpoint potentiometer setting.
 - ii. If the actual CO₂ level rises above the setpoint, then the damper minimum position is overridden proportionally more open to a maximum of the Ventilation Limit potentiometer setting.
 - iii. If the discharge air temperature drops below 48°F (Freeze Protect Mode), the DCV input will be overridden and the damper may not open.
 - H. Compatible CO₂ sensors will have a 0-10Vdc output for a 0-2000 ppm CO₂ input.
 - I. Ensure proper polarity of the sensor wires when connecting to the economizer logic module (ELM). Incorrect polarity negates the sensor signal.

NORMAL OPERATION

1. Fan Only
 - A. Damper will go to minimum position (in 90 seconds or less) whenever the supply fan signal is present.
 - B. When supply fan signal is removed, the outside air damper closes against blade seals for a tight shutoff of outside air.
 - C. If the discharge air temperature drops below 48°F, then the control will override the minimum position setting and will modulate the outside air damper closed.
2. Call for First Stage of Cooling
 - A. Economizer Unavailable (warm outdoor air). Compressor 1 is commanded on without delay.
 - B. Economizer Available (free cooling). The controller tries to maintain a discharge air temperature of 53°F ± 5 by modulating the outside air damper position. Compressor 2 is not activated in the economizer mode.
3. Call for Second Stage of Cooling
 - A. Rooftop unit in Thermostat Control Mode
 - i. Economizer Unavailable (warm outdoor air). Compressor 2 is commanded on without delay.
 - ii. Economizer Available (free cooling). Compressor 1 is commanded on without delay. The controller tries to maintain a discharge air temperature of 53°F ± 5 by modulating the outside air damper position. Compressor 2 is not activated in the economizer mode.
 - B. Rooftop unit in Network Control Mode
 - i. Economizer Unavailable (warm outdoor air). Compressor 2 is commanded on without delay.
 - ii. Economizer Available (free cooling). Compressor 1 is commanded on without delay. The outside air damper position is held in the 100% open position until the call for second stage cooling is removed. The discharge temperature is ignored. Compressor 2 is not activated in the economizer mode.
4. Call for Heat
 - A. If the control detects that the supply fan is on, then the control will open the damper to minimum position.
 - B. If the discharge air temperature drops below 48°F, then the control will override the minimum position setting and will modulate the outdoor damper closed.

COMMUNICATION

The Rooftop Unit Controller communicates to the Economizer Logic Module (ELM) via the 4-pin Rooftop unit wiring harness under the RS485 (MODBUS® RTU) standard.

The table (**Table 2**) lists the values that are shown on the Rooftop Unit Controller Display and are communicated to the Economizer Logic Module (ELM). The Rooftop Unit Controller is the master device and sends requests to the ELM slave device which then responds.

	Economizer Menu On Rooftop Controller	Adjustable Range	Default setting
1	Econ. Status Economizer OK / Economizer Not OK	N/A	N/A
2	Econ. Status Diff Enthalpy / Single Enthalpy	N/A	N/A
3	Econ. Status Exh. Fan is ON/OFF	N/A	N/A
4	* Enthalpy Setpt. A / B / C / D / E	A/B/C/D/E	A
5	Eff.Mix.Air Temp XXX.X °F	N/A	N/A
6	* Mixed Air Setpt. XXX.X °F	0 - 99	53
7	Ext.Mix.Air Temp XXX.X °F	N/A	N/A
8	* Econ. Vent. Limit XXX %	0 - 100	0
9	* Econ.Exh. ON/OFF XXX %	0 - 100	50
10	* Econ. DCV Limit XXX %	0 - 100	0
11	* DCV Control Enabled / Disabled	Enabled / Disabled	Disabled
12	* DCV Level Setpt. XXXX ppm	500 - 2000	700
13	Ext. DCV Level XXXX ppm	N/A	N/A
14	Eff. DCV Level XXXX ppm	N/A	N/A
15	Eff.Eco.Position XXX %	N/A	N/A
16	Eff.Min.Position XXX %	N/A	N/A
17	Local. Min. Pos. XXX %	N/A	N/A
18	Econ. Faults DCV Sensor Fault OAE Sensor Fault RAE Sensor Fault MAT Sensor Fault * Actuator Fault	N/A	N/A
19	Econ Firm Vrsn	N/A	0103
20	* Smoke Detector	Standard Purge w/Heat Exhaust Purge Pressurize	Standard

TABLE 2

***MENUS THAT ARE USER ADJUSTABLE**

1. Econ. Status. Displays whether the enthalpy is acceptable for economization.
2. Econ. Status. Displays whether the system is using single or differential enthalpy.
3. Econ. Status. Displays the status of the optional power exhaust fan (if connected).
4. Enthalpy Setpoint. Displays the five levels the user must choose for the enthalpy set point. Figure 7 indicates what each of those levels represents in the psychometric chart. This setting determines the level at which economization is allowed. If Dual Enthalpy Control is used, the setting must be "D".

5. Eff. Mix. Air Temp. Displays the current value of mixed air temperature.
6. Mix Air Setpt. When the mixed air temperature falls below this set point, the freeze protection control will disable the mixed air control and close the outdoor damper to the effective minimum position.
7. Ext. Mix. Air Temp. Displays the discharge air temperature reading from the Rooftop Unit Controller.
8. Econ. Vent. Limit. Displays the minimum acceptable outside-air ventilation rate as a percentage of outdoor air damper position. The volumetric flow-rate of outside air required can be determined from building codes, ASHRAE standards, or standard practice. The use of a CO₂ sensor can lower the minimum outdoor air quantity as described in the next section for Demand Control Ventilation (DCV). The system allows the adjustment of the ventilation limit through four different methods, listed below in order of priority:
 - A. Network interface (BACnet® or Lonworks®)
 - B. Rooftop Unit Controller Display and Keypad
 - C. Remote potentiometer
 - D. Direct adjustment through the Ventilation Limit potentiometer on the ELM control.
9. Econ. Exh. ON/OFF. Display allows the user to change the set point of what percentage of outside air damper position the exhaust fan is energized. The default value is 50% of full outside air.
10. Econ. DCV Limit The economizer will allow the dampers to close more than the minimum position if the indoor air quality is not contaminated. The Econ. DCV Limit can be set from 0 to 100% but must be lower than the Ventilation Limit setting. The default value is 50% of the Ventilation Limit setting.
11. Econ. DCV Control. If connected to a CO₂ sensor, the ELM regulates the amount of outdoor air supplied to the space to maintain the level of carbon dioxide below the recommended 700ppm above the outdoor level. In this case, CO₂ levels serve as a proxy for building occupancy and the rate of human-generated indoor pollutants. Once the DCV is operating, the minimum damper position can then be lowered to the DCV Setpoint. By default, this value is 50% of the ventilation limit, but the user has the option to adjust it through network or Rooftop Unit Controller keypad and display. The user also has the option to disable DCV altogether.
12. DCV Level Setpt. The DCV level setpt is a selectable level of carbon dioxide that system does not allow to be exceeded. The set point is communicated to the economizer and the minimum ventilation position is changed in order to prevent the increase of CO₂.
13. Ext. DCV Level. Displays the value the Rooftop Unit Controller sends to the Economizer (used with networked CO₂ sensors not connected directly to the economizer).
14. Eff. DCV Level. Displays the actual DCV Level (CO₂ level) in ppm.
15. Eff. Eco. Position. Displays the actual position of the economizer outside air damper.
16. Eff. Min Pos. Displays the current value of the effective minimum outside air damper position.
17. Local Min. Pos. Displays the local ventilation limit position that is set at the ELM.
18. Econ Faults. Displays any ELM sensor faults.
19. Econ Firm Vrsn. Displays the build date and the software version installed on the ELM.

20. Smoke Detector: Displays the response of the economizer and unit during a smoke detector alarm. A password must be entered to change the setting.

Component	Smoke Detector Setting				
	Standard	Purge w/Heat	Exhaust	Purge	Pressurize
Indoor Blower	0%	100%	100%	100%	100%
Compressor	OFF	OFF	OFF	OFF	OFF
Gas/Electric Heating allowed?	NO	YES	NO	NO	NO
Economizer OA Position	0%	100%	0%	100%	100%
Power Exhaust	OFF	ON	ON	ON	OFF

Notes: In Standard Mode, an emergency stop command is issued for a VFD (variable speed drive) equipped unit to stop the indoor blower immediately rather than ramping down to a stop.

TROUBLESHOOTING

The ELM status LED (**See Figure 5**) will be:

1. On steady when economizer is operating normally.
2. On and off (blinking) occurs 20 seconds after the economizer senses a fault in the system, e.g. no signal from sensor, no communication from Rooftop Unit Controller. Check Rooftop Unit Controller Display for fault readout.
3. Off when the economizer does not have power.

When diagnosing the system, the best results are obtained by first putting the fan setting for Thermostat Controlled units to the "Continuous Fan" mode. For Network controlled units, the Rooftop Unit Controller should be set to the "Occupied Mode".

NOTES

1. The mist eliminator (Permanent Outdoor Air Filter) is of aluminum mesh construction and should be cleaned by flushing regularly with warm soapy water. The replacement mist eliminator size is listed on the first page of these instructions.
2. Operation of the optional power exhaust only depends upon the supply fan running and the damper position (it is possible to set the minimum position high enough to engage the power exhaust in the heating mode).
3. For operation in Thermostat mode, this economizer requires a two-stage thermostat.
4. Upon loss of power to the unit or economizer, the outside air damper will spring close shut in about 5 seconds.
5. Compressor Time Delays, Compressor Interstage Delays, Compressor Low Ambient Lockouts, etc. are not provided by the economizer controller.
6. If DCV is **DISABLED** and a CO₂ sensor is connected to the economizer, the CO₂ level will still display on the Rooftop Unit Controller, but will not be used for control.

HARNESS ENDS AT PL21 & PL20

COMPONENT CODE


C7400C Fresh Air Sensor
J2 Power Exhaust Cap
MS7106K Damper Actuator 24v
PL6 Male A/C Unit Plug
PL7 Female A/C Unit Plug
PL20 Female Economizer Cap
PL21 Male Smoke Plug
W7342A Logic Module

WIRE COLOR CODE

BLK	Black	BLU	Blue
BRN	Brown	GRN	Green
GRY	Gray	ORG	Orange
PNK	Pink	RED	Red
TAN	Tan	VIO	Violet
WHT	White	YEL	Yellow

Revision	Change	Date
A	Added Material List for 030H14	05-26-10
B	ECN# 6464	05-02-13

CONNECTOR & CONTACT CONFIGURATION
PL7 (300000297) CAP - (300000558) SOCKET
J2 (300000291) CAP - (300000558) SOCKET

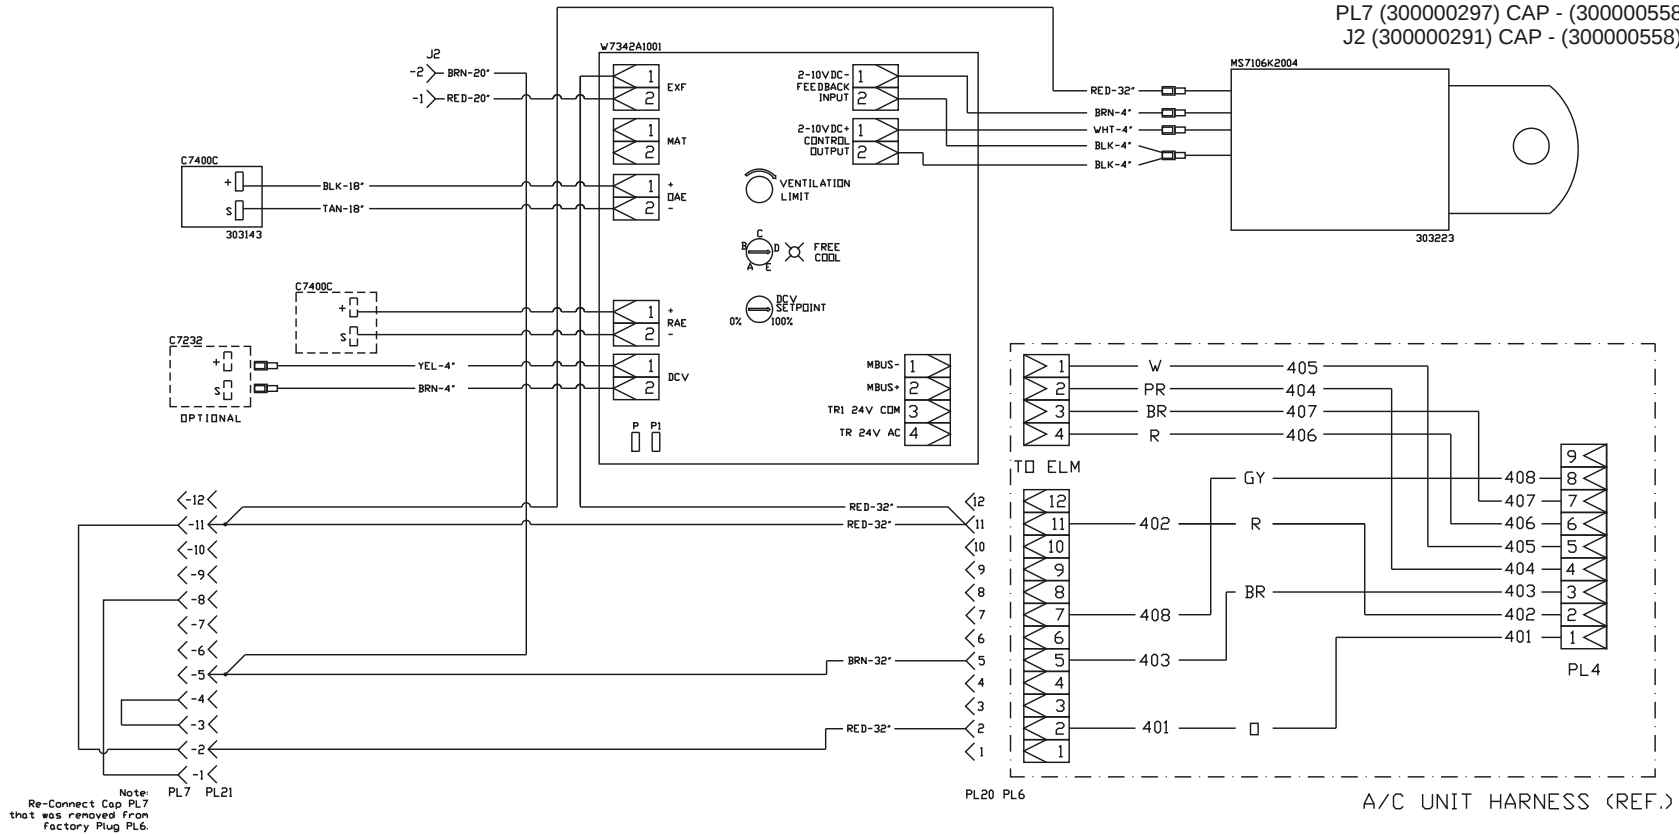

Notes:

- Unit wiring shown as reference only. Check unit wiring for actual unit wiring.
- Y2 must be energized for the compressor to operate.

Modulating Gear Economizer RKNA/LNA/JNA 036-060

RKKA/JKA/LKA/KMA/JMA/LMA/KNL/LNL/JNL 036-072

RRS ROOFTOP
SYSTEMS

1625 Diplomat Drive
Carrollton, Texas 75006
Phone (972) 247-7447
Fax (972) 243-0940

Date: May 2, 2013

Supersedes: 05-26-10

Drawn by: JP

Unit #: 60-36D-20

Diagram#: 6036D20W

Approved by:

HARNESS ENDS AT PL21 & PL20

COMPONENT CODE


C7400C	Fresh Air Sensor
J2	Power Exhaust Cap
MS7106K	Damper Actuator 24v
PL6	Male A/C Unit Plug
PL20	Female Economizer Cap
PL21	Male Smoke Plug
PL22	Female Smoke Cap
W7342A	Logic Module

WIRE COLOR CODE

BLK	Black	BLU	Blue
BRN	Brown	GRN	Green
GRY	Gray	ORG	Orange
PNK	Pink	RED	Red
TAN	Tan	VIO	Violet
WHT	White	YEL	Yellow

Revision	Change	Date
A	Added Material List for 303H14	05-26-10
B	Changed Sampling Tube	01-04-13
C	ECN# 6464	05-02-13
D	Changed Smk Det. Harness	10-14-15

CONNECTOR & CONTACT CONFIGURATION
 PL7 (300000297) CAP - (300000558) SOCKET
 J2 (300000291) CAP - (300000558) SOCKET

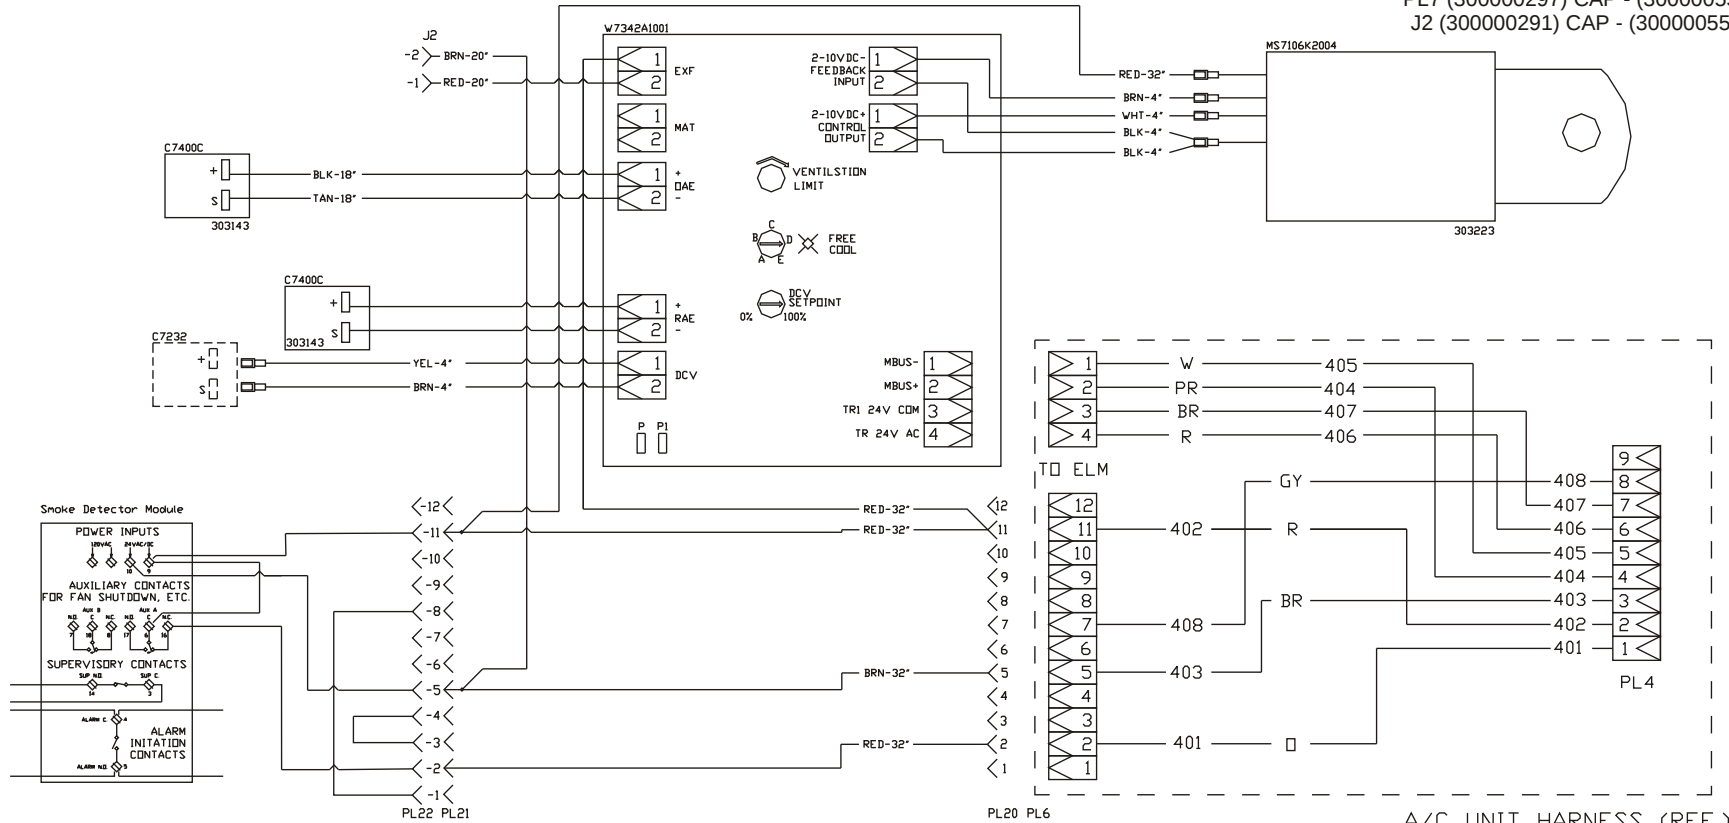

Notes:

- Unit wiring shown as reference only. Check unit wiring for actual unit wiring.
- Y2 must be energized for the compressor to operate.

Modulating Gear Economizer RKNA/LNA/JNA 036-060

RKKA/JKA/LKA/KMA/JMA/LMA/KNL/LNL/JNL 036-072

RRS ROOFTOP
SYSTEMS

1625 Diplomat Drive
 Carrollton, Texas 75006
 Phone (972) 247-7447
 Fax (972) 243-0940

Date: November 4, 2015
 Supersedes: 05-02-13
 Drawn by: JP
 Unit #: 60-36D-20S
 Diagram#: 6036D20SW
 Approved by: