


INSTALLATION INSTRUCTIONS

HYDRONIC AIR HANDLER

RW1T/RW1P/RWMV

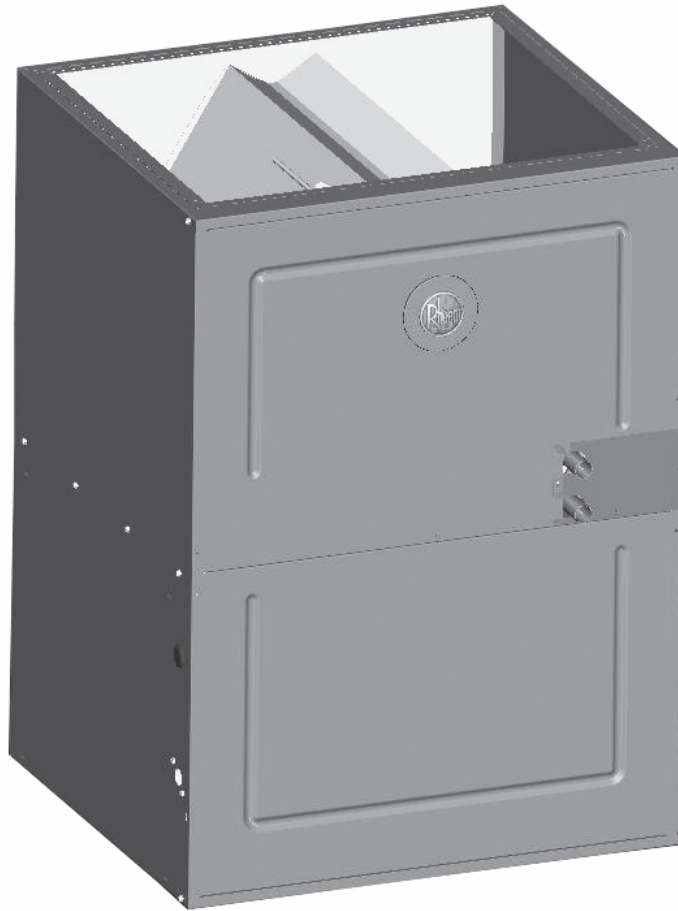

RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!

▲ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

▲ WARNING

PROPOSITION 65 WARNING: THIS PRODUCT CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

DO NOT DESTROY THIS MANUAL. PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY QUALIFIED SERVICE PERSONNEL.



SAFETY INFORMATION

▲ WARNING

WHEN AN AIR HANDLER IS INSTALLED SO THAT SUPPLY DUCTS CARRY AIR CIRCULATED BY THE AIR HANDLER TO AREAS OUTSIDE THE SPACE CONTAINING THE AIR HANDLER, THE RETURN AIR SHALL ALSO BE HANDLED BY DUCT(S) SEALED TO THE AIR HANDLER CASING AND TERMINATING OUTSIDE THE SPACE CONTAINING THE AIR HANDLER.

▲ WARNING

INSTALLATION MUST COMPLY WITH ALL INSTALLATION INSTRUCTIONS INCLUDING:

- AIR HANDLER OPERATING UNDER THERMOSTATIC CONTROL;
- RETURN AIR DUCT SEALED TO THE AIR HANDLER;
- AIR FILTERS IN PLACE;
- RETURN AIR TEMPERATURE MAINTAINED BETWEEN 55°F (13°C) AND 80°F (27°C); AND
- CLEAN AIR HANDLER, DUCT WORK AND COMPONENTS UPON SUBSTANTIAL COMPLETION OF THE CONSTRUCTION PROCESS, AND VERIFY AIR HANDLER OPERATING CONDITIONS INCLUDING FLOW RATE AND TEMPERATURE RISE, ACCORDING TO THE INSTRUCTIONS.

NOTICE

IMPROPER INSTALLATION, OR INSTALLATION NOT MADE IN ACCORDANCE WITH THE UNDERWRITERS LABORATORY (UL) CERTIFICATION OR THESE INSTRUCTIONS, CAN RESULT IN UNSATISFACTORY OPERATION AND/OR DANGEROUS CONDITIONS AND ARE NOT COVERED BY THE UNIT WARRANTY.

▲ WARNING

DUCT LEAKS CAN CREATE AN UNBALANCED SYSTEM AND DRAW POLLUTANTS SUCH AS DIRT, DUST, FUMES AND ODORS INTO THE HOME CAUSING PROPERTY DAMAGE. FUMES AND ODORS FROM TOXIC, VOLATILE OR FLAMMABLE CHEMICALS, AS WELL AS AUTOMOBILE EXHAUST AND CARBON MONOXIDE (CO), CAN BE DRAWN INTO THE LIVING SPACE THROUGH LEAKING DUCTS AND UNBALANCED DUCT SYSTEMS CAUSING PERSONAL INJURY OR DEATH (SEE FIGURE 2).

- IF AIR-MOVING EQUIPMENT OR DUCTWORK IS LOCATED IN GARAGES OR OFF-GARAGE STORAGE AREAS - ALL JOINTS, SEAMS, AND OPENINGS IN THE EQUIPMENT AND DUCT MUST BE SEALED TO LIMIT THE MIGRATION OF TOXIC FUMES AND ODORS INCLUDING CARBON MONOXIDE FROM MIGRATING INTO THE LIVING SPACE.
- IF AIR-MOVING EQUIPMENT OR DUCTWORK IS LOCATED IN SPACES CONTAINING FUEL BURNING APPLIANCES SUCH AS WATER HEATERS OR BOILERS - ALL JOINTS, SEAMS, AND OPENINGS IN THE EQUIPMENT AND DUCT MUST ALSO BE SEALED TO PREVENT DEPRESSURIZATION OF THE SPACE AND POSSIBLE MIGRATION OF COMBUSTION BYPRODUCTS INCLUDING CARBON MONOXIDE INTO THE LIVING SPACE.

NOTICE

APPLICATION OF THIS HYDRONIC AIR HANDLER SHOULD BE INDOORS. SPECIAL ATTENTION SHOULD BE GIVEN TO UNIT SIZING AND PIPING, FILLING, AND PURGING.

CAUTION

FAILURE TO FOLLOW THIS CAUTION MAY RESULT IN PERSONAL INJURY. SHEET METAL PARTS MAY HAVE SHARP EDGES OR BURRS. USE CARE AND WEAR APPROPRIATE PROTECTIVE CLOTHING.

▲ CAUTION

WHEN USED IN COOLING APPLICATIONS, EXCESSIVE SWEATING MAY OCCUR WHEN UNIT IS INSTALLED IN AN UNCONDITIONED SPACE. THIS CAN RESULT IN PROPERTY DAMAGE.

NOTICE

IN COMPLIANCE WITH RECOGNIZED CODES, IT IS RECOMMENDED THAT AN AUXILIARY DRAIN PAN BE INSTALLED UNDER ALL EVAPORATOR COILS AND UNITS CONTAINING EVAPORATOR COILS AND AIR HANDLERS USED WITH EVAPORATOR COILS THAT ARE LOCATED IN ANY AREA OF A STRUCTURE WHERE DAMAGE TO THE BUILDING OR BUILDING CONTENTS MAY OCCUR AS A RESULT OF AN OVERFLOW OF THE COIL DRAIN PAN, A STOPPAGE IN THE PRIMARY CONDENSATE DRAIN PIPING OR ANY WATER LEAK POTENTIAL FROM THE AIR HANDLER.

▲ WARNING

DO NOT OPERATE THE SYSTEM WITHOUT FILTERS. A PORTION OF THE DUST ENTRAINED IN THE AIR MAY TEMPORARILY LODGE IN THE DUCT RUNS AND AT THE SUPPLY REGISTERS. THIS RESIDUE COULD SOIL CEILINGS, WALLS, DRAPES, CARPETS AND OTHER ARTICLES IN THE HOUSE.

SOOT DAMAGE MAY OCCUR WITH FILTERS IN PLACE, WHEN CERTAIN TYPES OF CANDLES, OIL LAMPS OR STANDING PILOTS ARE BURNED.

▲ CAUTION

HORIZONTAL UNITS MUST BE CONFIGURED FOR RIGHT HAND AIR SUPPLY OR LEFT HAND AIR SUPPLY. HORIZONTAL DRAIN PAN MUST BE LOCATED UNDER INDOOR COIL. FAILURE TO USE THE DRAIN PAN CAN RESULT IN PROPERTY DAMAGE.

▲ NOTICE

CODES AND STANDARDS: IT IS THE RESPONSIBILITY OF THE INSTALLER TO FOLLOW ALL NATIONAL CODES, STANDARDS AND LOCAL ORDINANCES, IN ADDITION TO INSTRUCTIONS LAID OUT IN THIS MANUAL. THE INSTALLATION MUST COMPLY WITH REGULATIONS OF THE LOCAL BUILDING, HEATING, PLUMBING, AND OTHER CODES. WHERE LOCAL CODES ARE NOT APPLICABLE, THE INSTALLATION MUST COMPLY WITH THE NATIONAL CODES AND ANY AND ALL AUTHORITIES HAVING JURISDICTION.

▲ WARNING

IMPORTANT: All manufacturer products meet current Federal OSHA Guidelines for safety. California Proposition 65 warnings are required for certain products, which are not covered by the OSHA standards.

California's Proposition 65 requires warnings for products sold in California that contain, or produce, any of over 600 listed chemicals known to the State of California to cause cancer or birth defects such as fiberglass insulation, lead in brass, and combustion products from natural gas.

All "new equipment" shipped for sale in California will have labels stating that the product contains and/or produces Proposition 65 chemicals. Although we have not changed our processes, having the same label on all our products facilitates manufacturing and shipping. We cannot always know "when, or if" products will be sold in the California market.

You may receive inquiries from customers about chemicals found in, or produced by, some of our heating and air-conditioning equipment, or found in natural gas used with some of our products. Listed below are those chemicals and substances commonly associated with similar equipment in our industry and other manufacturers.

- Glass Wool (Fiberglass) Insulation
- Carbon Monoxide (CO)
- Formaldehyde
- Benzene

More details are available at the Websites for OSHA (Occupational Safety and Health Administration), at www.osha.gov and the State of California's OEHHA (Office of Environmental Health Hazard Assessment), at www.oehha.org. Consumer education is important since the chemicals and substances on the list are found in our daily lives. Most consumers are aware that products present safety and health risks, when improperly used, handled and maintained.

CONTENTS

Safety Precautions	1
Safety Information	2
General Information.....	4
Location Requirements and Considerations	7
Selection Procedure	9
Ducting	11
Installation	13
Plumbing.....	14
Electrical Wiring.....	17
Accessories	17
Sequence of Operation	23
Maintenance	25
Troubleshooting.....	27
Wiring Diagrams.....	28-32


PROHIBITED APPLICATIONS

RWI(-) HYDRONIC AIR HANDLERS ARE EQUIPPED STANDARD WITH STAINLESS STEEL PUMPS AND COMPLY WITH CALIFORNIA PER AB1953 AND VERMONT PER SB152 FOR USE IN AIR HANDLER AND IN AN OPEN SYSTEM WITH POTABLE WATER.

IMPORTANT: TO ENSURE PROPER INSTALLATION AND OPERATION OF THIS PRODUCT, COMPLETELY READ ALL INSTRUCTIONS PRIOR TO ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE, MAINTAIN OR REPAIR THIS PRODUCT. UPON UNPACKING OF THE AIR HANDLER, INSPECT ALL PARTS FOR DAMAGE PRIOR TO INSTALLATION AND START-UP.

GENERAL INFORMATION

FIGURE 1
THE RWI(-) SERIES HYDRONIC AIR HANDLERS ARE DESIGN-CERTIFIED BY UL

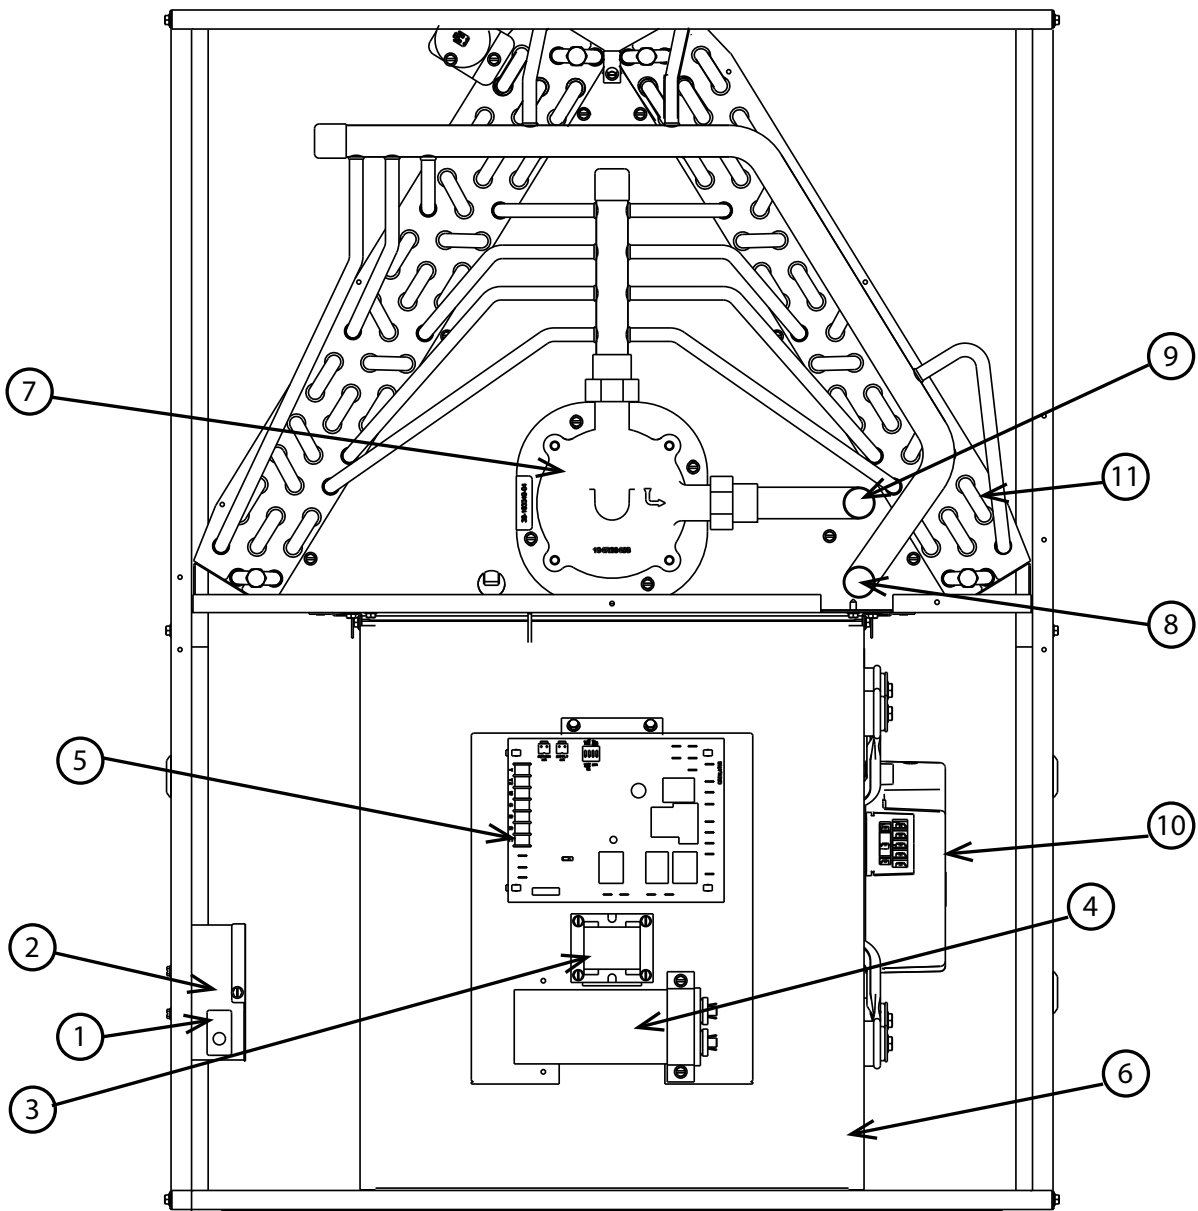


- | | |
|--------------------------------------|-------------------------------------|
| 1. DOOR SWITCH | 7. PUMP (IF REQUIRED) |
| 2. JUNCTION BOX | 8. WATER INLET (OUTLET FOR 14" HAH) |
| 3. TRANSFORMERS | 9. WATER OUTLET (INLET FOR 14" HAH) |
| 4. CAPACITORS | 10. BLOWER MOTOR |
| 5. LOW VOLTAGE (THERMOSTAT) TERMINAL | 11. HYDRONIC COIL ASSEMBLY |
| 6. BLOWER | |

ST-A1242-01-X1

GENERAL INFORMATION

FIGURE 2
THE RWMV SERIES HYDRONIC AIR HANDLERS ARE DESIGN-CERTIFIED BY UL

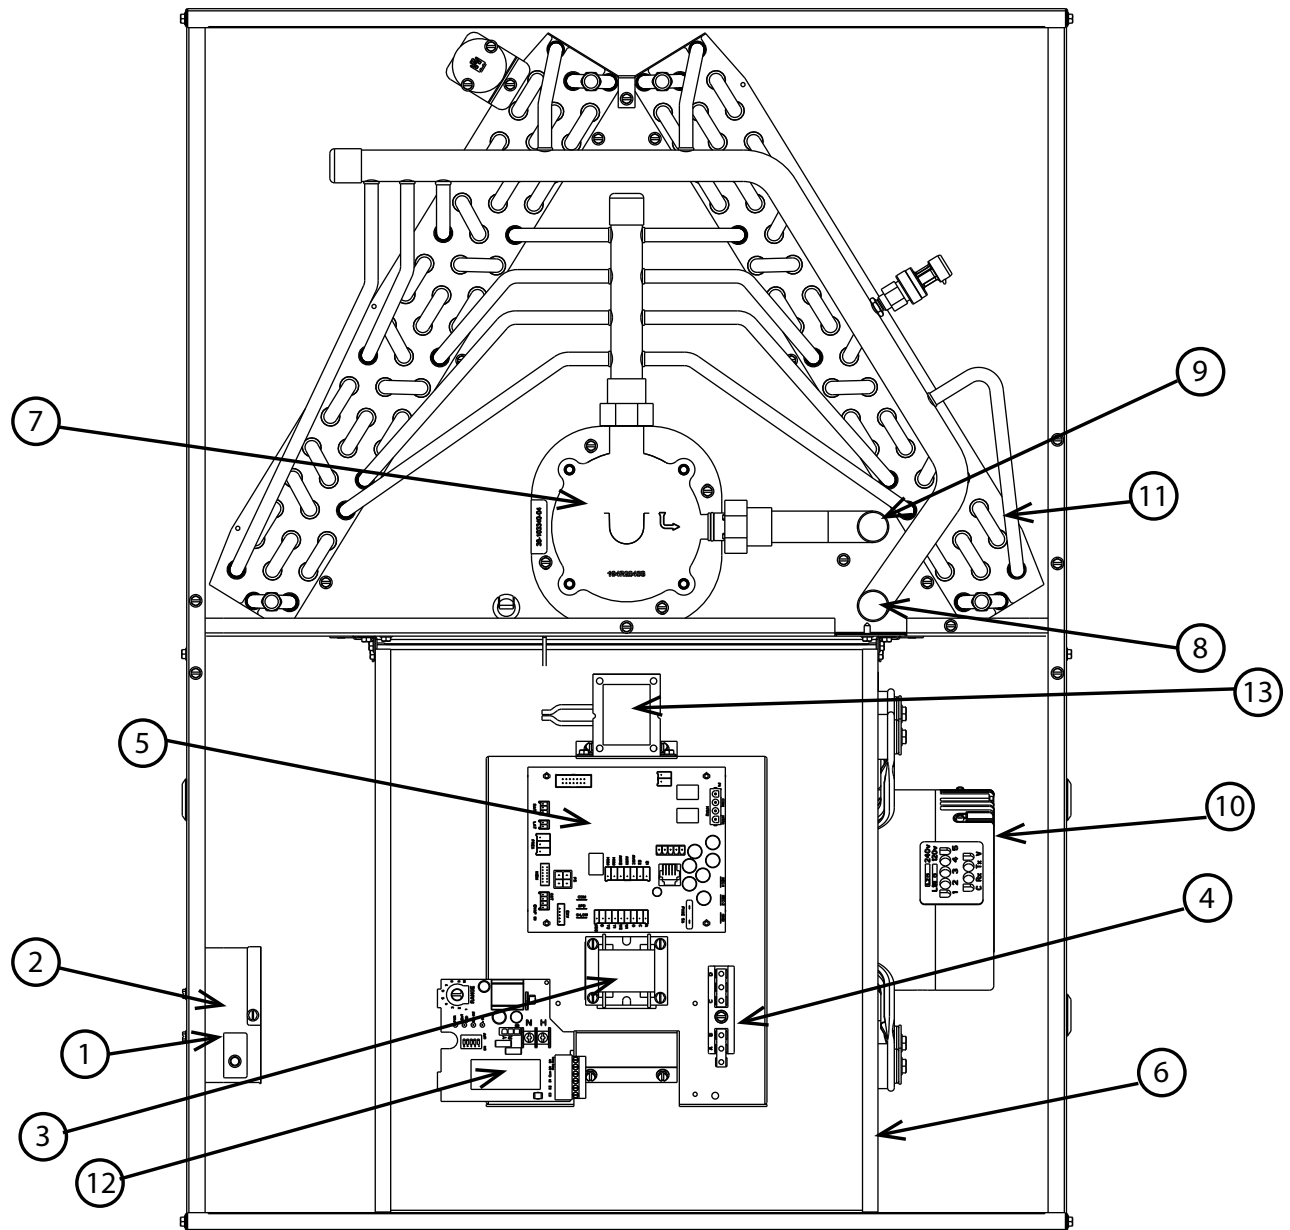

- 1. DOOR SWITCH
- 2. JUNCTION BOX
- 3. TRANSFORMERS
- 4. TERMINAL BLOCK
- 5. CONTROL BOARD
- 6. BLOWER
- 7. PUMP (IF REQUIRED)

- 8. WATER INLET (OUTLET FOR 14" HAH)
- 9. WATER OUTLET (INLET FOR 14" HAH)
- 10. BLOWER MOTOR
- 11. HYDRONIC COIL ASSEMBLY
- 12. PUMP CONTROL
- 13. CHOKE (3/4HP ONLY)

ST - A1260 - 01 - 00

IMPORTANT INFORMATION ABOUT EFFICIENCY AND INDOOR AIR QUALITY

Central cooling and heating equipment is only as efficient as the duct system that carries the cooled or heated air. To maintain efficiency, comfort and good indoor air quality, it is important to have the proper balance between the air being supplied to each room and the air returning to the cooling and heating equipment.

Proper balance and sealing of the duct system improves the efficiency of the heating and air conditioning system and improves the indoor air quality of the home by reducing the amount of airborne pollutants that enter homes from spaces where the ductwork and/or equipment is located. The manufacturer and the U.S. Environmental Protection Agency's ENERGY STAR Program recommend that central duct systems be checked by a qualified contractor for proper balance and sealing.

DUCT LEAKS CAN CREATE AN

▲ WARNING

UNBALANCED SYSTEM AND DRAW POLLUTANTS SUCH AS DIRT, DUST, FUMES AND ODORS INTO THE HOME CAUSING PROPERTY DAMAGE. FUMES AND ODORS FROM TOXIC, VOLATILE OR FLAMMABLE CHEMICALS, AS WELL AS AUTOMOBILE EXHAUST AND CARBON MONOXIDE (CO), CAN BE DRAWN INTO THE LIVING SPACE THROUGH LEAKING DUCTS AND UNBALANCED DUCT SYSTEMS CAUSING PERSONAL INJURY OR DEATH (SEE FIGURE 2).

- IF AIR-MOVING EQUIPMENT OR DUCTWORK IS LOCATED IN GARAGES OR OFF-GARAGE STORAGE AREAS - ALL JOINTS, SEAMS, AND OPENINGS IN THE EQUIPMENT AND DUCT MUST BE SEALED TO LIMIT THE MIGRATION OF TOXIC FUMES AND ODORS INCLUDING CARBON MONOXIDE FROM MIGRATING INTO THE LIVING SPACE.
- IF AIR-MOVING EQUIPMENT OR DUCTWORK IS LOCATED IN SPACES CONTAINING FUEL BURNING APPLIANCES SUCH AS WATER HEATERS OR BOILERS - ALL JOINTS, SEAMS, AND OPENINGS IN THE EQUIPMENT AND DUCT MUST ALSO BE SEALED TO PREVENT DEPRESSURIZATION OF THE SPACE AND POSSIBLE MIGRATION OF COMBUSTION BYPRODUCTS INCLUDING CARBON MONOXIDE INTO THE LIVING SPACE.

NOTICE

IMPROPER INSTALLATION, OR INSTALLATION NOT MADE IN ACCORDANCE WITH THE UL CERTIFICATION OR THESE INSTRUCTIONS, CAN RESULT IN UNSATISFACTORY OPERATION AND/OR DANGEROUS CONDITIONS AND ARE NOT COVERED BY THE UNIT WARRANTY.

NOTICE


IN COMPLIANCE WITH RECOGNIZED CODES, IT IS RECOMMENDED THAT AN AUXILIARY DRAIN PAN BE INSTALLED UNDER ALL EVAPORATOR COILS OR UNITS CONTAINING EVAPORATOR COILS OR AIR HANDLERS USED WITH EVAPORATOR COILS THAT ARE LOCATED IN ANY AREA OF A STRUCTURE DAMAGE TO THE BUILDING OR BUILDING CONTENTS MAY OCCUR AS A RESULT OF AN OVERFLOW OF THE COIL DRAIN PAN OR A STOPPAGE IN THE PRIMARY CONDENSATE DRAIN PIPING.

required for the job specification.

- Read the entire instructions before starting the installation.
- Some building codes require extra cabinet insulation and gasketing when unit is installed in attic applications.
- If installed in an unconditioned space, apply caulking around the power wires, control wires, refrigerant tubing and condensate line where they enter the cabinet. Seal the power wires on the inside where they exit conduit opening. Caulking is required to prevent air leakage into and condensate from forming inside the unit, control box, and on electrical controls.
- Install the unit in such a way as to allow necessary access to the coil/pump and blower/control compartment.
- Install the unit in a level position to ensure proper condensate drainage. Make sure unit is level in both directions within 1/8".
- Install the unit in accordance with any local code which may apply and the national codes. Latest editions are available from: "National Fire Protection

FIGURE 3

MIGRATION OF DANGEROUS SUBSTANCES, FUMES, AND ODORS INTO LIVING SPACES

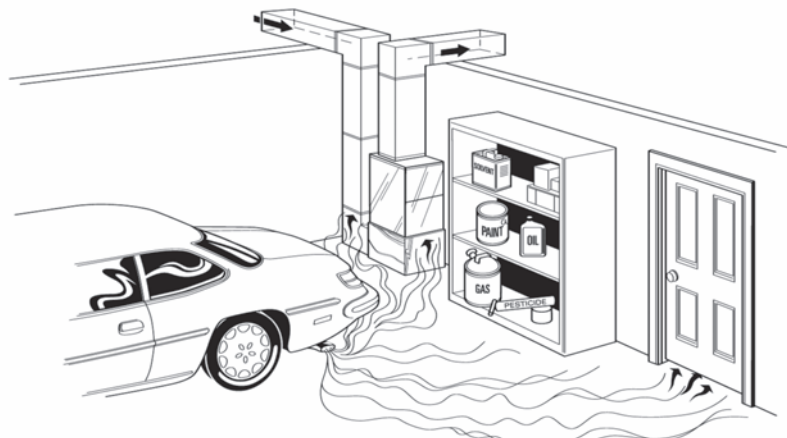

Adapted from Residential Duct Diagnostics and Repair, with permission of Air Conditioning Contractors of America (ACCA).

RECEIVING

Immediately upon receipt, all cartons and contents should be inspected for transit damage. Units with damaged cartons should be opened immediately. If damage is found, it should be noted on the delivery papers, and a damage claim filed with the last carrier.

- After unit has been delivered to job site, remove carton, taking care not to damage unit.
- Check the unit rating plate for unit size, voltage, phase, etc. to be sure equipment matches what is

Association, Inc., Batterymarch Park, Quincy, MA 02269." These publications are:

- ANSI/NFPA No. 70-(Latest Edition) National Electrical Code.
- NFPA90A Installation of Air Conditioning and Ventilating Systems.
- NFPA90B Installation of Warm Air Heating and Air Conditioning Systems.
- The equipment has been evaluated in accordance with the Code of Federal Regulations, Chapter XX, Part 3280.

LOCATION REQUIREMENTS AND CONSIDERATIONS

GENERAL INFORMATION

1. **IMPORTANT:** If installing the unit over a finished ceiling or living area, be certain to install an auxiliary condensate drain pan under the entire unit. This auxiliary drain pan should extend under any evaporator coil installed with the air handler and the open portion of the condensate drain assembly.

2. **IMPORTANT:** If using a cooling evaporator coil with this air handler:

Be sure the air passes over the coil/pump before passing over the cooling coil.

IMPORTANT: Support this unit when installed. Since this air handler is suitable for attic or crawl space installations, it may be installed on combustible wood flooring or by using support brackets.

5. **IMPORTANT: If installing in a utility room, be sure the door is wide enough to:**
 - a. allow the largest part of the air handler to pass; or
 - b. allow any other appliance (such as a water heater) to pass.
6. **IMPORTANT:** This air handler is not approved or recommended for installation on its back, with access doors facing upwards (see Figure 3).

CLEARANCE - ACCESSIBILITY

The design of air handlers with input ratings as listed in the tables under Figure 4 are certified by UL for the clearances to combustible materials shown in inches.

See name/rating plate and clearance label for specific model number and clearance information.

Service clearance of at least 24" is recommended in front of all air handlers.

NOTE: Use recommended 24" clearance if accessibility clearances are greater than fire protection clearances.

Air handlers are shipped with a bottom closure panel installed. When bottom return air is used, remove the panel by removing the two screws attaching the panel to the front base angle.


SITE SELECTION

1. Select a site in the building near the center of the proposed, or existing, duct system.
2. Locate the air handler to maintain proper clearance to combustibles as shown in the following tables.


FIGURE 4

PROHIBITED INSTALLATIONS

NOTE: MULTIPLE AIR HANDLERS CONFIGURED FOR INSTALLATION WITH A SINGLE TANKLESS WATER IS PROHIBITED.

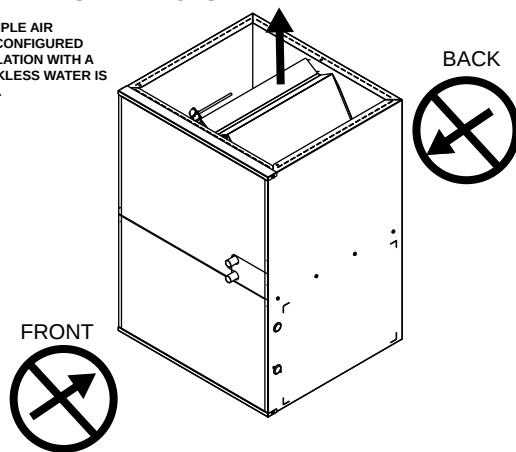

THE AIR INLET IS NOT ALLOWED TO BE AT THE FRONT OR BACK OF THE AIR HANDLER.

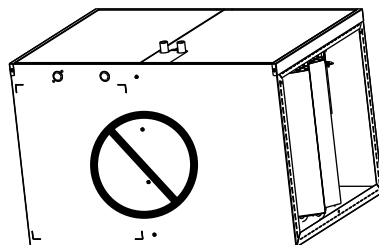



DO NOT POSITION THE AIR HANDLER ON ITS BACK OR WITH IT FACE DOWN. DO NOT CUT SIDES OF HORIZONTAL APPLICATION.

ST-A1242-02-X0

FIGURE 5
CLEARANCE TO COMBUSTIBLES, UPFLOW, HORIZONTAL LEFT OR RIGHT, DOWNFLOW

Model	A	B	C	D	E	F
RW**04A2414	14	13	13	16 ³ / ₁₆	19	3 ³ / ₈
RW**06A3617	17 ¹ / ₂	16 ¹ / ₂	16 ¹ / ₂	16 ³ / ₁₆	19	4 ⁵ / ₈
RW**08A4821	21	20	20	16 ³ / ₁₆	19	4 ⁷ / ₁₆
RW**10A6024	24 ¹ / ₂	23 ¹ / ₂	23 ¹ / ₂	17 ⁷ / ₁₆	19 ⁵ / ₈	5 ⁷ / ₁₆

Note: Service clearance of 24" is recommended in front of air handler.

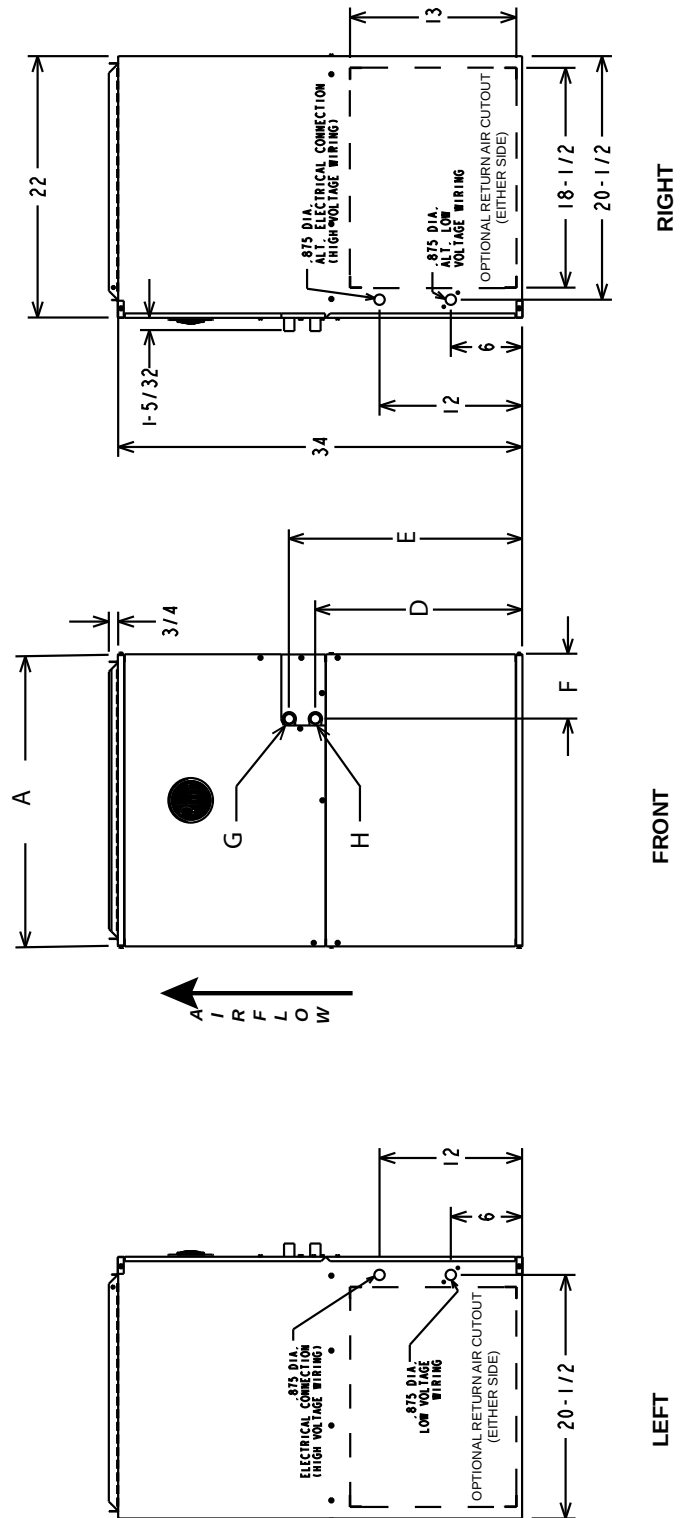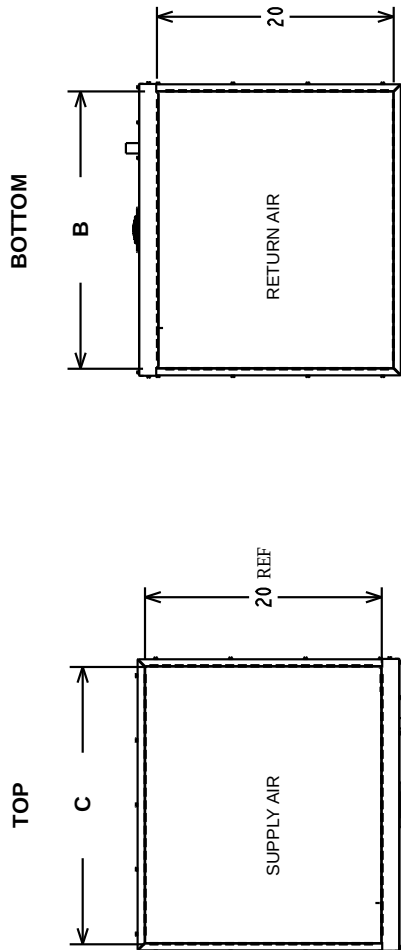

ST-A1242-03-X0

SELECTION PROCEDURE (WITH EXAMPLE)

I. Define hot water load for the total required domestic hot water usage.

As an example, let's assume that the selected Tankless Water Heater for your whole house solution is the RTG-74 and your calculated heat gain and heat loss values are as stated in section II.

II. Determine cooling and heating requirements at design conditions:

The ACCA's Manual J Residential Load Calculation method is the established trade standard, approved by ANSI, for the correct sizing and selection of Heating, Ventilation, Air-Conditioning and Refrigeration (HVACR) equipment in residential homes. The most recent revision is the eight edition, an all-inclusive new approach to ensuring that Indoor Air Quality (IAQ) systems are as efficient, safe, and healthy as possible. Refer to the Air Conditioning Contractors of America website at:

<http://www.acca.org/tech/manualj/> or a qualified HVACR contractor for further assistance.

Assumptions:

Required Cooling Capacity . 48,000 BTU/HR
(Total Capacity)

Required Heating Capacity . 60,000 BTU/HR

Evaporator Air Quantity 1600 CFM

External Static Pressure 0.2 in. W.C.

Electrical Characteristics 115-1-60

III. Determine total external static pressure (ESP) at design conditions:

Before using the Airflow Performance Table calculate the total static pressure required. From the given example, note the Wet Coil Pressure Drop (selected from the field supplied Evaporative Cased Coil Installation Instructions), and the Filter Pressure Drop. Determine both static pressures at 1600 CFM:

Wet Coil Pressure Drop 0.3 in. W.C.
(From Coil Manufacturer's Installation Instructions)

External Static Pressure . . . 0.2 in. W.C.
(Ductwork, etc.)

Filter Pressure Drop 0.08 in. W.C.
(.08 inches if the included filter is used; refer to the filter's manufacturer's instructions if another filter is used.)

Total Static Pressure . . . 0.58 in. W.C.


IV. Select unit based on required cooling capacity airflow:

For an initial selection, choose a unit size that will provide the required airflow. Refer to Airflow Performance Table. Note that at 0.6 ESP (external static pressure) the RW1T06A3617NAA unit will deliver 1560 CFM when configured for HIGH speed.

V. Select heating capacity of unit to provide the requisite design condition:

From the Hydronic Air Handler/Tankless Water Heater, note that the unit RW1T06A3617NAA, (as selected above) when matched with the RTG-95 Tankless Water Heater, will provide 59.2 MBH (59,200 BTU/HR) at an input water temperature (to Air Handler) of 150°F.

Model Number Nomenclature

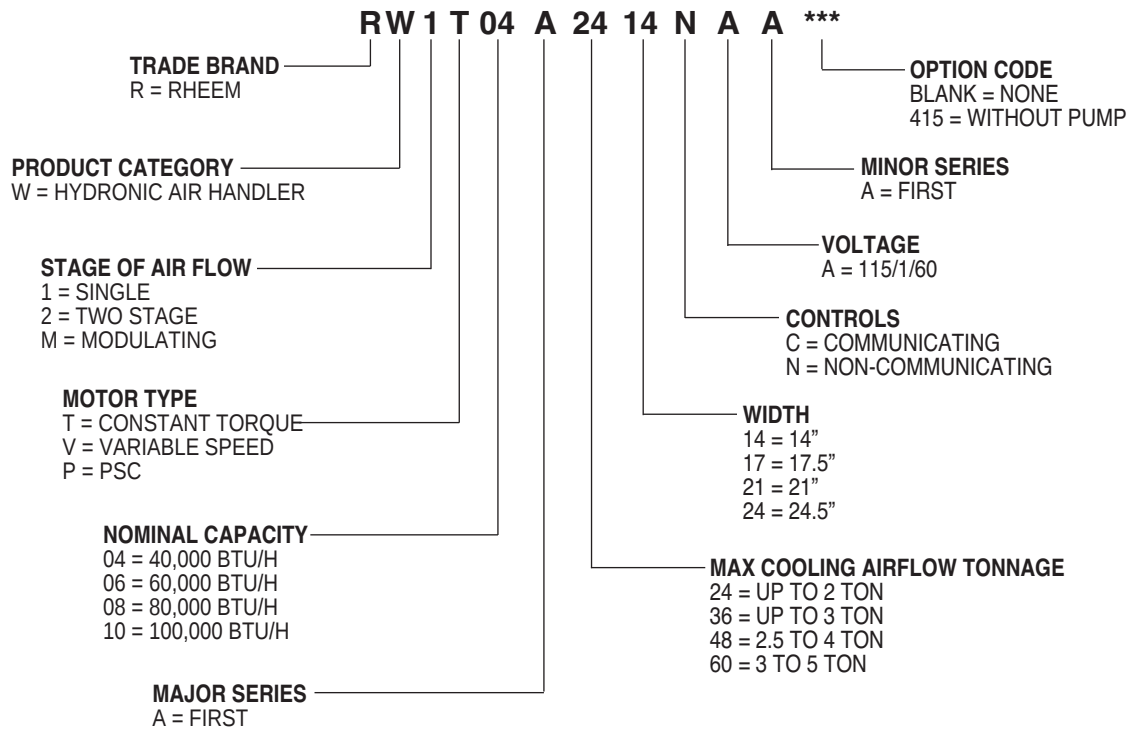

HYDRONIC AIR HANDLER ELECTRICAL PHYSICAL SPECIFICATIONS - ECO-TECH™ MODELS

Model Numbers	RW1T04A2414NAA	RW1T06A3617NAA	RW1T08A4821NAA	RW1T10A6024NAA
Nominal Heating Capacity BTU/hr [kw]	40000 [11.7]	60000 [17.6]	80000 [23.4]	100000 [29.3]
Air Side Temperature Rise* °F [°C]	32-53 [17.6-29.2]	24-43 [13.2-23.7]	25-49 [13.8-27.0]	25-46 [13.8-25.3]
Rated Heating CFM [L/s]	800 [378]	1200 [566]	1625 [767]	1800 [850]
Cooling Range CFM [L/s]	600-800 [283-556]	800-1200 [283-612]	1000-1625 [472-775]	1200-1800 [612-804]
Power Supply (V - HZ - PH)	115 - 60 - 1			
Minimum Circuit Ampacity - Amps	8	10	12.9	12.9
Max Rating of Over Current Protective Device - Amps	11.7	18	23.2	23.2
Maximum Fuse or Circuit Breaker Size - Amps	10	15	20	20
Motor HP [W]	1/3 [248]	1/2 [373]	3/4 [559]	3/4 [559]
Blower (D x W) in [mm]	10 x 6 [254 x 152]	10 x 8 [254 x 203]	10 x 10 [254 x 254]	11 x 11 [279 x 279]
Blower Motor Type	EcoTech / ECM Type			
Pump Type	Wet Rotor			
Pump Power Supply (V - HZ - PH)	115 - 60 - 1			
Pump Motor RLA/LRA - Amps	1.8			
Pump HP [W]	1/8 [.86]			
Pump Maximum Working Pressure psi [kPa]	125 [861]			
Max Working Temperature °F [°C]	160 [71]			
Water Connection Type	Copper Studs			
Inlet Water Connection Diameter in [mm]	3/4 [19]			
Out Water Connection Diameter in [mm]	3/4 [19]			
Shipping Weight LBS [kg]	91 [41]	100 [45]	122 [55]	129 [58]

Model Numbers	RW1P04A2414NAA	RW1P06A3617NAA	RW1P08A4821NAA	RW1P10A6024NAA
Nominal Heating Capacity BTU/hr [kw]	40000 [11.7]	60000 [17.6]	80000 [23.4]	100000 [29.3]
Air Side Temperature Rise* °F [°C]	32-53 [17.6-29.2]	24-43 [13.2-23.7]	25-49 [13.8-27.0]	25-46 [13.8-25.3]
Rated Heating CFM [L/s]	800 [378]	1200 [566]	1625 [767]	1800 [850]
Cooling Range CFM [L/s]	600-800 [283-556]	800-1200 [283-612]	900-1625 [424-641]	1050-1850 [472-873]
Power Supply (V - HZ - PH)	115 - 60 - 1			
Minimum Circuit Ampacity - Amps	5	10	11	11
Max Rating of Over Current Protective Device - Amps	7.0	15.3	17.6	18.2
Maximum Fuse or Circuit Breaker Size - Amps	15	15	15	15
Motor HP [W]	1/5 [93]	1/2 [373]	3/4 [559]	3/4 [559]
Blower (D x W) in [mm]	10 x 6 [254 x 152]	10 x 8 [254 x 203]	10 x 10 [254 x 254]	11 x 11 [279 x 279]
Blower Motor Type	PSC			
Pump Type	Wet Rotor			
Pump Power Supply (V - HZ - PH)	115 - 60 - 1			
Pump Motor RLA/LRA - Amps	1.8			
Pump HP [W]	1/8 [.86]			
Pump Maximum Working Pressure psi [kPa]	125 [861]			
Max Working Temperature °F [°C]	160 [71]			
Water Connection Type	Copper Studs			
Inlet Water Connection Diameter in [mm]	3/4 [19]			
Out Water Connection Diameter in [mm]	3/4 [19]			
Shipping Weight LBS [kg]	91 [41]	100 [45]	122 [55]	129 [58]


Model Numbers	RWMV04A2414NAA	RWMV06A3617NAA	RWMV08A4821NAA	RWMV10A6024NAA
Nominal Heating Capacity BTU/hur [kW]	40000 [11.7]	60000 [17.6]	80000 [23.4]	100000 [29.3]
Air Side Temperature Rise* °F [°C]	32-53 [17.6-29.2]	24-43 [13.2-23.7]	25-49 [13.8-27.0]	25-46 [13.8-25.3]
Rate Heating CFM [L/s]	800 [378]	1200 [566]	1625 [767]	1800 [850]
Cooling Rang [L/s]	500-900	500-1200	500-1600	700-1800
Power Supply (V - Hz - PH)	115-60-1			
Minimum Circuit Ampacity - Amps	7.5	9.625	12	12
Max Rating of Over Current Protective Device - Amps	11.25	17.325	21.6	21.6
Maximum Fuse of Circuit Breaker Size - Amps	15	20	25	25
Motor HP [W]	1/3 [248]	1/2 [373]	3/4 [559]	3/4 [559]
Blower (D x W) in [mm]	10 x 6 [254 x152]	10 x 8 [254 x 203]	10 x 10 [254 x 254]	11 x 11 [279 x 279]
Blower Motor Type	ECM type			
Pump Type	Wet Rotor			
Pump Power Supply (V - Hz - PH)	115-60-1			
Pump Motor RLA/LRA - Amps	1.8			
Pump HP [W]	1/8 [.86]			
Pump Maximum Workin Pressure psi [kPa]	125 [861]			
Max Working Temp °F [°C]	160 [71]			
Water connection Type	Copper Studs			
Inlet Water Connection Diameter in [mm]	3/4 [19]			
Out Water Connection Diameter in [mm]	3/4 [19]			
Shipping Weight LBS [kg]	91 [41]	100 [45]	122 [55]	129 [58]

HYDRONIC AIR HANDLER HEATING PERFORMANCE

Air Handler Model	Water Temperature			Water flow rate	Blower Speed	External static pressure	Air flow	Air Temperature			Heat Capacity
	Inlet	Outlet	Delta	(GPM)	(rpm)	(in. w.c.)	(CFM)	Inlet	Outlet	Delta	(Btu/hr)
	(°F)							(°F)			
RW1*04A	120	109	11	5.0	High	0.54	800	68.00	102	31	26,914
	130	116	14	4.6					108	36	31,488
	140	122	18	4.0					113	41	35,628
	150	129	21	3.8					119	47	40,593
	160	132	28	3.3					120	53	45,454
RW1*06A	120	96	24	4.0	High	0.59	1200	68.00	104	36	47,040
	130	101	29	3.8					110	42	54,300
	140	105	35	3.3					112	44	57,598
	150	115	35	3.4					114	46	59,348
	160	121	39	3.3					118	50	64,398
RW1*08A	120	100	20	4.8	High	0.5	1625	68.00	95	27	47,766
	130	103	27	4.2					100	32	55,703
	140	105	35	3.6					104	36	62,341
	150	108	42	3.5					110	42	74,147
	160	106	54	3.0					114	46	80,997
RW1*10A	120	93	27	4.6	High	0.5	1800	68.00	100	32	62,308
	130	98	32	4.2					103	35	67,635
	140	101	39	3.6					104	36	69,936
	150	103	47	3.6					111	43	84,130
	160	101	59	3.3					118	50	97,514

*NOTE: Capacities are based on a constant inlet water temperature supplied by a tankless water heater and do not apply to storage tank applications.

FIGURE 6
CUTOUT AND DRILL INFORMATION
UPFLOW ONLY

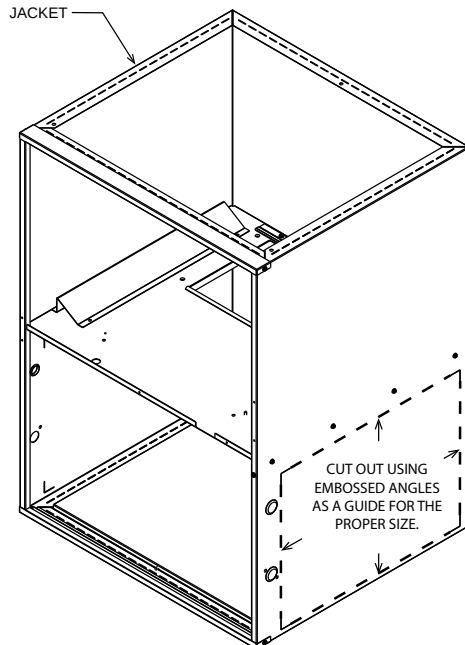

ST-A1242-04-X0

*Solid metal bottom required if side duct penetration is used.

DUCTING

Proper air flow is required for the correct operation of this air handler. Too little air flow can cause erratic operation and can damage the heat exchanger. The duct system must carry the correct amount of air for heating and cooling if summer air conditioning is used.

Size the ducts according to acceptable industry standards and methods. The total static pressure drop of the air distribution system should not exceed 0.8" w.c.

NOTE: Return air grilles and warm air registers must not be obstructed

IMPORTANT: Some high efficiency filters have a greater than normal resistance to air flow. This can adversely affect air handler operation. **BE SURE TO CHECK AIR FLOW.**

IMPORTANT: When using outside air, design and adjust the system to maintain a return air temperature ABOVE 50° F during the heating season.

UPFLOW UNITS

1. Position the unit to minimize long runs of duct or runs of duct with many turns and elbows.
2. Open the return air compartment.
 - a. Cut an opening in the side. The opening should be cut the full width of the knockouts on the unit. See Figure 5.

NOTE: Where the maximum air flow is 1800 CFM or more, both sides or the bottom must be used for return air.

3. Connect the return duct or return air cabinet to the unit. Make the connection air tight to prevent entraining combustion gases from an adjacent fuel-burning appliance.
4. **Be sure to have adequate space for the unit filter.**

NOTE: DO NOT take return air from bathrooms, kitchens, air handler rooms, garages, utility or laundry rooms, or cold areas.

NOTE: DO NOT use a rear air return.

5. If summer air conditioning (heat pump) is desired, position the indoor coil on the top of the unit. Insure that no air can bypass this coil.
6. Connect the supply air plenum to the air handler plenum opening.

HORIZONTAL UNIT

1. Position the unit to minimize long runs or runs with many turns and elbows.
2. If summer air conditioning or heat pump is desired, position the indoor coil on the supply air end of the unit. Insure that no air can bypass this coil.
3. Connect the air handler to the supply air plenum.
4. Connect the return air ducting to the return air opening of the unit. Make the connection air tight to prevent pulling combustion gases from an adjacent fuel-burning appliance.
5. **Be sure to have adequate space for the unit filter.**

NOTE: DO NOT take return air


from bathrooms, kitchens, air handler rooms, garages, utility or laundry rooms, or cold areas.

DOWNFLOW UNITS

1. Position the unit to minimize long runs of duct or runs of duct with many turns and elbows.
2. If summer air conditioning is desired, position the indoor coil on the supply air side of the unit. Insure that no air can bypass this coil.
3. Connect the furnace to the supply air plenum.
4. Connect the return air ducting to the return air opening at the top of the unit. Make the connection air tight to prevent entraining combustion gases from an adjacent fuel-burning appliance.
5. Be sure to have adequate space for the unit filter.

NOTE: DO NOT take return air from bathrooms, kitchens, furnace rooms, garages, utility or laundry rooms, or cold areas.

FIGURE 7
POSITION ORIENTATION

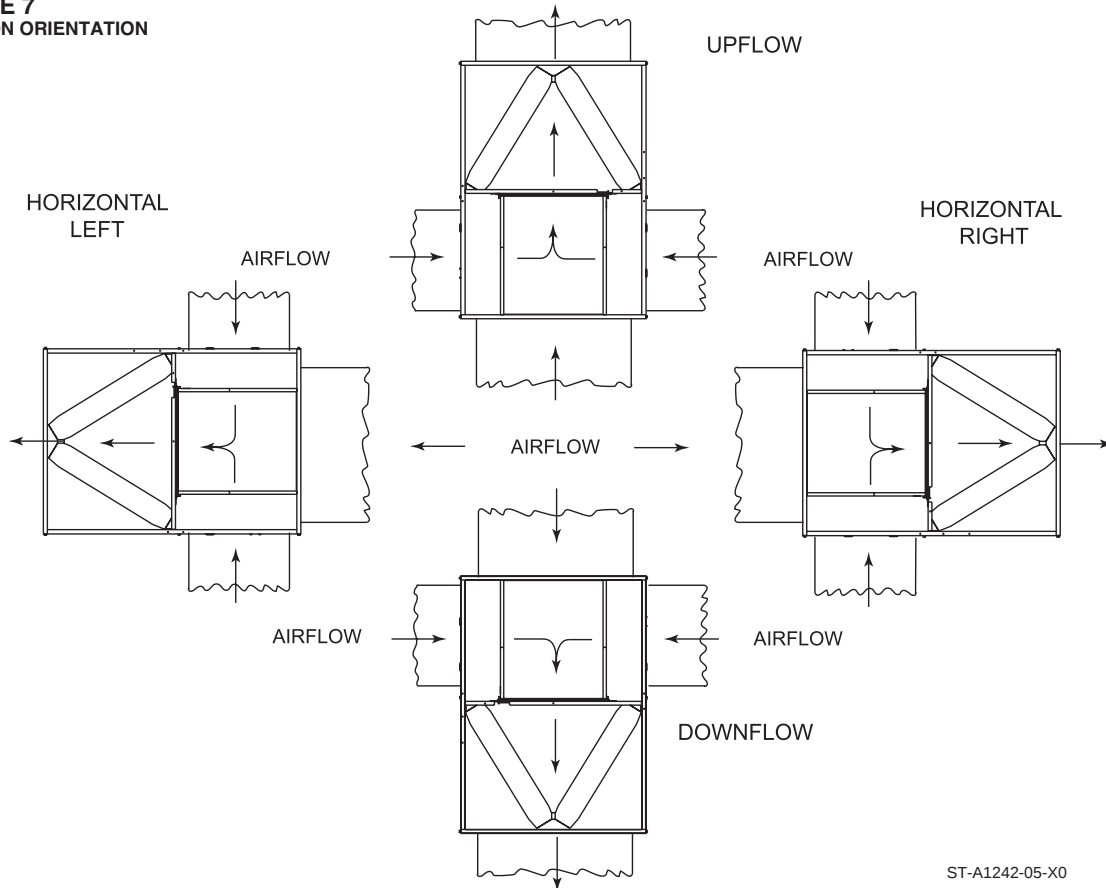

ST-A1242-05-X0

INSTALLATION

SUSPENDED CABINET INSTALLATION

If the cabinet cannot be supported on a frame or supported from the wall, it may be suspended.

Use metal strapping or threaded rod with angle iron supports under cabinet for support. These supports MUST run parallel with the length of the cabinet.

Ensure that there is adequate room to remove service and access panels after installing supporting brackets.

If an auxiliary drain pan is required, the support is to be placed under a drain pan.

▲ WARNING

IT IS THE INSTALLER'S RESPONSIBILITY TO USE AN APPROPRIATE HANGING METHOD CAPABLE OF SUPPORTING THE UNIT'S WEIGHT. REFER TO THE SPECIFICATION SECTION OF THIS DOCUMENT FOR THE RESPECTIVE UNIT'S INSTALLED WEIGHTS.

NOTICE

FOR SEISMIC HANGING REQUIREMENTS, REFER TO LOCAL CODES.

Attachment Methods Using Straps

Method 1

Use (4) #8 x 3/4 sheet metal screws for each strap. The straps should be vertical against the air handler sides and not pull away from the air handler sides.

Method 2

Fold all straps under the air handler and secure with (4) #8 x 3/4 sheet metal screws (2 screws at the side and 2 screws at the bottom. (Care must be taken not to drive the screw through the coil.)

FIGURE 8
HORIZONTAL UNIT SUSPENSION


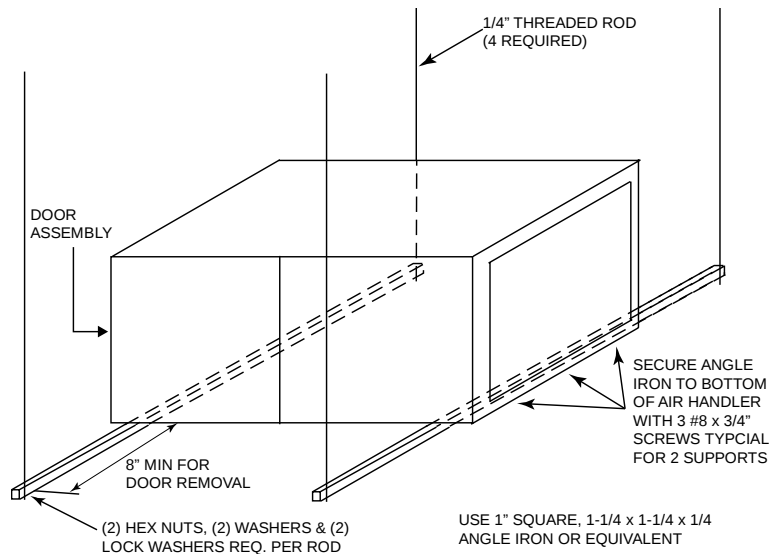


FIGURE 9
HORIZONTAL UNIT SUSPENSION WITH STRAPS

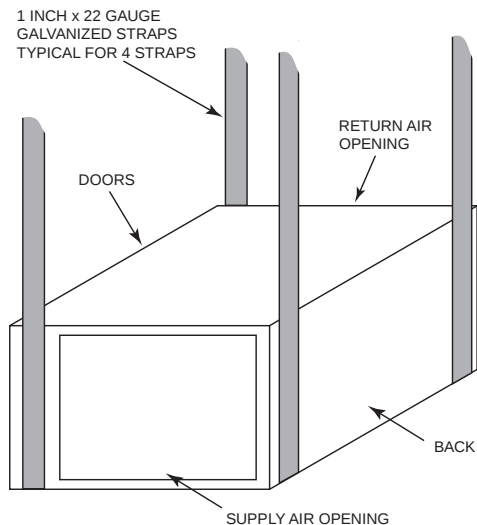

PLUMBING

Codes:

The RW1T air handler is used in potable water systems. Therefore, it is important to observe all local sanitary codes when installing water lines. The water supply mating connection to the Hydronic Air Handler is made via the two 3/4 in. dia. copper stubs labeled "WATER IN" and "WATER OUT" (see Figure 1).

All associated hydronic piping **MUST** comply with ICC, UPC and any other local codes or ordinances having jurisdiction. **USE POTABLE GRADE COPPER PIPING AND BRASS APPURTENANCES ONLY.**

Soldering Copper Tubing:

The common method of joining copper tubing in hydronic heating systems is soft soldering. Plumbing codes do not allow solders containing lead to be used for domestic water service. **USE ONLY 95/5 tin/antimony solder** for all piping systems that incorporate a domestic water supply.

NOTE: Precautions must be taken during soldering to avoid debris or solder from lodging in piping system.

Water Storage Tank:

When connecting directly to a water storage tank it is necessary to ensure the water flow rate does not become excessive. Excessive water flow can result in increased system noise and potential system damage. In order to regulate the flow it is required that an adjustable valve be placed between the air handler outlet and the storage tank Rheem Accessory HC. Furthermore, two pressure taps will need to be installed, the first located between the air handler outlet and the adjustable valve as near as possible to the outlet, and the second on the inlet water attached as near as possible to the inlet. While the water pump is engaged the adjustable valve will be closed until the pressure difference between the outlet and the inlet is greater than 13.5 PSID.

Tubing Insulation:

Any tube-conveying fluid at a temperature greater than that of the surrounding air releases heat.

Insulate all accessible hot water lines and associated valves with material, such as expanded neoprene or polyurethane 3/8-in. to 1/2-in. thick.

Match the pipe sleeve's inside diameter to the pipe's outside diameter for a snug fit. Place the pipe sleeve so the seam will be face down on the pipe. Tape, wire, or clamp insulation every foot or two to secure it to the pipe. If taping is desired, use acrylic tape instead of duct tape.

Copper Tubing Support:

Copper tubing must be properly supported to prevent sagging or buckling. On horizontal runs with hard temper tubing, the following maximum support spacing is suggested:

- 1/2 in. to 3/4 in. tube: 5 feet maximum spacing
- 1 in. to 1-1/4 in. tube: 6 feet maximum spacing

The above suggested spacing does not account for extra weight of piping components such as an expansion tank, etc. When such components are present, the piping should be supported immediately adjacent to the component.

On vertical runs, copper tubing should be supported at each floor level or at a maximum of every 10 feet.

Thermal Expansion of Piping:

In all hydronic systems, piping undergoes temperature swings as the system operates. This causes changes in the length of the piping due to thermal expansion.

If the piping is rigidly mounted, this expansion can cause annoying popping or squeaking sounds and, in extreme cases, the piping can even buckle.

To counter expansion movement, design piping circuits with sufficient elbows, tees or expansion loops (only used in large systems) or piping supports that allow the tubing to expand and contract freely.

Another alternative is to install an expansion compensator fitting capable of absorbing the movement.

Hydronic Resistance of Fittings, Valves, and Other Devices:

Before the total hydronic resistance of a piping circuit can be found, the individual hydronic resistances of all fittings, valves, or other such components must be determined. One approach is to consider each fitting, valve, or other device as an equivalent length of copper tube of the same pipe size (see Table 1).

By using the equivalent length of piping for all components in the circuit, the circuit can be treated as if it were a single piece of pipe having a length equal to the sum of the actual pipe length, the total equivalent lengths of all fittings, valves, or other devices. Refer to Figure 9 and the calculation of equivalent lengths.

Pipe Sizing Considerations:

When selecting a pipe size for a given flow rate, the resulting average flow velocity should be between 2 and 4 feet per second.

At water flow velocities of approximately 2 feet per second, flowing water will carry air bubbles along a vertical pipe. Average flow velocities of 2 feet per second or higher can draw along air bubbles in a downward flow. At the above stated velocities air bubbles shall be routed to an air separator where they can be collected and discharged from the system. Use Taco 4900 series air separator, Model 49-075, or equivalent (field supplied).

Average flow velocities higher than 4 feet per second could cause flow noise and should be avoided.

Expansion Tank:

All liquids used in hydronic heating systems expand when heated. For all practical purposes, liquids are incompressible. Any container completely filled with a liquid and sealed from the atmosphere will experience a rapid increase in pressure as the liquid is heated.

To prevent this from occurring, all closed-loop hydronic systems **MUST** be equipped with an expansion tank. Refer to expansion tank manufacturer's instructions for proper sizing and installation.

Water circulation:

The hydronic air handler has a strict in press cycle which will circulate the water in the coil for 6 minutes per day to prevent water stagnation.

PROCEDURE FOR CALCULATING THE TOTAL EQUIVALENT LENGTH OF PIPE

Given piping assembly as shown in Figure 9 below, what is the total equivalent length of the system?

First determine the total straight pipe lengths; next refer to Table 1 to determine the equivalent straight pipe length for each fitting shown. Add together the equivalent lengths of piping and fittings.

(3/4") Tubing 24 ft.
 7 (3/4") 90 deg. Elbows 7 (1.9) = 13.3 ft.
 5 (3/4") Side Port Tees 5 (3.8) = 19.0 ft.
 1 (3/4") Taco air separator = .3 ft.
 2 (3/4") Ball Valve 2 (.2) = .4 ft.

Total Equivalent Length = 57 ft.

NOTICE

WHERE POSSIBLE THE LENGTH OF PIPE SHOULD NOT EXCEED 100 FEET TOTAL EQUIVALENT LENGTH.


ANY PIPING RUNNING THROUGH UNCONDITIONED SPACE MUST BE INSULATED TO PREVENT HEAT LOSS, AND POSSIBLE FREEZING OF THE LINE.

STICKERS INDICATING DIRECTION OF FLOW (WATER IN AND WATER OUT) ARE LABELED ON THE OUTSIDE OF THE CABINET. DO NOT REVERSE THESE LINES, AS THIS WILL CAUSE THE UNIT TO MALFUNCTION.

Piping Configuration

When employing a Tankless Water Heater in a hydronic system, the system is considered an open-loop system when configured to simultaneously deliver both domestic hot water and space heating. By definition, if the circuit is sealed off from the atmosphere at all locations (as is true for most modern hydronic systems), it is called a **closed-loop system**. If the circuit is open to the atmosphere at *any point*, it is called an **open-loop system**.

**FIGURE 10
EQUIVALENT LENGTH CALCULATION**

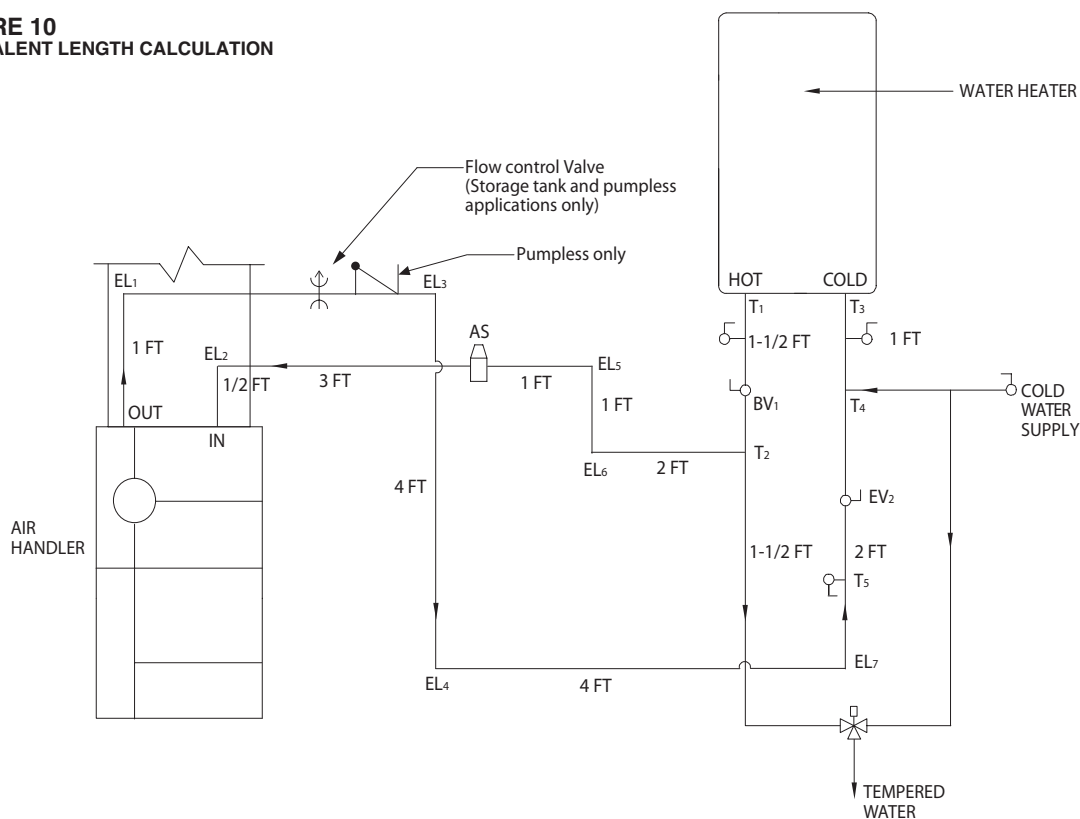

ST-A1242-09-00

Table 1 – Equivalent Length of Straight Pipe for Valves and Fittings (ft)

	Diameter (in.)					
	0.375	0.5	0.75	1	1.25	1.5
Globe Valve	14.1	18.8	28.1	37.5	46.9	56.3
Angle Valve	6.3	8.3	12.5	16.7	20.8	25.0
Gate Valve	0.5	0.7	1.1	1.4	1.8	2.1
Ball Valve (BV)	0.1	0.1	0.2	0.3	0.3	0.4
90 Degree Standard Elbow	0.9	1.3	1.9	2.5	3.1	3.8
45 Degree Standard Elbow	0.5	0.7	1.0	1.3	1.7	2.0
Standard Tee with flow through run	0.6	0.8	1.3	1.7	2.1	2.5
Standard Tee with flow through branch	1.9	2.5	3.8	5.0	6.3	7.5

*Optional for pump only and storage tank water heaters.

Open-Loop System

If piping is done in accordance with the recommended schematic diagram shown in Figure 10, the following purge and priming procedure applies.

PURGING AND PRIMING THE SYSTEM:

The following procedure describes how the system may be piped to eliminate the need for a "purge cart" to fill the system and remove entrapped air bubbles.

STEP 1: CLOSE the air separator venting valve.

STEP 2: CLOSE ball valve 3 (BV₃);

STEP 3: OPEN drain valve 3 (DV₃) to which a hose MUST be connected and draining to a sink, drain or outdoors.

STEP 4: CLOSE drain valves 1 & 2 (DV₁ and DV₂) and OPEN ball valve 2 (BV₂).

STEP 5: OPEN cold water supply main valve (ball valve 1 - BV₁). The system will begin the prime/purge process using the street pressure. Entrapped air bubbles being pushed out of the system will be evident by a slight vibration of the discharge hose connected to drain valve 3 (DV₃). The hose will stop vibrating when laminar flow is achieved.


STEP 6: CLOSE drain valve 3 (DV₃);

STEP 7: OPEN ball valve 3 (BV₃). The system is now purged, primed and ready to go.

STEP 8: OPEN the air separator venting valve.

NOTE: For an open-loop system, use expansion tank approved for potable water use only.

FIGURE 11
TYPICAL PIPING ARRANGEMENT FOR DIRECT SPACE HEATING AND DOMESTIC WATER SUPPLY WITH TANKLESS

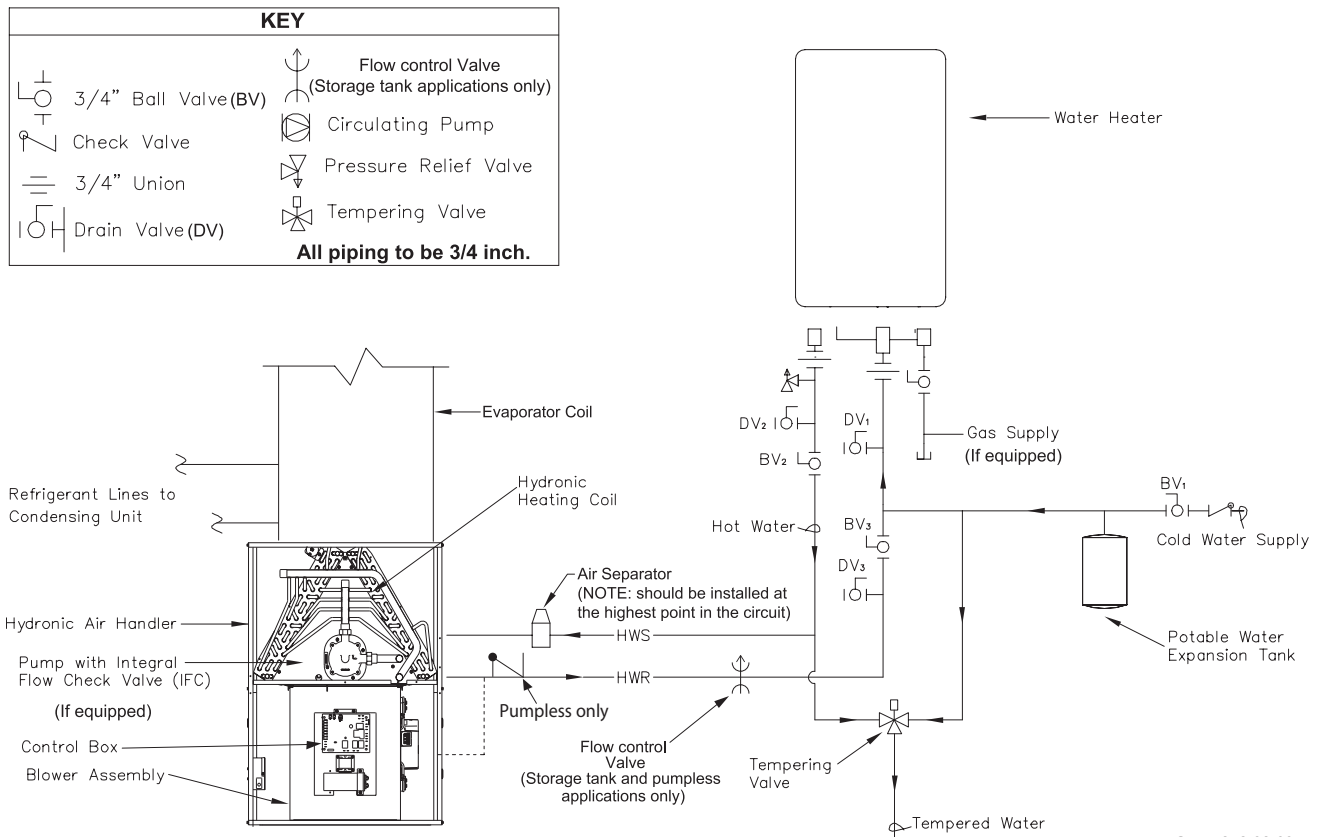

ELECTRICAL WIRING

▲ WARNING

TURN OFF ELECTRIC POWER AT FUSE BOX OR SERVICE PANEL BEFORE MAKING ANY ELECTRICAL CONNECTIONS. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

▲ WARNING

THE CABINET MUST HAVE AN UNINTERRUPTED GROUND ACCORDING TO THE LATEST EDITION OF THE NATIONAL ELECTRICAL CODE (NEC), ANSI/NFPA70- OR IN CANADA, THE CANADIAN ELECTRICAL CODE, CSA-C221 OR LOCAL CODES THAT APPLY. DO NOT USE GAS PIPING AS AN ELECTRICAL GROUND. A GROUND SCREW IS PROVIDED IN THE JUNCTION BOX. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK, RESULTING IN PERSONAL INJURY OR DEATH.

▲ WARNING

THIS AIR HANDLER IS EQUIPPED WITH A BLOWER DOOR SAFETY SWITCH. DO NOT DISABLE THIS SWITCH. FAILURE TO FOLLOW THIS WARNING CAN RESULT IN ELECTRICAL SHOCK, PERSONAL INJURY OR DEATH.

IMPORTANT: The air handler must be installed so that the electrical components are protected from water (condensate).

Before proceeding with the electrical connections, be certain that the voltage, frequency and phase corresponds to that specified on the air handler rating plate. For single air handler application, maximum over-current protection is 15 amperes.

▲ CAUTION

IF A DISCONNECT SWITCH IS TO BE MOUNTED ON THE UNIT, SELECT A LOCATION WHERE A DRILL OR FASTENER WILL NOT CONTACT ELECTRICAL OR HYDRONIC COMPONENTS. ELECTRICAL SHOCK CAN CAUSE PERSONAL INJURY OR DEATH.

NOTE: Prior to making any electrical connections, ensure that supply voltage, frequency, and phase are as specified on unit rating plate.

Check to ensure that the existing electrical service is adequate to handle the additional load imposed by the Hydronic Air Handler. Refer to unit wiring diagram for proper electrical connections.

All electrical connections **MUST** comply with NEC and any other local codes or ordinances having

jurisdiction. **USE COPPER WIRE ONLY.** Provide separate branch electric circuit with field supplied disconnect switch.

Location of disconnect switch to be in clear site, accessible and in close proximity to the unit.

Correct polarity **MUST** be maintained for 115 V wiring. If polarity is incorrect, unit will **NOT** operate.

Use a separate fused branch electrical circuit containing a properly sized fuse or circuit breaker. Run this circuit directly from the main switch box to an electrical disconnect that is readily accessible and located near the air handler. Connect from the electrical disconnect to the junction box on the left side of the air handler, inside the blower compartment. For the proper connection, refer to the appropriate wiring diagram located on the inside cover of the air handler control box and in these instructions.

The electrical junction box may be moved to the right side if necessary. A knockout is provided. Seal the opposite hole with plug provided.

Make all electrical connections in accordance with the latest edition of the National Electrical Code, ANSI/NFPA70 and local codes having jurisdiction.

These may be obtained from:

National Fire Protection
Association, Inc.
Batterymarch Park
Quincy, MA 02269

CSA - International
178 Rexdale Blvd.
Etobicoke (Toronto), Ontario
Canada M9W, 1R3

THERMOSTAT

The room thermostat must be compatible with the integrated air handler control on the air handler. Generally, all thermostats that are not of the "current robbing" type are compatible with the integrated air handler control. The low voltage wiring should be sized as shown (see Figures 12 and 13, 12A and 13A).

NOTE: Do not use 24 volt control wiring smaller than No. 18 AWG.

Install the room thermostat in accordance with the instruction sheet packed in the box with the thermostat. Run the thermostat lead wires inside the blower compartment and connect to low voltage terminals as shown on the wiring diagram. Never install the thermostat on an outside wall or where it will be influenced by drafts, concealed hot or cold water pipes or ducts, lighting fixtures, radiation from fireplace, sun rays, lamps, televisions, radios or air streams from registers. Refer to instructions packed with the thermostat for "heater" selection or adjustment.

ACCESSORIES

FIELD-INSTALLED OPTION ACCESSORIES

ELECTRONIC AIR CLEANER

Line voltage power can be supplied from the screw terminal "EAC" and a line voltage neutral screw terminal on the control board. This will power the electronic air cleaner whenever the circulating air blower is in operation.

Expansion Tank:

Expansion tank for closed systems
air separator – TACO Model 49-075.

FIGURE 12
FIELD WIRING DIAGRAM

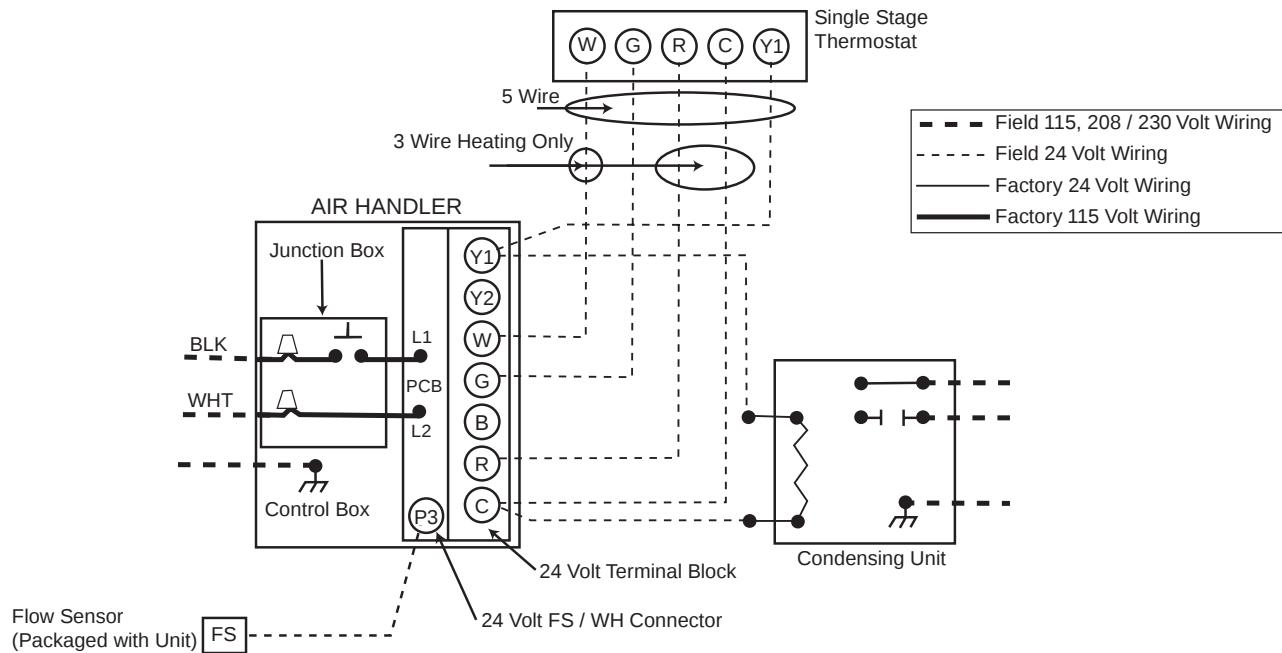


FIGURE 13
THERMOSTAT WIRING DIAGRAMS
MODULATING AIR HANDLER W/SINGLE STAGE A/C


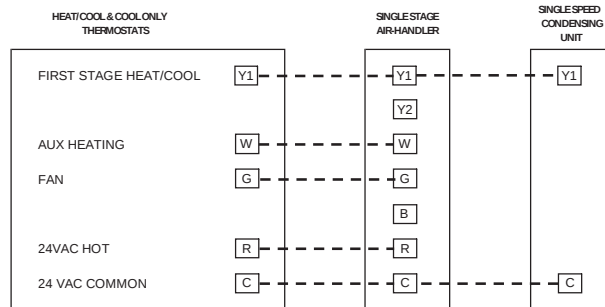


FIGURE 14
THERMOSTAT WIRING DIAGRAMS
MODULATING AIR HANDLER W/SINGLE STAGE HEAT PUMP*

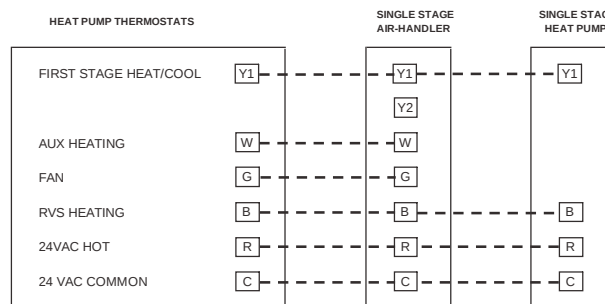

*Requires Fossil Fuel Kit
Refer to Kit for further wiring instructions.

FIGURE 12A
FIELD WIRING DIAGRAM

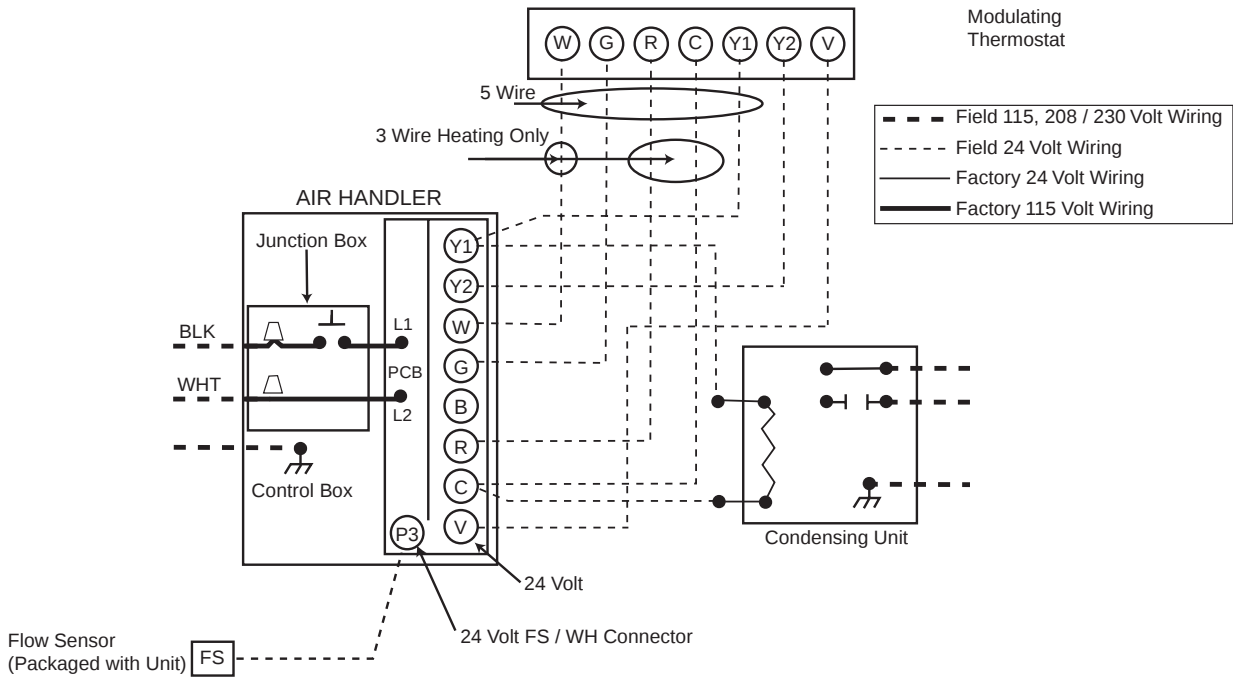


FIGURE 13A
THERMOSTAT WIRING DIAGRAMS
MODULATING AIR HANDLER W/SINGLE STAGE A/C


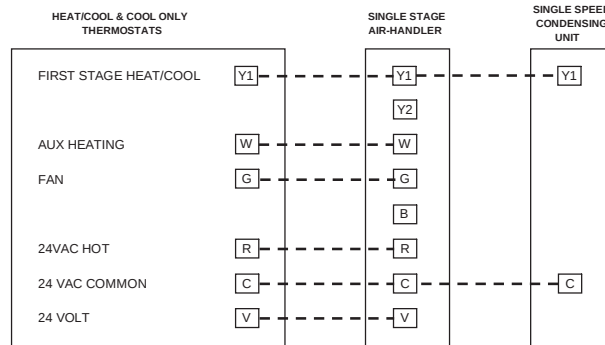


FIGURE 14A
THERMOSTAT WIRING DIAGRAMS
MODULATING AIR HANDLER W/SINGLE STAGE HEAT PUMP*

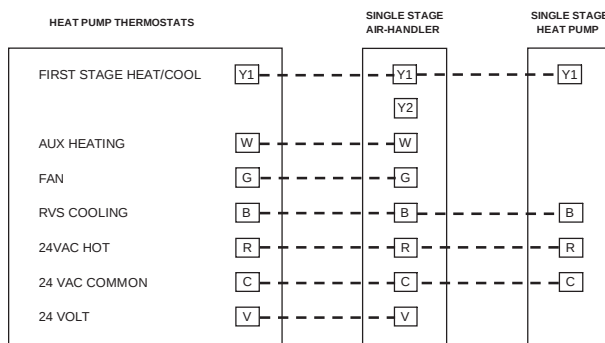

*Requires Fossil Fuel Kit
Refer to Kit for further wiring instructions.

System Low Voltage Wiring Diagrams

NOTE: Local codes may require thermostat wiring to be routed through conduit or raceways. In such instances splices can be made inside the Hydronic Air Handler. All wiring must be NEC Class I and must be separated from incoming power leads.

Provide field-supplied disconnect for maximum fuse or circuit breaker sizes, as required by code.

Transformer is factory wired for 115V operation.

The secondary circuit of the transformer is protected by a 3-amp fuse mounted on the printed circuit board.

Dip Switch Options:

Refer to the appropriate diagram for the proper dip switch setting to be used with the designed application (Figure 17).

THERMOSTAT INSTALLATION:

Thermostat should be mounted:

- approximately 5 ft. (1.5 m) from floor

- close to or in a frequently used room, preferably on an inside, partitioning wall
- on a section of wall without pipes or duct work.



Thermostat should NOT be mounted:

- close to a window, on an outside wall, or next to a door leading to the outside.

TABLE 1

Wire Gauge	Maximum Distance (feet)
18 gauge	60
16 gauge	100
14 gauge	160
12 gauge	250



FIGURE 15
HYDRONIC AIR-HANDLER CONTROL BOARD (NON-MODULATING)

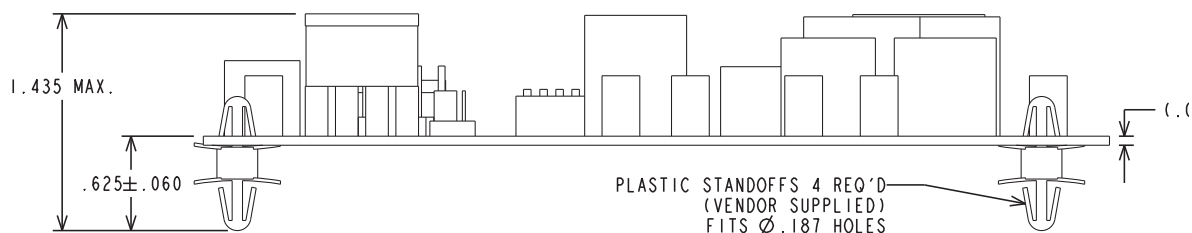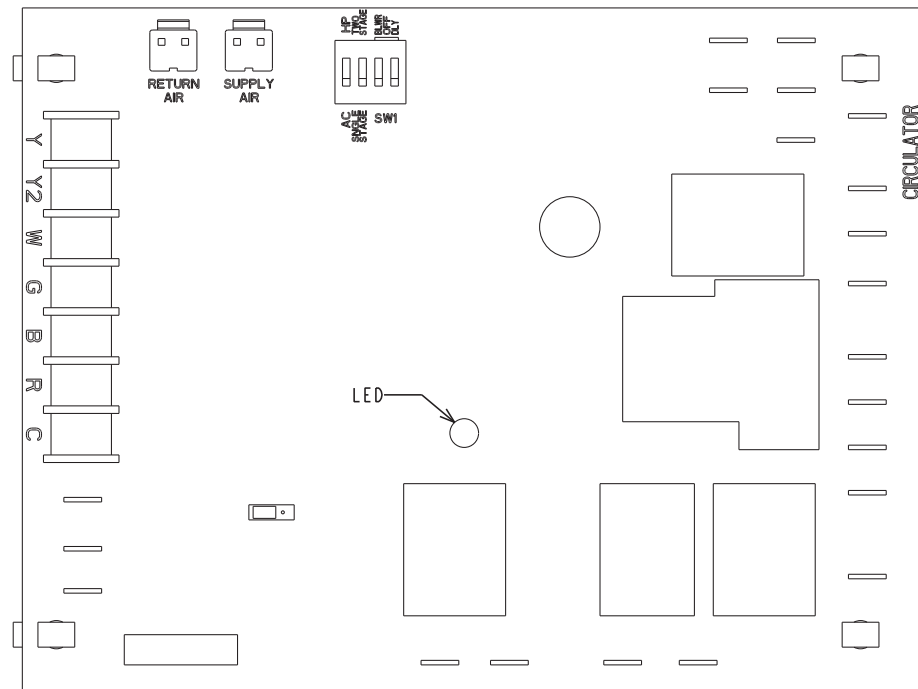

NOTES:

1. For proper operation of an open loop system (refer to Figures 11 and 17), the jumper (shunt) position on PCB point "P7" should be in the FS position.
2. When changing shunt position ensure that unit power is turned off.

FIGURE 15A
HYDRONIC AIR-HANDLER CONTROL BOARD (MODULATING)

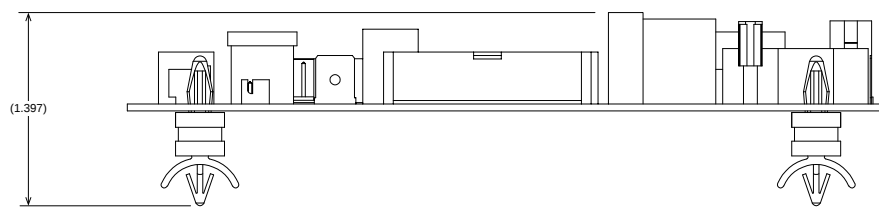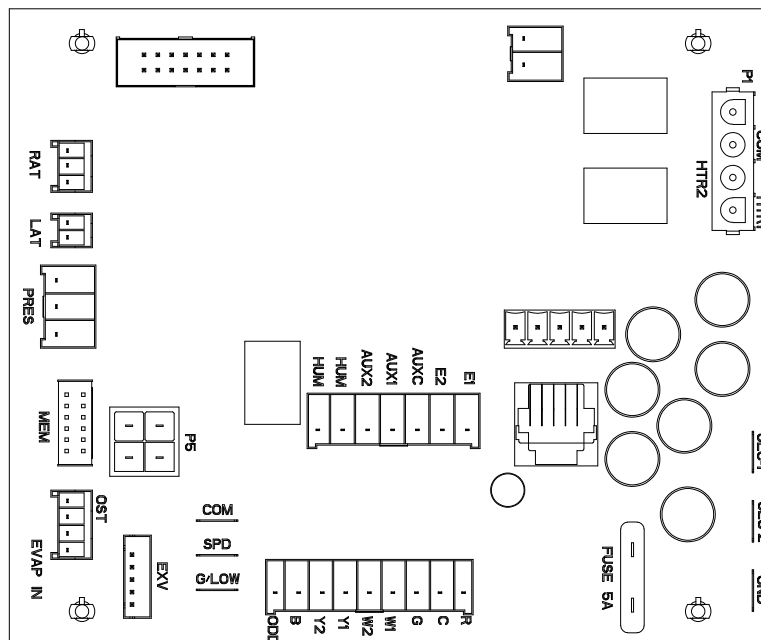


NOTES:

1. For proper operation of an open loop system (refer to Figures 11 and 17), the jumper (shunt) position on PCB point "P7" should be in the FS position.
2. When changing shunt position ensure that unit power is turned off.

- exposed to direct light and heat from a lamp, sun, fireplace, or other heat-radiating object which may cause a false reading.
- close to or in direct airflow from supply registers and return-air grilles
- In areas with poor air circulation, such as behind a door or in an alcove

Refer to thermostat wiring diagram and thermostat installation instructions for further details.

FIGURE 16
DIP SWITCH POSITIONS

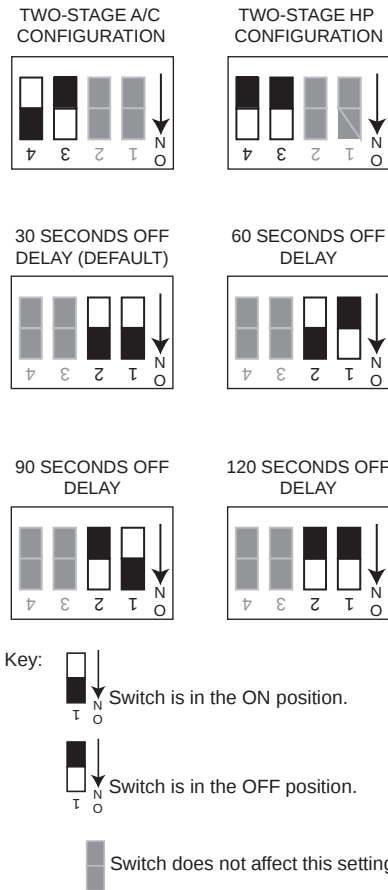

START-UP PROCEDURE (HEATING ONLY):

The following conditions must be met prior to unit start-up.

Debris from soldering and/or other installation activities can cause equipment failure. Ensure that all associated lines and appurtenances are free of debris.

Check to ensure that unit is secure.

Check that blower wheel rotates freely within the scroll housing.

Check all wiring to ensure that connections are tight.

Check all ductwork and pipe connections to ensure proper seal.

Check to ensure that all packaging wraps are removed from equipment.

Ensure that front access doors are properly installed.

Check to ensure proper connection(s) to the appropriate blower speed tap (Heat /Cool – High and Low). Refer to Dry Air Delivery Table and/or the appropriate wiring diagram(s) in this manual.

Perform all safety and start-up checks for Tankless Water Heater as per manufacturer's instructions.

Having verified all preceding checks, the Air Handler's Start-Up Procedure is as follows:

STEP 1: Purge and fill system; follow appropriate purging procedure as laid out in this manual in section titled "Purging and Priming the System".

STEP 2: Turn on power supply to air handler. Caution: blower and/or circulator may start to operate if thermostat is on and a call is present.

STEP 3: Turn thermostat ON and switch system to the heating mode. The thermostat shall be set higher than the actual room temperature; this will cause the circulator to energize and initiate the heating cycle. (If the pump does not start, or the Air Handler is not producing heat, refer to the Troubleshooting Section, in this manual).

STEP 4: Program room thermostat as desired by homeowner.

START-UP PROCEDURE (COOLING SYSTEM)

Refer to field-supplied evaporator coil and outdoor unit manufacturer's Installation Instructions for system hook-up, start-up instructions and refrigerant-charging method details.

TROUBLESHOOTING BLOWER AND/OR PUMP MOTOR AND CONTROLS

If blower and/or pump motor does not run:

Turn OFF power and check the following:

1. Check that door switch is in the CLOSED position.
2. Check 3 amp fuse on Printed Circuit Board (PCB).
3. Check for 24 VAC between COM and 24 VAC on IAC. If no voltage is present, check transformer.
4. Check all connections for kinks which could cause loose connections. Ensure connections are secure.
5. Verify that approximately 120 VAC is present across L1 and L2.

LED FAULT CODES ON CONTROL BOARD

The control board of the air handler has an LED light that flashes in a number sequence for a given fault condition. Below is a summary of what the flashes mean.

- 1 - Fault displayed when supply sensor open or shorted
- 2 - Fault displayed when return sensor open or shorted
- 3 - Fault displayed when heat mode active
- 4 - Displayed when in five minute delay

SEQUENCE OF OPERATION

COOLING

Single Stage Cooling

- When the thermostat calls for cooling (Y), there is a 1 second delay then the control energizes the high blower tap (COOL_HI).
- When the thermostat ends the call for cooling (Y), there is a 30 second cooling off delay then the control de-energizes the high blower tap (COOL_HI).
- A call for cooling has priority over continuous fan.

HEATING (HYDRONIC)

- On a call for heating the pump will start.
- After a sixty second delay the control will look at the FS jumper if this is jumpered the control will go into water heating mode and ignore the temperature sensors.
- If the air supply temperature is greater than 85°F the control will energize the indoor blower. If the air temperature is less than 85°F the control will turn off the pump and go into a 5 minute delay.
- If the supply temperature is adequate the main blower will then be energized and run for 30 seconds.
- After the 30 second delay the control will monitor the supply temperature. If this drops the control will turn off the pump and go into a 5 minute delay. If the temperature is greater than the shut off temperature the control shall remain in heating mode.
- There must be a minimum delta of 10°F to remain in the heating mode.
- When the W call ends the pump shall de-energize the blower shall turn off after a blower off delay.

The FS input shall be used to allow a way to bypass the system to allow it to run. If this is jumpered the control will ignore the temperature and go into a heating cycle.

HEATING (Heat pump is the primary source of heat)

Single Stage Heating

- The thermostat calls for heating (Y, R, and B), there is a 1 second delay then the control energizes the high

blower tap (COOL_HI).

- When the thermostat ends the call for cooling (Y), there is a 30 second cooling off delay then the control de-energizes the high blower tap (COOL_HI).
- When the thermostat calls for emergency heat (W), the hydronic heating mode is activated.

BLOWER TIME DELAY (HEATING OR COOLING)

All models are equipped with a blower time delay (BTD) in lieu of a blower relay (BR) (see Figure 19). The blower will run for 30 seconds after the blower time delay (BTD) is de-energized.

DEFROST (DEFROST HEAT CONTROL)

- For sequence of operation of defrost controls, see outdoor heat pump installation instructions.
- Supplemental heat during defrost can be provided by connecting the purple (PU) pigtail in the outdoor unit to the W on the thermostat. This will complete the circuit between R and W through a set of contacts in the defrost relay (DR) when the outdoor heat pump is in defrost. This circuit, if connected, will help prevent cold air from being discharged from the indoor unit during defrost.
- For most economical operation, if cold air is not of concern during defrost, the purple wire can be left disconnected. Supplemental heat will then come on only when called for by second stage room thermostat.

EMERGENCY HEAT (HEATING HEAT PUMP)

- If selector switch on thermostat is set to the emergency heat position, the heat pump will be locked out of the heating circuit, and all heating will be hydronic heat. Jumper should be placed between W and E on the thermostat sub-base so that the electric heat control will transfer to the first stage heat on the thermostat. This will allow the indoor blower to cycle on and off with the electric heat when the fan switch is in the auto position.

ROOM THERMOSTAT (ANTICIPATOR SETTING)

See instructions with outdoor section, condensing unit or heat pump for recommended room thermostats.

- The thermostat should be mounted 4 to 5 feet above the floor on an inside wall of the living room or a hallway that has a good air circulation from the other rooms being controlled by the thermostat. It is essential that there be free air circulation at the location of the same average temperature as other rooms being controlled. Movement of air should not be obstructed by furniture, doors, draperies, etc. The thermostat should not be mounted where it will be affected by drafts, hot or cold water pipes or air ducts in walls, radiant heat from fireplaces, lamps, the sun, T.V. or an outside wall. See instructions sheet packaged with thermostat for mounting and installation instructions.

MODULATING HEATING (HYDRONIC)

On a call for heat, the pump will start.

After a two-minute delay the control will start monitoring the supply air temperature sensor.

If the air supply temperature is greater than 85°F the control will energize the indoor blower. If the air temperature is less than 85°F the control will go into a 5-minute delay.

The pump control will then begin to control the system to try and maintain a delta between the inlet water temperature and the supply air temperature. There is an adjustment on the pump control 1 to 10. Each point is a difference of 5 degrees. A setting of 4 will provide a 20°F difference between the air and the water temperatures.

Example: 120° Water inlet a setting of 4 will provide 100°F leaving air temperature.

If the supply air drops below 85°F for 30 seconds the control will go into a 5-minute delay and restart the heating cycle if necessary.

TABLE 2

HYDRONIC AIR HANDLER AIR FLOW PERFORMANCE - ECHO TECH MODELS																
Model	Blower Size in [mm]	Motor HP [Watt]	Blower Speed	CFM [L/s] Air Delivery External Static Pressure Inches Water Column [kPa]												
				0.1 [0.2]	0.2 [0.5]	0.3 [0.7]	0.4 [1.0]	0.5 [1.2]	0.6 [1.5]	0.7 [1.7]	0.8 [1.9]	0.9 [2.2]				
RW1T04A2414NAA	10 x 6 [254 x 152]	1/3 [248]	Low	686 [324]	634 [299]	582 [275]	530 [250]	-	-	-	-	-	-	-	-	-
			Med-low	723 [341]	688 [325]	617 [291]	567 [268]	512 [242]	459 [217]	-	-	-	-	-	-	-
			Med	748 [353]	697 [329]	648 [306]	597 [282]	548 [259]	491 [232]	445 [210]	-	-	-	-	-	-
			Med-high	922 [435]	885 [418]	849 [401]	811 [383]	775 [366]	733 [346]	695 [328]	644 [304]	645 [304]	-	-	-	-
			High	940 [444]	917 [433]	875 [413]	838 [395]	799 [377]	760 [359]	716 [338]	673 [318]	628 [296]	-	-	-	-
RW1T06A3617NAA	10 x 8 [254 x 203]	1/2 [373]	Low	646 [305]	582 [275]	517 [244]	436 [206]	-	-	-	-	-	-	-	-	-
			Med-low	984 [464]	937 [442]	894 [422]	846 [399]	798 [377]	757 [357]	710 [335]	673 [318]	637 [304]	-	-	-	-
			Med	1037 [489]	995 [470]	953 [450]	910 [429]	868 [410]	821 [387]	781 [369]	737 [348]	691 [324]	-	-	-	-
			Med-high	1161 [548]	1020 [481]	1078 [509]	1040 [491]	999 [471]	963 [454]	920 [434]	873 [412]	827 [398]	783 [374]	737 [350]	691 [326]	645 [302]
			High	1397 [659]	1354 [639]	1321 [623]	1279 [604]	1238 [584]	1193 [563]	1157 [546]	1068 [504]	956 [451]	-	-	-	-
RW1T08A4821NAA	10 x 10 [254 x 254]	3/4 [559]	Low	815 [385]	765 [361]	715 [337]	665 [314]	614 [290]	558 [263]	514 [243]	-	-	-	-	-	-
			Med-low	1284 [606]	1233 [582]	1178 [556]	1129 [533]	1070 [505]	999 [471]	927 [437]	876 [413]	823 [388]	-	-	-	-
			Med	1419 [670]	1373 [648]	1323 [624]	1282 [605]	1228 [580]	1180 [557]	1129 [533]	1054 [497]	981 [463]	-	-	-	-
			Med-high	1485 [701]	1452 [685]	1418 [669]	1386 [654]	1346 [635]	1313 [620]	1272 [600]	1222 [577]	1195 [564]	-	-	-	-
			High	1745 [824]	1722 [813]	1692 [799]	1664 [785]	1630 [769]	1599 [755]	1566 [739]	1504 [710]	1356 [640]	-	-	-	-
RW1T10A6024NAA	11 x 11 [279 x 279]	3/4 [559]	Low	1044 [493]	953 [450]	867 [409]	767 [362]	667 [315]	579 [273]	501 [236]	-	-	-	-	-	-
			Med-low	1010 [477]	970 [458]	936 [442]	902 [426]	867 [409]	832 [393]	798 [377]	766 [362]	725 [342]	-	-	-	-
			Med	1247 [589]	1183 [558]	1121 [529]	1064 [502]	999 [471]	933 [440]	864 [408]	797 [376]	735 [347]	-	-	-	-
			Med-high	1834 [866]	1768 [834]	1697 [801]	1639 [774]	1585 [748]	1539 [726]	1478 [698]	1427 [673]	1370 [647]	-	-	-	-
			High	2008 [948]	1956 [923]	1905 [899]	1844 [870]	1802 [850]	1750 [826]	1698 [801]	1655 [781]	1604 [757]	-	-	-	-

Blower performance measured without filter in place

HYDRONIC AIR HANDLER AIR FLOW PERFORMANCE - PSC MODELS																
Model	Blower Size in [mm]	Motor HP [Watt]	Blower Speed	CFM [L/s] Air Delivery External Static Pressure Inches Water Column [kPa]												
				0.1 [0.2]	0.2 [0.5]	0.3 [0.7]	0.4 [1.0]	0.5 [1.2]	0.6 [1.5]	0.7 [1.7]	0.8 [1.9]	0.9 [2.2]				
RW1P04A2414NAA	10 X 6 [254 X 152]	1/5 [93]	Low	642 [339]	612 [322]	591 [311]	524 [273]	-	-	-	-	-	-	-	-	-
			Med-low	711 [377]	684 [362]	655 [346]	624 [329]	578 [303]	526 [274]	-	-	-	-	-	-	-
			Med-high	890 [477]	853 [456]	821 [438]	786 [419]	744 [396]	694 [368]	633 [334]	549 [287]	-	-	-	-	-
			High	950 [510]	917 [492]	880 [471]	843 [451]	803 [428]	752 [400]	689 [365]	690 [366]	604 [318]	-	-	-	-
RW1P06A3617NAA	10 X 8 [254 X 203]	1/2 [373]	Low	900 [482]	882 [472]	865 [463]	843 [451]	806 [430]	759 [404]	687 [364]	617 [325]	-	-	-	-	-
			Med-low	1135 [613]	1101 [594]	1073 [578]	1050 [566]	1012 [544]	960 [516]	889 [476]	801 [427]	700 [371]	-	-	-	-
			Med-high	1260 [682]	1231 [666]	1199 [648]	1154 [623]	1113 [601]	1060 [571]	978 [526]	895 [479]	767 [408]	-	-	-	-
			High	1397 [758]	1363 [739]	1314 [712]	1268 [687]	1209 [654]	1148 [620]	1077 [581]	980 [527]	829 [443]	-	-	-	-
RW1P08A4821NAA	10 X 10 [254 X 254]	1/2 [373]	Low	947 [508]	943 [506]	940 [504]	926 [497]	897 [481]	857 [458]	784 [418]	711 [377]	-	-	-	-	-
			Med-low	1200 [649]	1193 [645]	1183 [639]	1163 [628]	1137 [614]	1084 [584]	1025 [552]	917 [492]	769 [409]	-	-	-	-
			Med-high	1493 [812]	1481 [805]	1452 [789]	1411 [766]	1365 [741]	1220 [660]	1124 [607]	957 [514]	-	-	-	-	-
			High	1865 [1018]	1810 [988]	1737 [947]	1671 [911]	1608 [876]	1533 [834]	1457 [792]	1292 [700]	1135 [613]	-	-	-	-
RW1P10A4821NAA	11 X 11 [279 X 279]	3/4 [559]	Low	904 [484]	875 [468]	845 [452]	798 [426]	735 [391]	688 [364]	643 [339]	593 [312]	539 [282]	-	-	-	-
			Med-low	1189 [643]	1165 [629]	1114 [601]	1092 [589]	1057 [569]	1005 [541]	947 [508]	879 [471]	821 [438]	-	-	-	-
			Med-high	1326 [719]	1304 [707]	1286 [697]	1266 [686]	1244 [673]	1217 [658]	1189 [643]	1140 [616]	1060 [571]	-	-	-	-
			High	1970 [1077]	1951 [1066]	1937 [1058]	1926 [1052]	1895 [1035]	1865 [1018]	1759 [959]	1673 [912]	1624 [884]	-	-	-	-

Blower performance measured without filter in place.

HYDRONIC AIR HANDLER AIR FLOW PERFORMANCE - ECM MODELS																				
Model	Blower Size in [mm]	Motor HP [Watt]	Blower Speed	CFM [L/s] Air Delivery External Static Pressure Inches Water Column [kPa]																
				0.1 [0.2]	0.2 [0.5]	0.3 [0.7]	0.4 [1.0]	0.5 [1.2]	0.6 [1.5]	0.7 [1.7]	0.8 [1.7]	0.9 [2.2]								
RWMV04A2414NAA	10 X 6 [254 X 152]	1/3 [180]	Low	253	119	240	113	223	105	199	94	182	86	173	82	161	76	N/A	N/A	
			Med-Low	518	244	520	245	511	241	509	240	500	236	498	235	496	234	480	227	473
			Med-High	652	308	653	308	658	311	658	311	651	307	648	306	644	304	634	299	624
			High	905	427	916	432	911	430	922	435	913	431	916	432	911	430	904	427	892
RWMV06A3617NAA	10 X 8 [254 X 203]	1/2 [304]	Low	400	189	411	194	432	204	422	199	411	194	412	194	381	180	380	179	
			Med-Low	745	352	770	363	776	366	770	363	785	370	784	370	780	368	775	366	770
			Med-High	990	467	1013	478	1045	493	1040	491	1058	499	1052	496	1053	497	1050	496	1045
			High	1252	591	1264	597	1279	604	1278	603	1286	607	1285	606	1285	606	1275	602	1270
RWMV08A4821NAA	10X10 [254X254]	3/4 [465]	Low	576	272	559	264	538	254	518	244	498	235	473	223	455	215	435	205	
			Med-Low	898	424	912	430	929	438	932	440	902	426	901	425	880	415	863	407	
			Med-High	1318	622	1345	635	1373	648	1376	649	1375	649	1377	650	1368	646	1357	640	
			High	1615	762	1614	762	1618	764	1603	757	1603	757	1592	751	1588	749	1574	743	
RWMV10A4821NAA	11 X 11 [279 X 279]	3/4 [520]	Low	811	383	796	376	764	361	707	334	677	320	655	309	633	299	620		
			Med-Low	999	471	996	470	996	470	991	468	982	463	963	454	935	441	905	427	
			Med-High	1534	724	1524	719	1539	726	1556	734	1550	732	1547	730	1543	728	1533	723	
			High	1795	847	1798	849	1800	850	1801	850	1804	851	1792	846	1784	842	1772	836	

DIRECT DRIVE INSTRUCTIONS FOR CHANGING BLOWER SPEED

⚠ WARNING

DISCONNECT THE ELECTRICAL SUPPLY TO THE AIR HANDLER BEFORE ATTEMPTING TO CHANGE THE BLOWER SPEED. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

The blower motor must be wired for blower speeds required for normal operation.

If additional blower speed taps are available (leads connected to “M1” and “M2” on the electronic control), speeds may be changed if necessary to fit requirements of the particular installation. Reconnect the unused motor leads to “M1” or “M2.” Check motor lead color for speed designation.

Heating speeds should not be reduced where it could cause the air handler air temperature rise to exceed the maximum outlet air temperature specified for the unit.

IMPORTANT: Always check air temperature rise after changing the heating speed for any reason.

MAINTENANCE

▲ WARNING


THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

DISCONNECT MAIN ELECTRICAL POWER TO THE UNIT BEFORE ATTEMPTING ANY MAINTENANCE. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

▲ CAUTION


DO NOT OPERATE THE SYSTEM FOR EXTENDED PERIODS WITHOUT FILTERS. A PORTION OF THE DUST ENTRAINED IN THE AIR MAY TEMPORARILY LODGE IN THE AIR DUCT RUNS AND AT THE SUPPLY REGISTERS. THIS RESIDUE CAN SOIL CEILINGS, WALLS, DRAPES, CARPETS AND OTHER HOUSEHOLD ARTICLES.

FIGURE 17

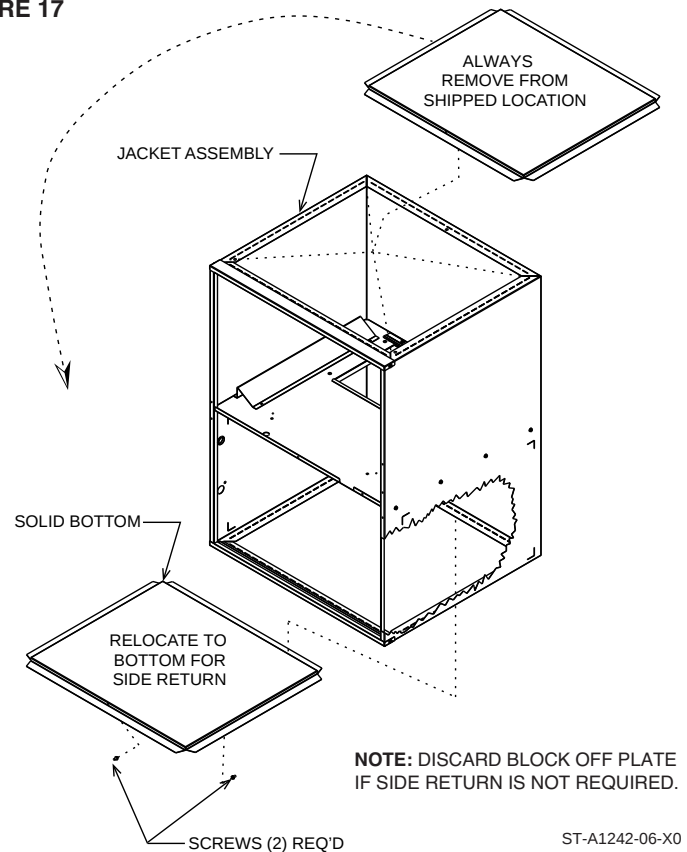


ST-A1242-06-X0

FIGURE 18
FILTER LOCATIONS

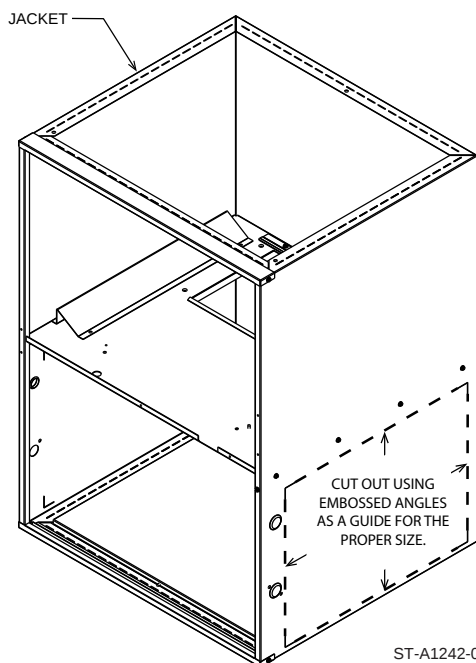

ST-A1242-04-X0

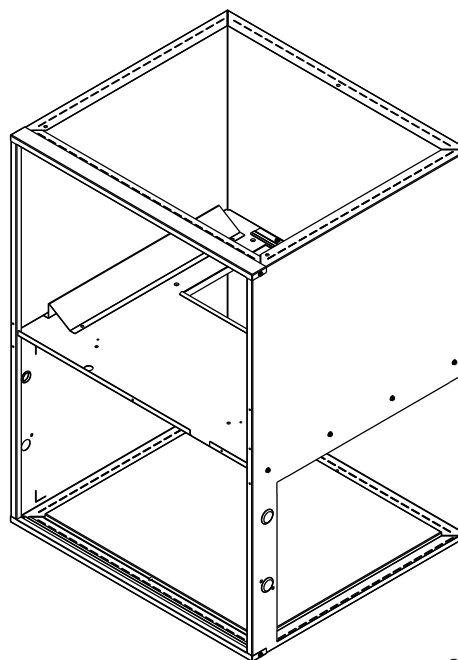

ST-A1242-07-X0

LUBRICATION

IMPORTANT: DO NOT attempt to lubricate the bearings on the blower motor or the induced draft blower motor. Addition of lubricants can reduce the motor life and void the warranty.

The blower motor and induced draft blower motor are permanently lubricated by the manufacturer and do not require further attention.

The blower motor and induced draft blower motor must be cleaned periodically by a qualified installer, service agency, or the gas supplier to prevent the possibility of overheating due to an accumulation of dust and dirt on the windings or on the motor exterior. And, as suggested elsewhere in these instructions, the air filters should be kept clean. Dirty filters can restrict airflow. The motor depends upon sufficient air flowing across and through it to keep from overheating.

SYSTEM OPERATION INFORMATION

Advise The Customer

1. Keep the air filters clean. The heating system will operate better, more efficiently and more economically.

2. Arrange the furniture and drapes so that the supply air registers and the return air grilles are unobstructed.
3. Close doors and windows. This will reduce the heating load on the system.
4. Avoid excessive use of kitchen exhaust fans.
5. Do not permit the heat generated by television, lamps or radios to influence the thermostat operation.
6. Except for the mounting platform, keep all combustible articles 3 feet from the air handler and vent system.
7. **IMPORTANT:** Replace all blower doors and compartment covers after servicing the air handler. Do not operate the unit without all panels and doors securely in place.
8. Explain proper operation of the system with constant air circulation.

ANNUAL INSPECTION

- The air handler should operate for many years without excessive scale build-up in the flue passageways. However, it is recommended that a qualified installer, service agency, or the gas supplier annually inspect

the flue passageways, the vent system and the main burners for continued safe operation. Pay particular attention to deterioration from corrosion or other sources.

- **IMPORTANT:** It is recommended that at the beginning and at approximately half way through the heating season, a visual inspection be made of the main burner flames for the desired flame appearance by a qualified installer, service agency or the gas supplier. If the flames are distorted and/or there is evidence of back pressure, check the vent and inlet air system for blockage. If there is carbon and scale in the heat exchanger tubes, the heat exchanger assembly should be replaced.

REPLACEMENT PARTS

See sheet enclosed with air handler for replacement part information.

TROUBLESHOOTING

Refer to Figure 18 for determining cause of unit problems.

WIRING DIAGRAMS

Figures 19 through 22 are complete wiring diagrams for the air handler and power sources.

FIGURE 19
GENERAL TROUBLESHOOTING CHART

General Troubleshooting Chart		
Warning: Disconnect all power to unit before servicing. Failure to shut off power can cause electrical shock resulting in personal injury or death.		
Symptom	Possible Cause	Remedy
Unit will not run	Power off or loosen electrical connection	Check for correct voltage at control
	Thermostat out of calibration - set too high	Check for correct voltage at control
	Call for domestic hot water - air handler disabled until call ends. Unit is operating as designed.	Unit is operating as designed
	Blown fuses / tripped breaker	Replace fuses / reset breaker
	Transformer defective	Check wiring—replace transformer
Insufficient heating	Improperly sized air handler or water heater	Recalculate load
	Improper indoor air flow	Check motor speed tap setting
Pump does not run	Call for domestic hot water—air handler disabled until call ends. Unit is operating as designed.	Unit is operating as designed
	Power off or loosen electrical connection	Check line voltage at pump
		Check wires and connectors
		Check pump capacitor
Blower does not run	Call for domestic hot water - air handler disabled until call ends. Unit is operating as designed.	Unit is operating as designed
	Power off or loosen electrical connection	Check line voltage at blower motor
		Check wires and connectors
		Check blower motor capacitor
Water does not flow	Water lines are air locked	Purge air from lines

FIGURE 20
ELECTRICAL WIRING DIAGRAM – ECO TECH™ MODELS (RW1T)

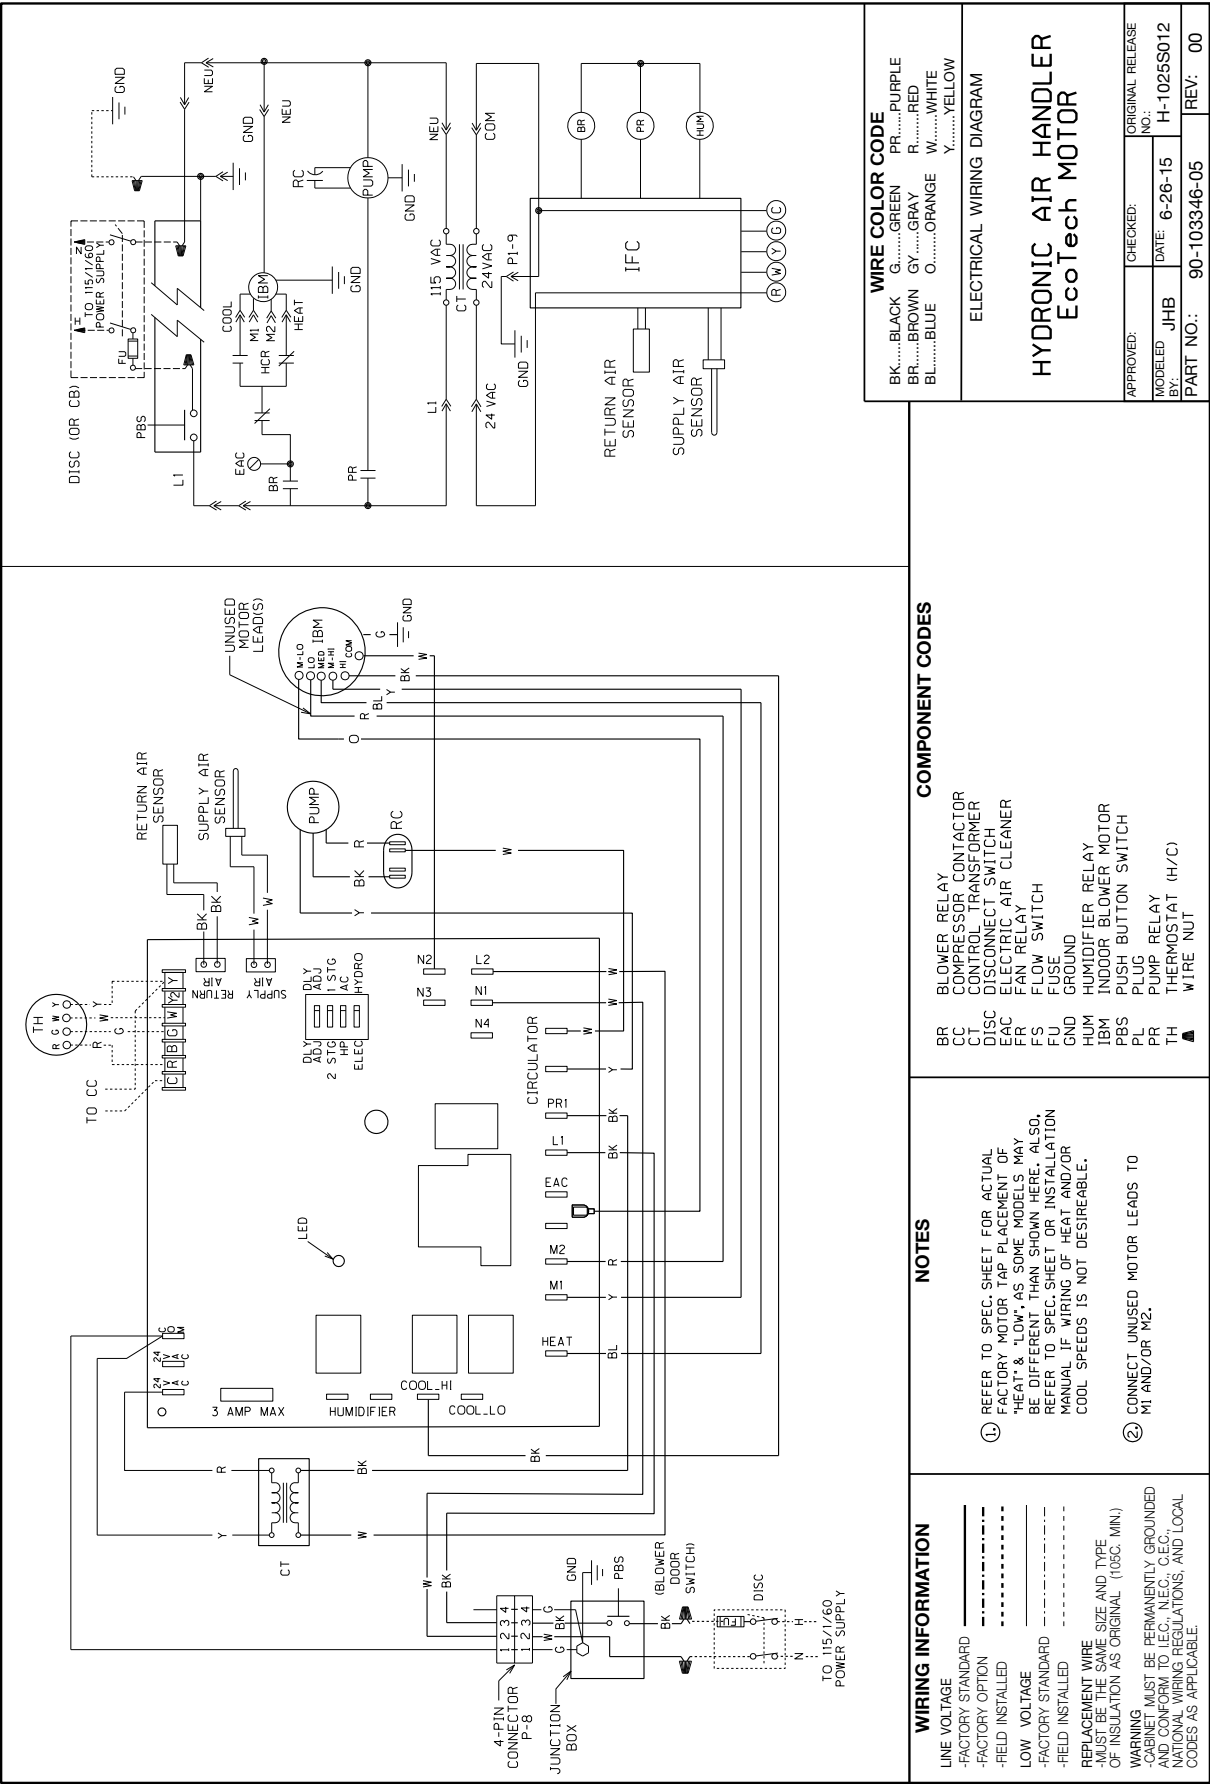


FIGURE 21
ELECTRICAL WIRING DIAGRAM – PSC MOTORS (RW1P)

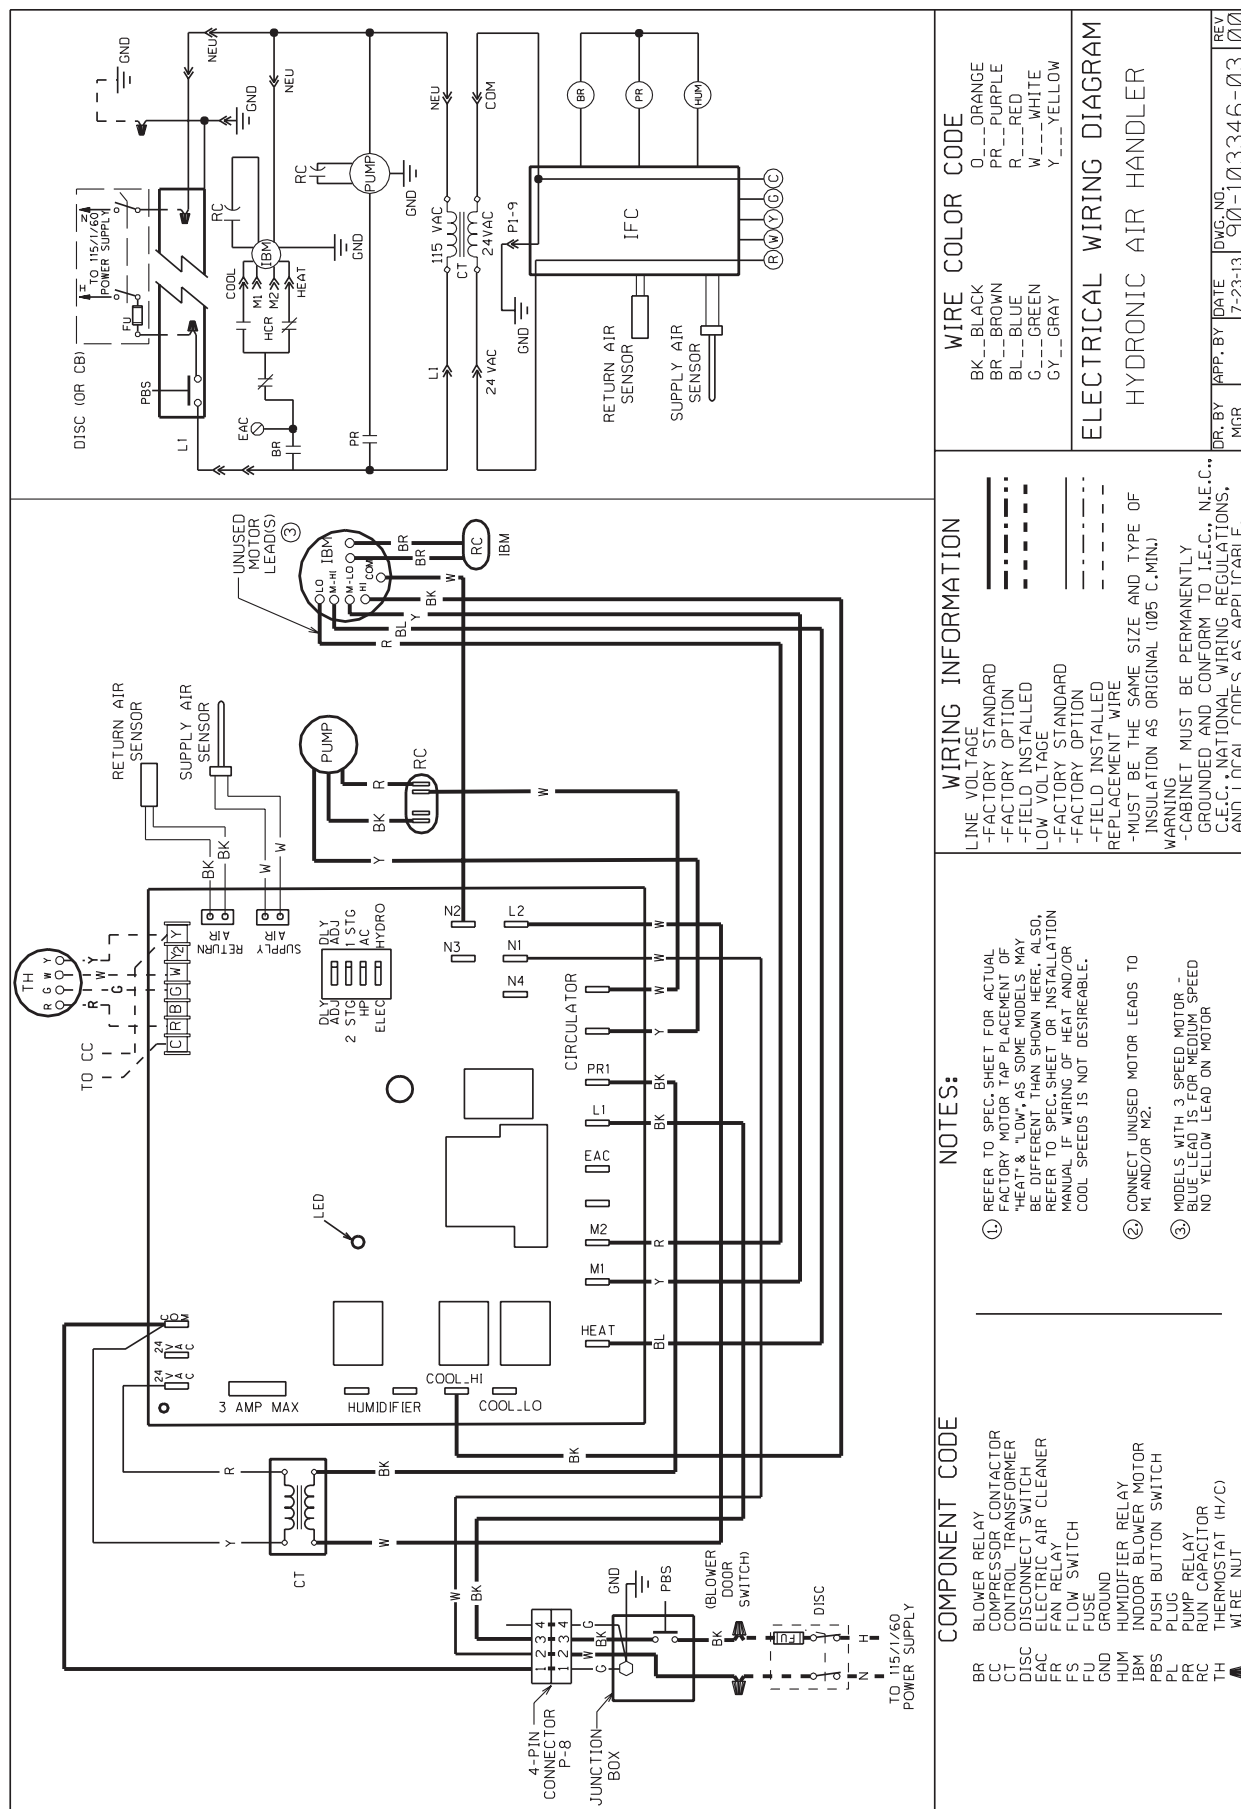


FIGURE 22
ELECTRICAL WIRING DIAGRAM

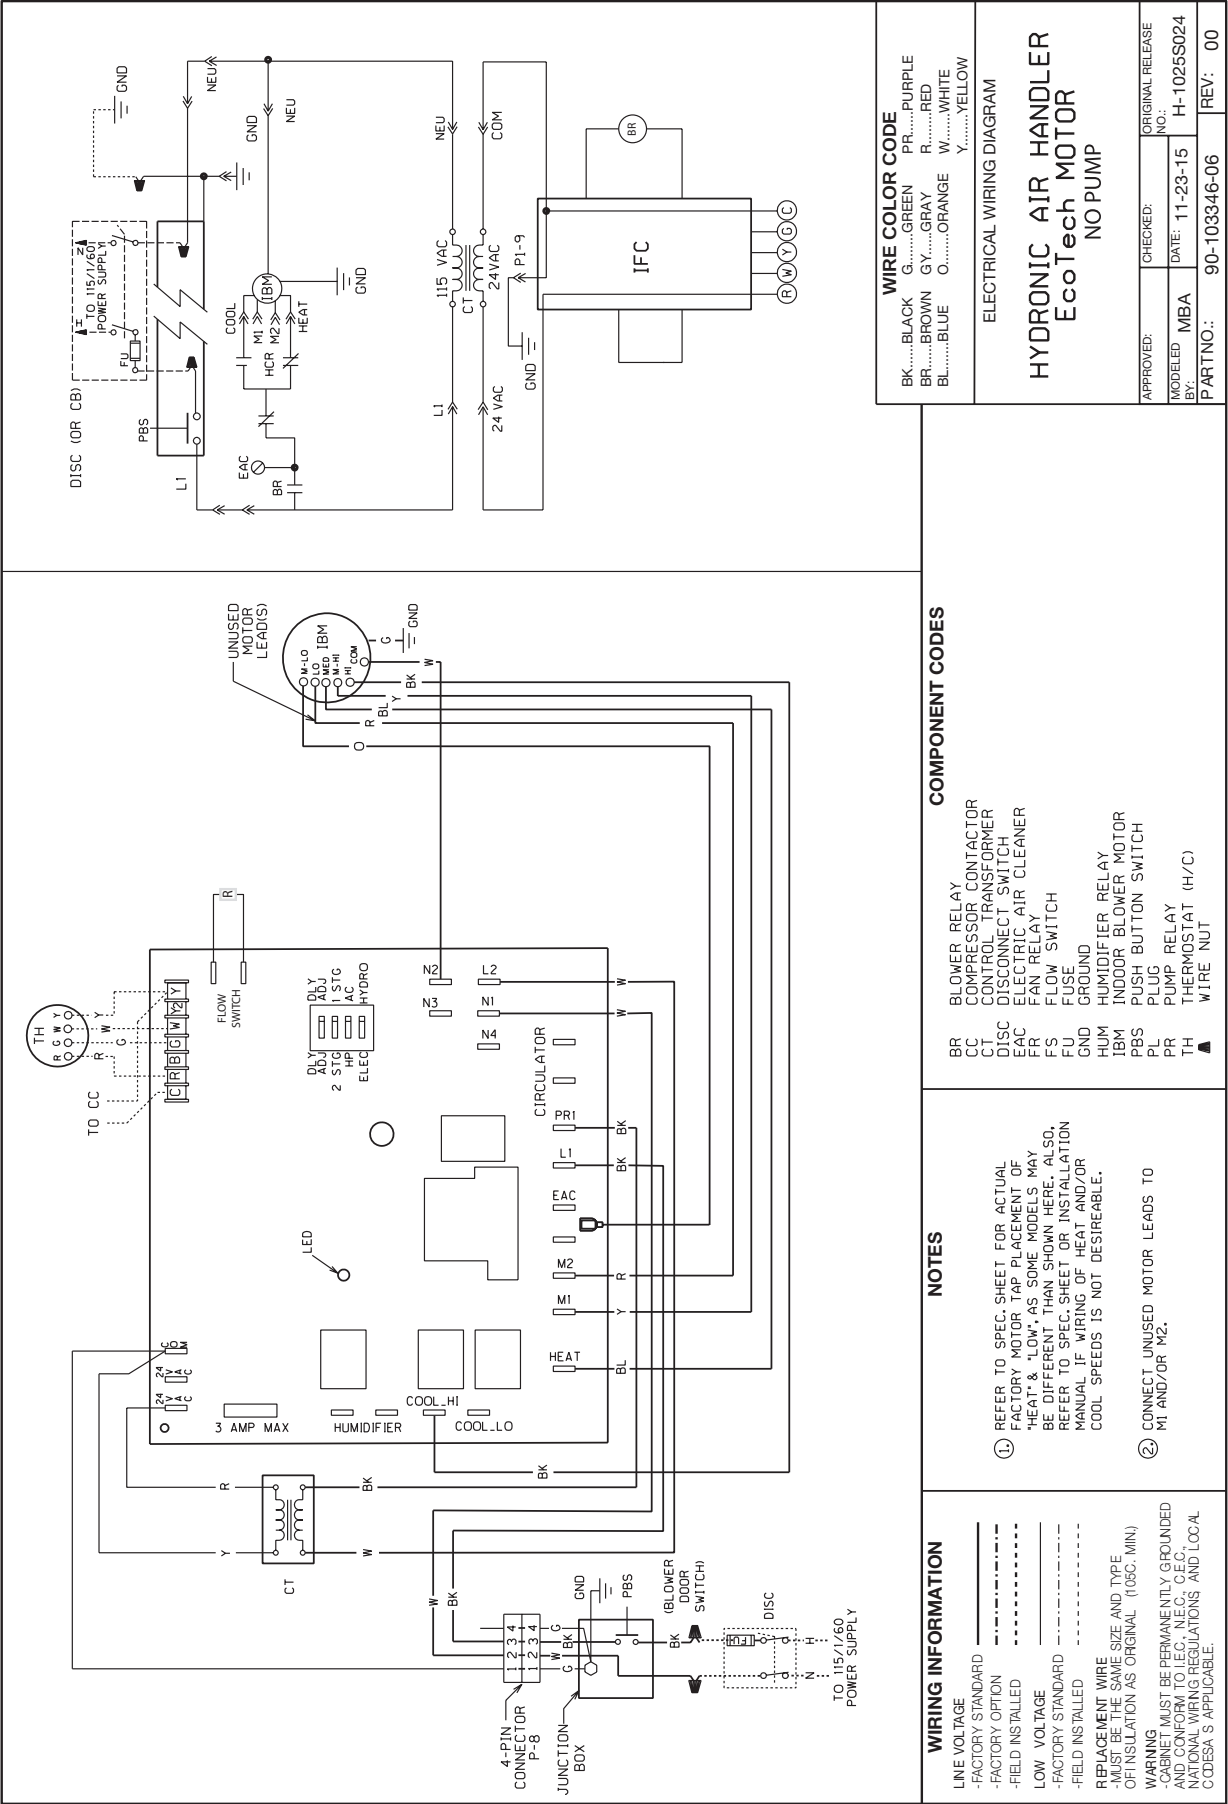


FIGURE 23
ELECTRICAL WIRING DIAGRAM

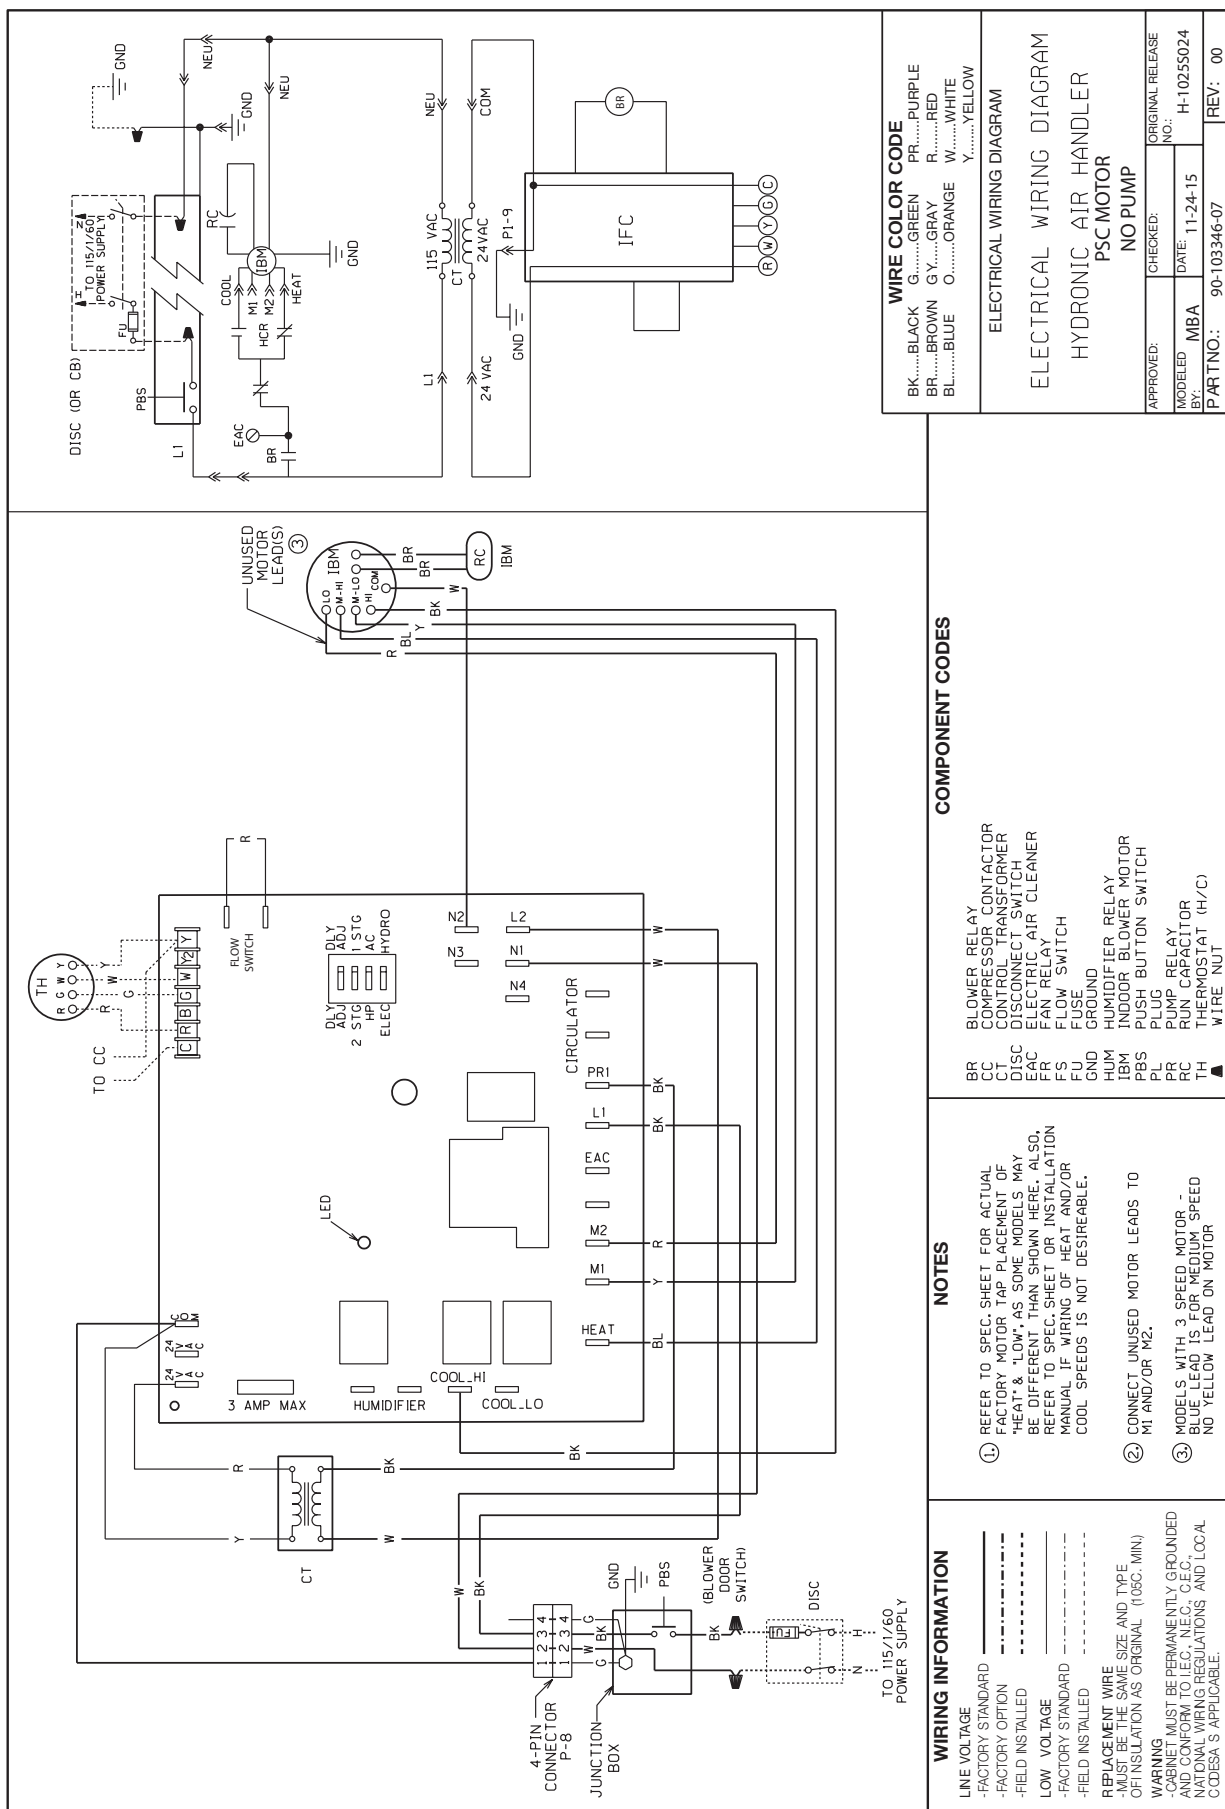


FIGURE 24
ELECTRICAL WIRING DIAGRAM

