


**9104-18, 9104-189,
9105-18, 9105-189
Towel Bar**

Installation

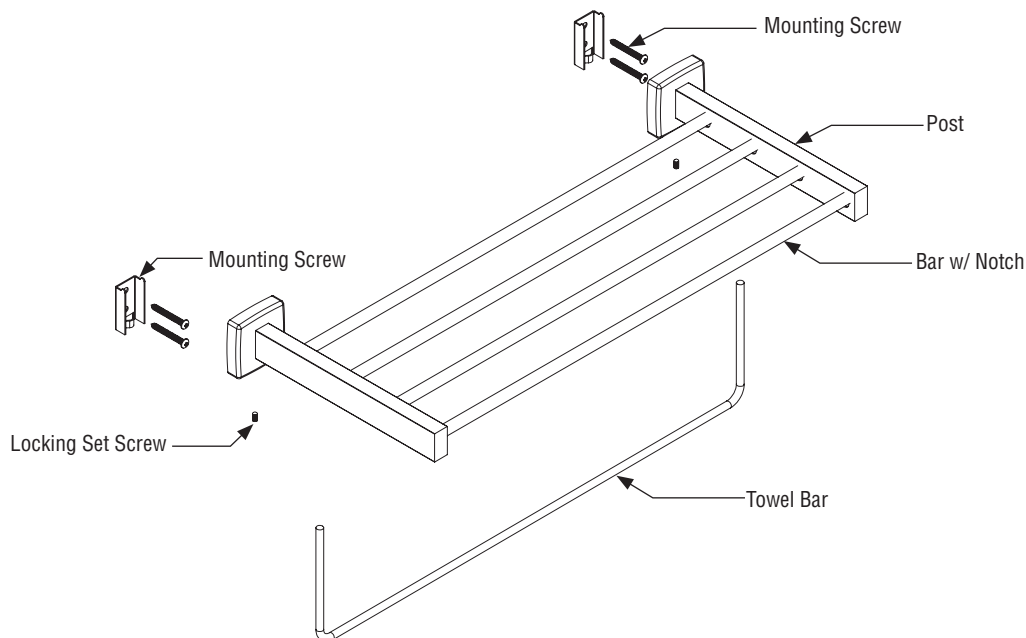

1. Loosen two locking set screws from back of concealed mounting posts.
2. Mount the two wall mounting brackets on the finished face of the wall.
3. If there is a towel bar, screw the towel bar to both posts.
4. Assemble the notch bar first into the furthest hole from the wall.
5. Then assemble the other 3 bars into the mounting bracket.
6. Hang the posts on the mounting bracket.
7. Tighten locking set screws to the bottom of both mounting brackets.

