

FIRESTOPTM PULL STOP BOXTM

SPECIFICATION

Furnish and install the FireStopTM Pull Stop BoxTM outlet box as manufactured by LSP.

DESIGN FEATURES

- Must use metal brackets during installation
- Patented design moves the angle-stop for toilet and lavatory water supply into the wall
- Allows angle stops to be installed during the rough-in phase and be pressure tested for reduced liability and labor
- Easy to install vertically, upside down and, horizontally
- Eliminates the need for a copper stub out
- Unique push-pull handle opens and closes the valve
- Integrated, replaceable valve has a reliable triple Oring design inlet seal
- 5-year, limited warranty
- 1 hour and 2 hour fire rated
- Available deep faceplate accepts up to two sheets of 5/8" drywall
- Intumescent pad seals through wall penetration
- Ball valve design with Teflon seats
- 3/8" Compression Outlet Connection

CAUTION


- Keep away from solvents/cements/primers
- Keep out of sun and away from common heat sources.
- If Supply line supports or clamps are necessary (as determined by state or local code), we recommend installing them no closer than 6" to the box

OPERATING SPECIFICATIONS


- Working Temperature 40°F-160°F
- Working Pressure 20-125 PSI

COMPLIANCES/LISTINGS

LISTING		STANDARD/COMPLIANCE
IAPMO	0901	PS 54 - 2021
IAPMO	4577	ASME A112.18.1-2018/CSA B125.1-18
IAPMO	6545	NSF / ANSI 372 - 2016
IAPMO	N-6614	NSF / ANSI / CAN 61 - 2018
Intertek	29857	ASTM E814 (2011); CAN ULC S115 (2011)

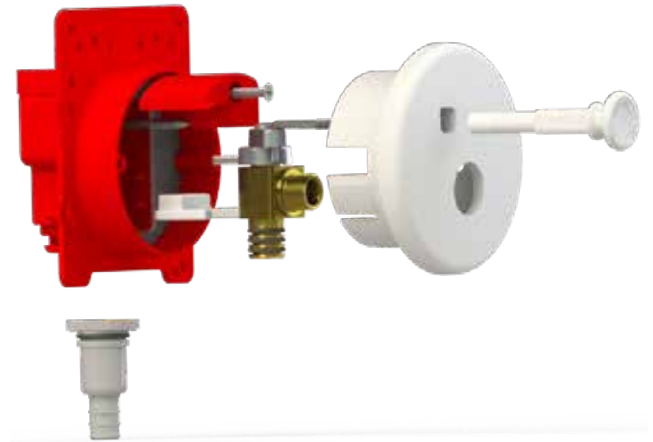

DIMENSIONS

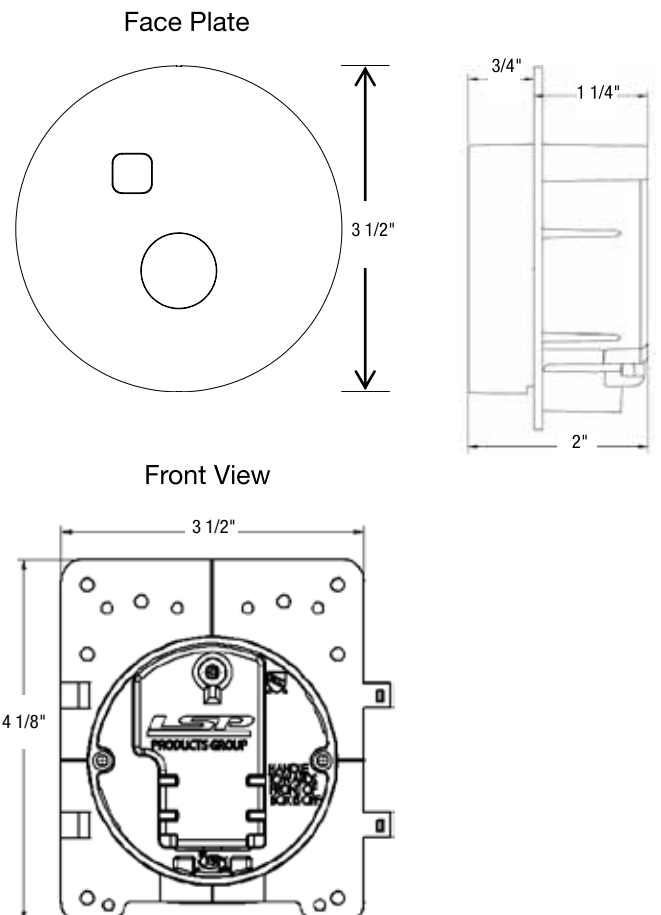

Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained. 4/2021



Legacy of **INNOVATION**

AQUAFLO®

FIRESTOP™ PULL STOP BOX™

PART NUMBER	DESCRIPTION	MSTR CTN QTY
ROUGH-IN KITS-INCLUDES BOX, VALVE AND PROTECTIVE COVER		
OBFPS-101-RK-LL	1/2" Male Copper Sweat, Lead Free	10
OBFPS-102-RK-LL	1/2" Male CPVC, Lead Free	10
OBFPS-103-RK-LL	1/2" Crimp PEX, Lead Free	10
OBFPS-104-RK-LL	1/2" UPONOR PEX, Lead Free	10
OBFPS-105-RK-LL	1/2" Viega PEX, Lead Free	10
OBFPS-108-RK-LL	1/2" Rehau PEX, Lead Free	10
TRIM KITS		
TRIM KITS-INCLUDES KNOB AND ESCUTCHEON		
OBPS-200-W	White-Paintable	100
OBPS-200-C	Chrome	100
OBPS-200-SN	Satin Nickel	100
OBPS-200-ORB	Oil Rubbed Bronze	100
OBPS-200-W-S	White-Paintable with Screw	100
OBPS-300D-W-S	White-Paintable (Deep) with Screw	100
OBPS-300D-C	Chrome (Deep)	100
OBPS-300D-SN	Satin Nickel (Deep)	100
OBPS-300D-ORB	Oil Rubbed Bronze (Deep)	100
TRIM KITS-INCLUDES KNOB, ESCUTCHEON, SCREWS AND CLIP		
OBPS-400-W*	White-Paintable	100
OBPS-400D-W*	White-Paintable (Deep)	100
OBPS-400SD-W*	White-Paintable (Super Deep)	100
PULL STOP BOX™ ACCESSORIES/REPLACEMENT PARTS		
OBPS-500D-W	Extension Kit For Trim (Deep, White)	10
P-06878-LL	3/8" Compression, 1/4 Turn Replacement Valve, Lead Free	48
P-06879-LL	1/4" Compression, 1/4 Turn Replacement Valve, Lead Free	10
P-06881	3/4" GHT, 1/4 Turn Replacement Valve, Lead Free	120
P-06923	Escutcheon Extension Ring	1000
P-06930	Dual Escutcheon Extension Ring	2000
P-06928	2.5" Self-Tapping Screw 2 Pack	4500
P-06921	1" Self-Tapping Screw 2 Pack	5000
P-06915	Debris Cover, Black	1
P-1078-18	18" Hyco strap	100
P-1078-26	26" Hyco strap	100
P-06735	Tee Adaptor, Female 3/8" Compression x 2 x Male 3/8" Compression	100
P-06406	Poly Inline Hammer Arrestor 1/2" Crimp PEX	50
P-06407	Poly Inline Hammer Arrestor 1/2" UPONOR PEX	50
P-06408	Poly Inline Hammer Arrestor 1/2" Male CPVC	50

MATERIAL SPECIFICATIONS

PART	MATERIAL
Valve Body, Stem	Lead Free Brass
Valve Handle	Cast Aluminum
Ball	Chrome Plated Lead Free Brass
O-Rings	High Temperature Rubber
Box	High Impact ABS
PEX Inlet Connection	Engineered Polymer PPSU
CPVC Inlet Connection	Fitting Grade CPVC
Copper Inlet Connection	ASTM B88 Copper Tube


*Designed for ice maker, dishwasher and washing machine Pull Stop Box™ applications.

Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained. 4/2021

2727 CHEMSEARCH BLVD., IRVING, TX 75062 | PHONE: (800) 854-3215 | FAX: (800) 243-1777 | LSPproducts.com

ROUGH-IN INSTALLATION INSTRUCTIONS

1. Fire Rated Pull Stop Boxes are to be mounted in 5/8" Type X gypsum wallboard on each side of supporting construction. Minimum one layer wall board for one hour wall rating and minimum two layers for two hour wall rating. Wall studs can be either 20 GA galvanized steel or wood with minimum depth of 3-5/8 inch.
2. Identify the desired outlet location. Attach the supply line to the valve inlet via pipe manufactures recommended practice. (i.e. sweat for copper, solvent cement for CPVC, crimp rings for PEX). If supply line supports or clamps are necessary (as determined by state or local code), we recommend installing them no closer than 6 inches to the box.
3. FireStopTM Pull Stop BoxTM may be installed individually, in pairs or three Pull Stop boxes in one stud bay all facing the same direction. Pull Stop boxes facing the other direction must be mounted in separate stud bay.
4. FireStopTM Pull Stop BoxTM must be mounted with at least two metal support brackets, one across the top and one across the bottom with two screws as shown in figure below. Suggest using LSP's metal HYCO strap P-1078-18, P-1078-26 or Boss Bar on top P-1090 or P-1093 may be used on top.
5. The FireStopTM Pull Stop BoxTM is shipped in the "Off" position. Once the box is securely attached to the wall and the supply line is properly attached no further work is necessary during the rough-in phase. The included protective cover will protect the valve during the construction process.

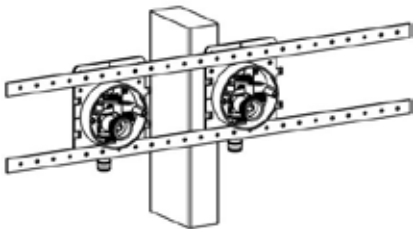

TRIM KIT INSTALLATION INSTRUCTIONS

1. Unthread screw and pull off the protective cover.
2. Feed a flexible connector through the escutcheon, and thread a flexible connector onto the valve outlet; tighten to manufacturer specifications.
3. Line up the threaded metal arm to fit through the square hole in the escutcheon and push the escutcheon into the outlet box until it is flush with the wall while making sure to feed the threaded metal arm through the square hole. If trim kit comes with screws, thread screws into box.
4. Thread the knob onto the threaded metal arm a minimum of four complete turns.
5. When water supply is desired, push the knob towards the wall to turn the valve on.
6. To stop the flow of water, pull the knob out.

VALVE REPLACEMENT INSTRUCTIONS

1. Shut off water supply to building, and pull knob to "off" position. Then, unscrew knob and pull out escutcheon.
2. Use Philips screwdriver to remove screw from red valve block.
3. Remove current valve and replace with a new one.
4. Secure the valve block back into place with the screw.
5. Follow steps 3-6 under **Trim Installation Instructions**.

Product Submittal	
Job Name:	Date:
Part Number:	Quantity:
Architect:	
Contractor:	

Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained. 4/2021