




LD10

Line Drive Blow Out Valve

Economical and Easy to use condensate line blow out valve.
No more canisters. No more looking for the end of the line to put your plug.

Features / Benefits

- Attaches to a CO₂ or Nitrogen tank.
- Durable, Schedule 40 PVC material.
- Condensate Line Size: 3/4".
- Hose Connection Size: 1/4" male flare (with Schrader).
- 1-year warranty.

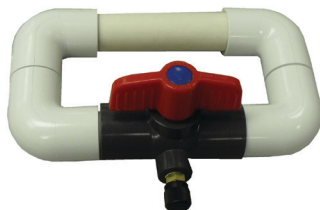

LD10 Operating Instructions

1. Always Observe Safety Precautions When Working With High Pressure Gases!
2. Simply attach the CO₂ or Nitrogen tank hose to the 1/4 male flare fitting on the valve, turn the handle 90 degrees and open gas slowly to the line.
3. Turn the handle 180 degrees the other way and clear the other side of the line.

Applications

- Air Conditioning condensate lines.
- Refrigeration condensate lines.

Tech Tips

- For 1" condensate lines add a 1" x 3/4" PVC coupling to the line.
- Add Slimeout Condensate Pan Tablets (Supco p/n SO100 or p/n ST200) to the ACR system after blowing out the condensate lines.
- For Negative Pressure systems and to prevent Dry Trap Syndrome install Supco p/n DP34 Drain Plus HVAC Condensate Drain to the AC system.



F455 - 07052011



LD10

Line Drive Blow Out Valve

Economical and Easy to use condensate line blow out valve.
No more canisters. No more looking for the end of the line to put your plug.

Features / Benefits

- Attaches to a CO₂ or Nitrogen tank.
- Durable, Schedule 40 PVC material.
- Condensate Line Size: 3/4".
- Hose Connection Size: 1/4" male flare (with Schrader).
- 1-year warranty.



LD10 Operating Instructions

1. Always Observe Safety Precautions When Working With High Pressure Gases!
2. Simply attach the CO₂ or Nitrogen tank hose to the 1/4 male flare fitting on the valve, turn the handle 90 degrees and open gas slowly to the line.
3. Turn the handle 180 degrees the other way and clear the other side of the line.

Applications

- Air Conditioning condensate lines.
- Refrigeration condensate lines.

Tech Tips

- For 1" condensate lines add a 1" x 3/4" PVC coupling to the line.
- Add Slimeout Condensate Pan Tablets (Supco p/n SO100 or p/n ST200) to the ACR system after blowing out the condensate lines.
- For Negative Pressure systems and to prevent Dry Trap Syndrome install Supco p/n DP34 Drain Plus HVAC Condensate Drain to the AC system.



F455 - 07052011

SEALED UNIT PARTS CO., INC.

PO Box 21 • 2230 Landmark Place • Allenwood, NJ 08720 USA
732-223-6644 • Fax 732-223-1617 • www.supco.com • info@supco.com

F454 - 04152011

SEALED UNIT PARTS CO., INC.

PO Box 21 • 2230 Landmark Place • Allenwood, NJ 08720 USA
732-223-6644 • Fax 732-223-1617 • www.supco.com • info@supco.com

F454 - 04152011