


Installation Guide

837 Series Concealed-Arm Lavatory Carrier

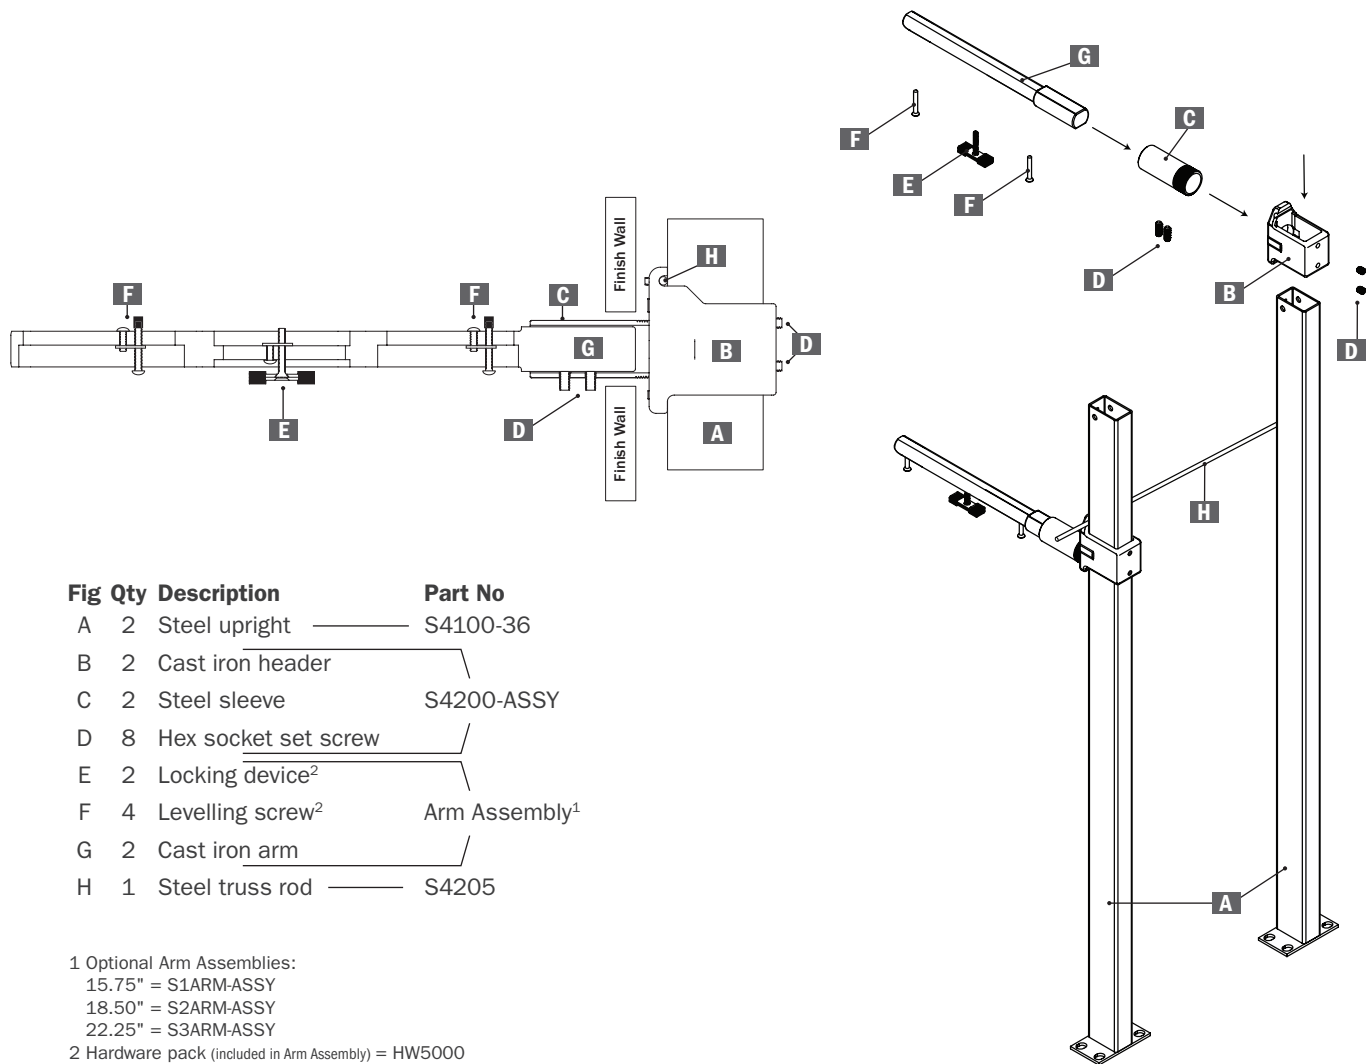

- STEP 1:** Slide adjustable header couplings over rectangular uprights with the large diameter threaded tappings facing the front. Hand tighten the set screws on the rear face of the header.
- STEP 2:** Insert the truss rod between the header couplings and secure into place.
- STEP 3:** Space the uprights accordingly to the fixture manufacturer's rough in dimensions. Place uprights in correct position and anchor to floor using 1/2" bolts (not included). Two diagonally placed bolts are recommended for proper installation.
- STEP 4:** Verify header coupling elevation and width and then tighten all set screws.
- STEP 5:** Screw threaded sleeve into the header coupling. Set screws should be located at the bottom. The threaded sleeve may not be fully tightened.
- STEP 6:** Insert cast iron concealed arm into threaded sleeve when installing fixture. Adjust overall length of arm and tighten set screws.
- STEP 7:** Position leveling screws and locking device. Install and level fixture and tighten locking device to secure into place.