




Z880

SHALLOW TRENCH DRAIN SYSTEM INSTALLATION INSTRUCTIONS

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

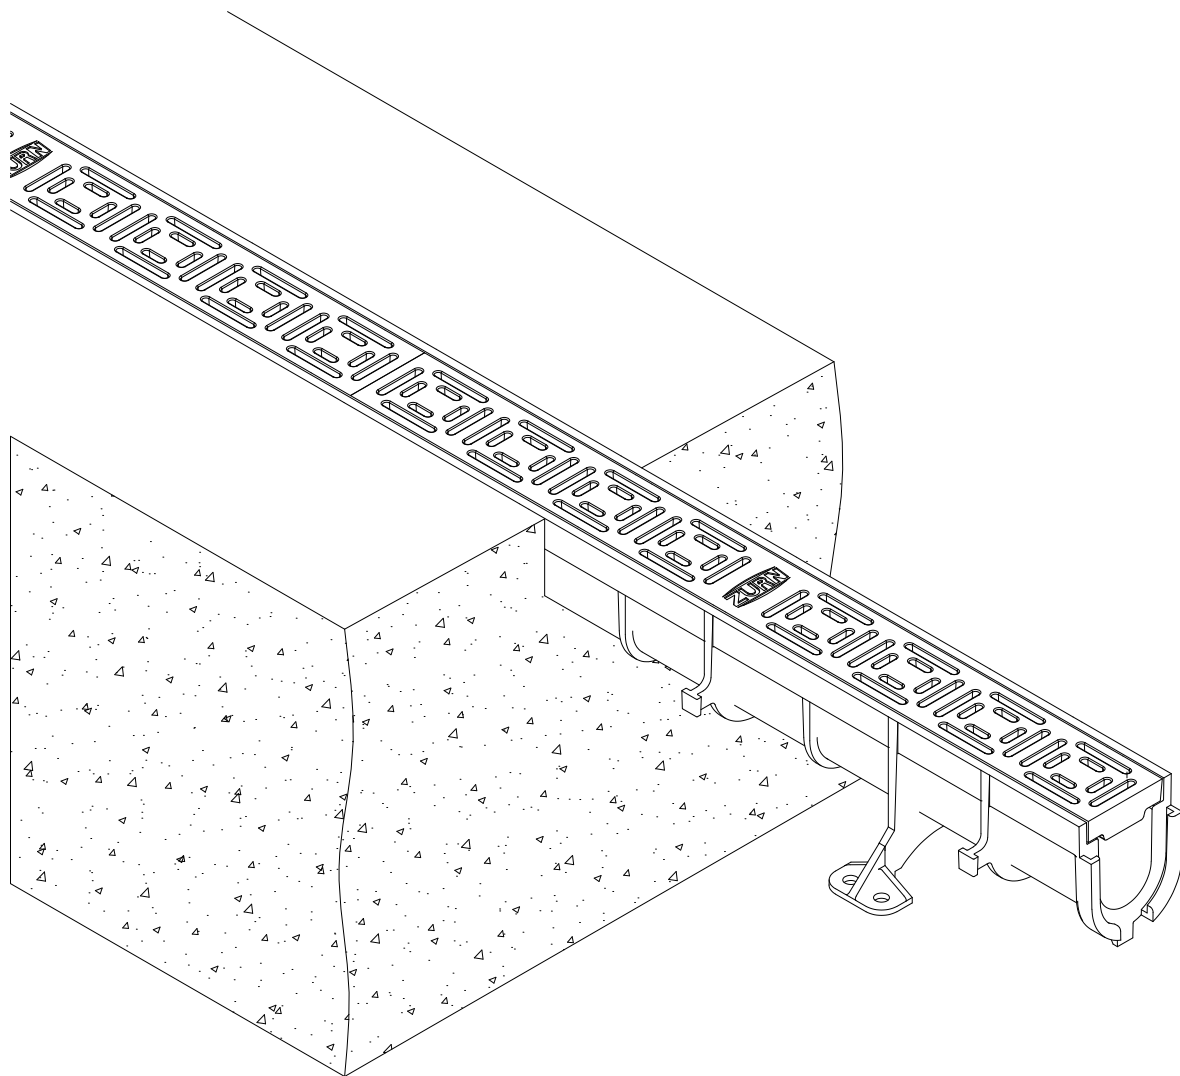

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation

1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929

In Canada | **Zurn Industries Limited**

3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292


www.zurn.com

Rev. A
Date: 5/15/2018
C.N. No. 140024
Form No. FT902



Z880 ACCESSORIES

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

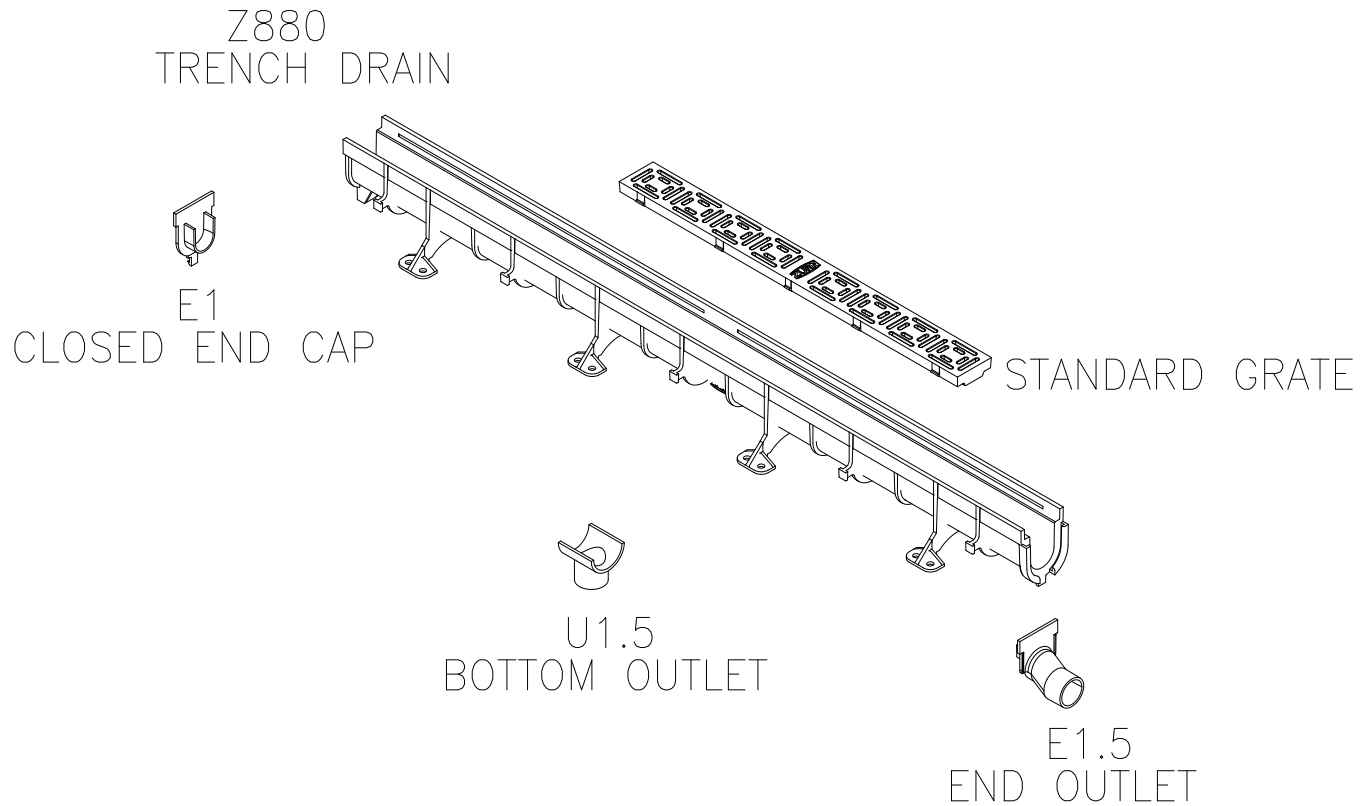


Above are some of the trench drain components typical to an installation. Double check your order to ensure that you have all components particular to your job before beginning your installation.

Contact Zurn 'Flo-Thru' at 855-663-9876 should additional material be required.



Z880 EXCAVATION

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

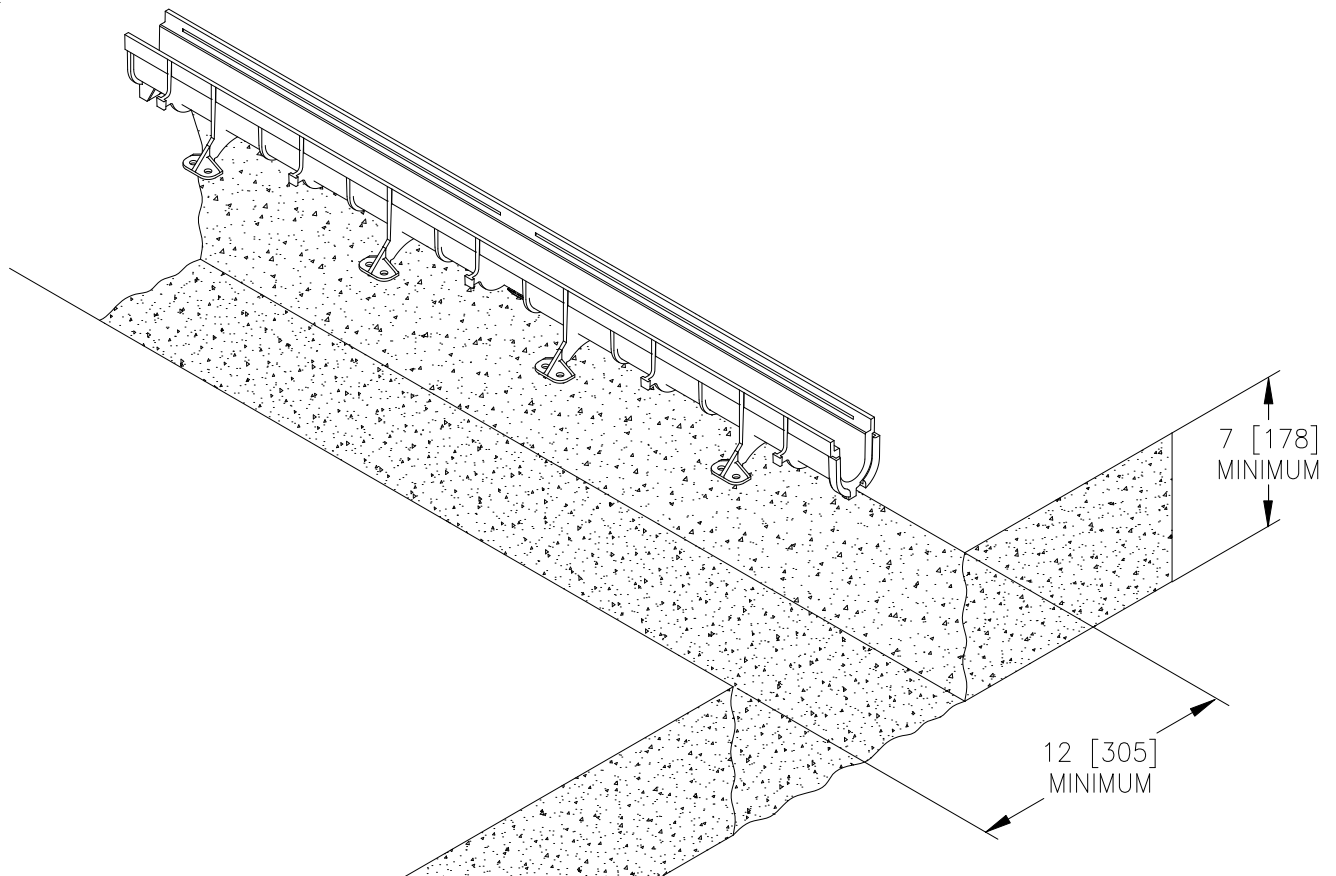


Trench excavation must be 4" [102mm] greater than the trench depth and a minimum of 4" [102mm] greater than the edge of the trench on each side. Soft and/or shifting soil substrates may cause cracking of the concrete and consequent movement of the trench. It is critical that the concrete be poured on an adequate foundation.



Z880 JOINT CONNECTION

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

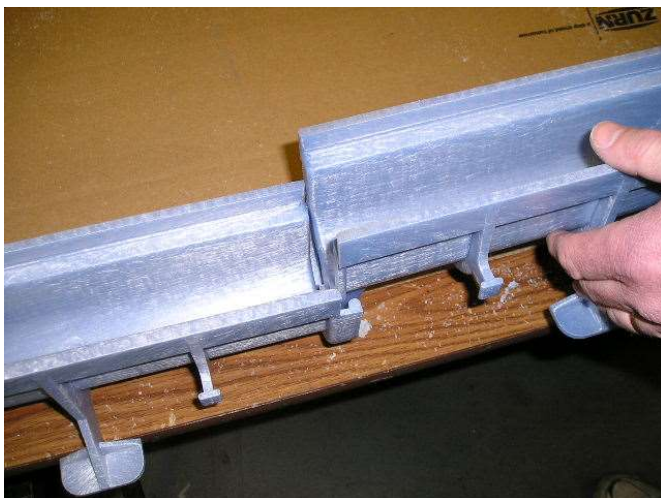

Assembling the trench run is easy using 'Flo-Thru's' mechanical interlocking joints. Simply align the male end above the female end and slide together. The bottom interlock should snap together. A silicone caulk, or a construction adhesive, such as Liquid Nails, is recommended to be used at each joint as a sealer.




Z880

OUTLETS AND ACCESSORIES

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

To attach an end outlet or end cap, cut trench to desired length if necessary and attach with provided screws and a silicone caulk or a construction adhesive if desired.

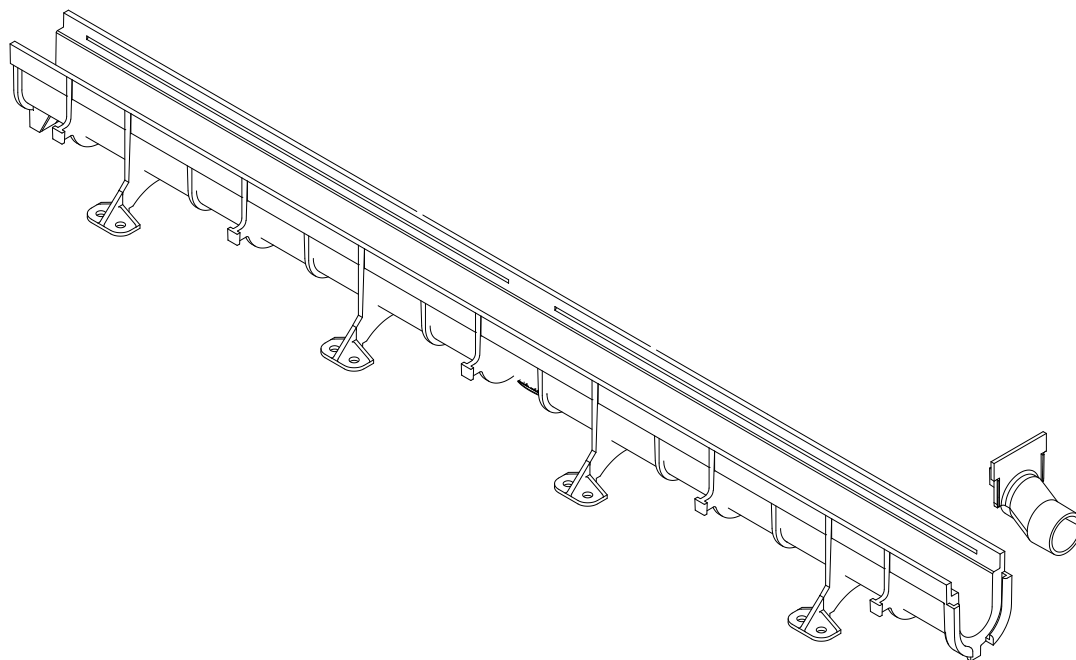


A bottom outlet is attached to the bottom side of the trench drain with provided screws and a silicone caulk or a construction adhesive if desired as shown below. It may be necessary to remove a underside rib to allow the outlet to sit flat. A hole saw can be used to cut the appropriate size hole through the bottom of the trench.





Z880 OVERALL LAYOUT

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

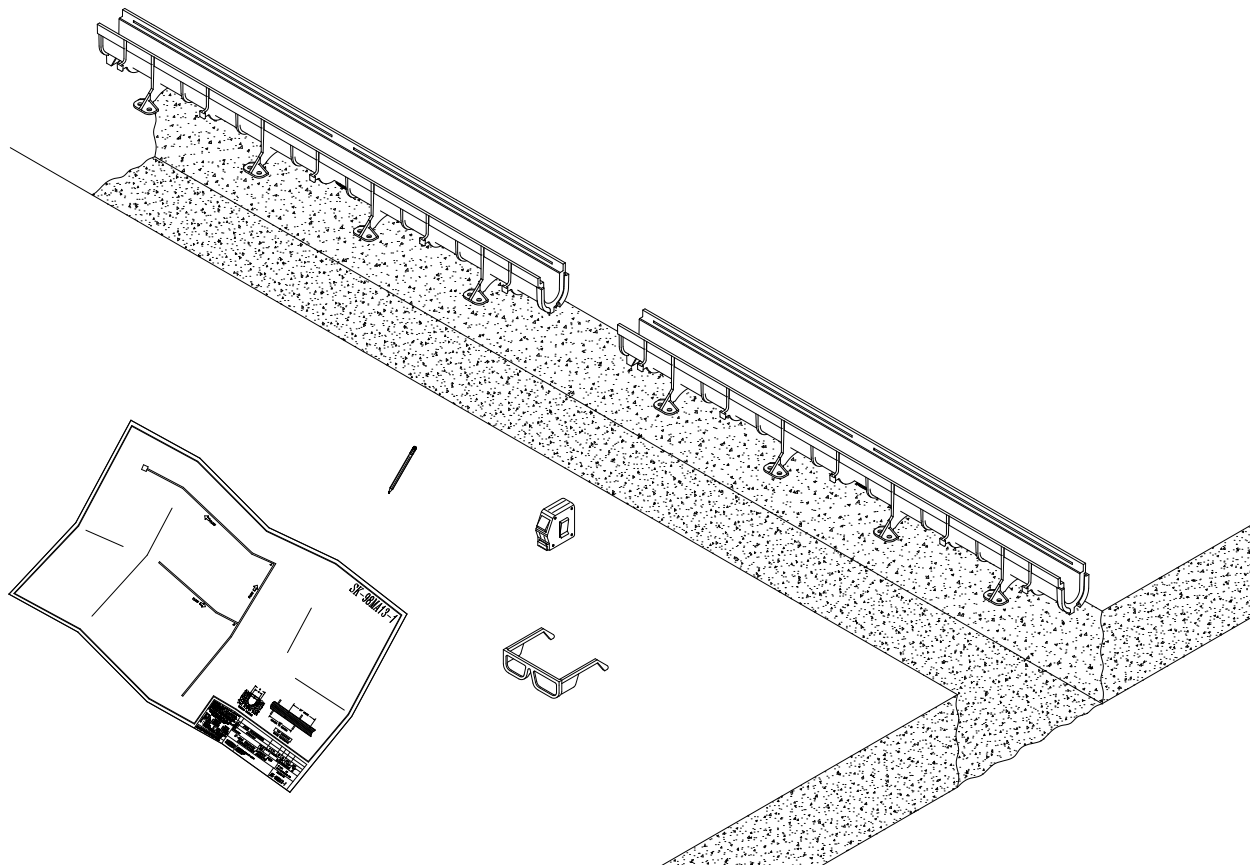


Upon completion of the trench excavation, the channels should be placed in order alongside the excavation and according to the job layout.



Z880

SETTING THE TRENCH

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

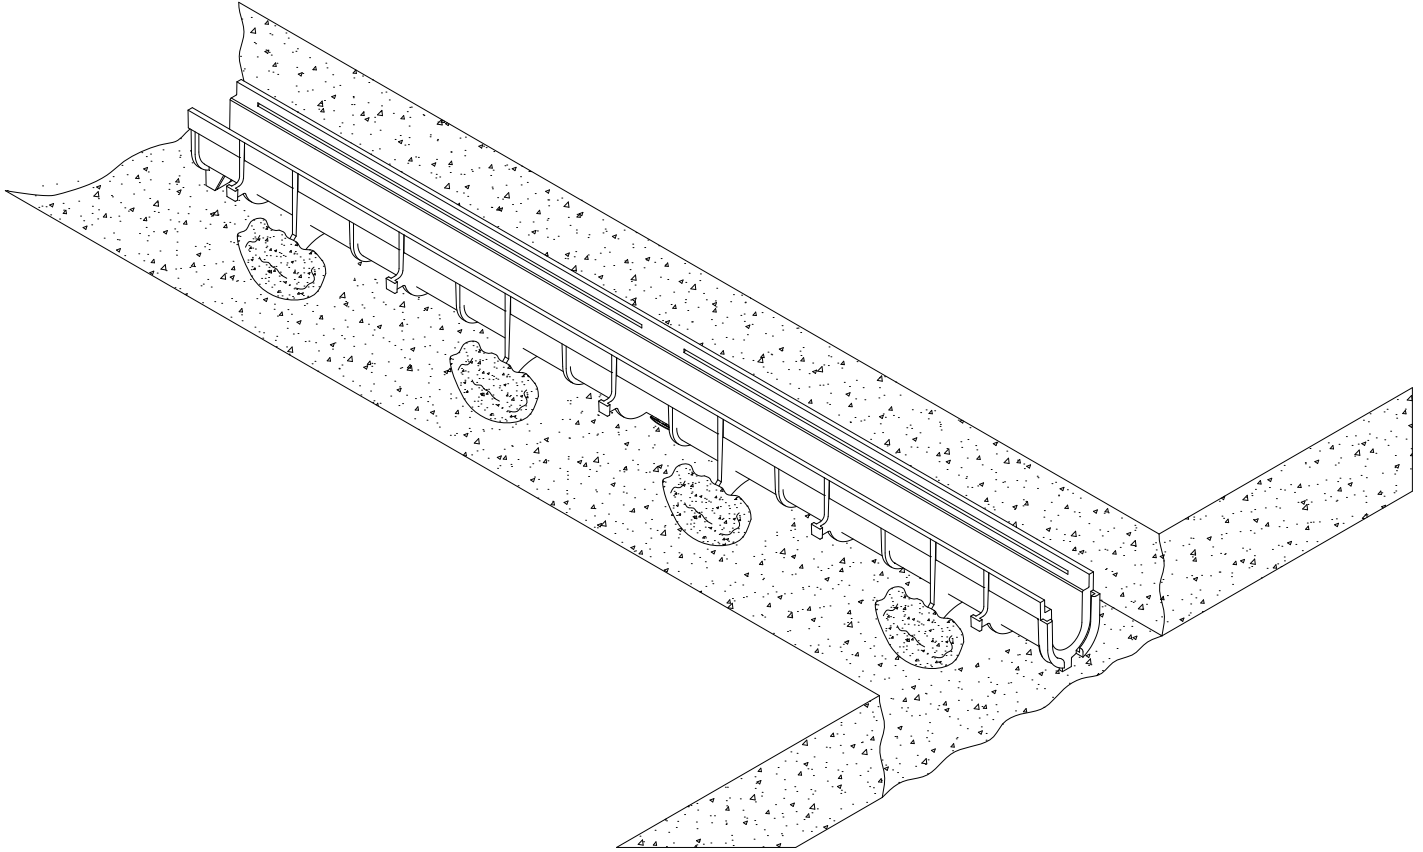

After attachment of accessories, anchor and level trench in the excavation using concrete patties around the feet. Make finish pour of concrete and be certain to properly vibrate concrete to eliminate any unwanted voids. Finish troweling should be done to set the top edge of the trench drain 1/16" [1.6mm] below the floor grade. Remember to compensate for concrete shrinkage that may occur during cure so that the edge of the trench drain does not protrude above the finished floor grade.