


DIRECTIONS: Please follow the SOFA specific flow rates, sump specifications, and flow path zone information below. The installation must conform to these minimum/maximum requirements including the SOFA dimension defined in Figure 1. The flow path zone is defined by dimensions A through E. Please write the Cover Model Number, orientation, and SOFA Model Flow Rating on the *VGBA DRAIN COVER IDENTIFICATION INFORMATION* label that comes with each AquaStar Pool Products, Inc. drain cover.


Cover Model Number:
PCxxx



FIGURE 1 – SOFA MODEL & FLOW PATH

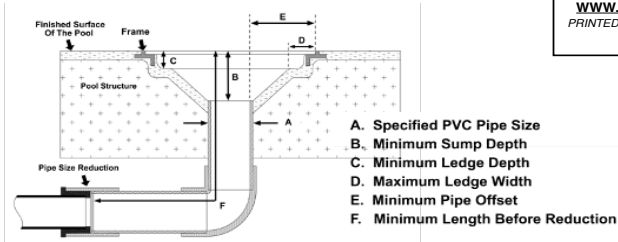

**FOR MOST CURRENT INFORMATION
SCAN THE QR CODE OR VISIT
WWW.AQUASTARPOOLPRODUCTS.COM/FLOWCODE
PRINTED DOCUMENTS MAY NOT HAVE THE MOST CURRENT FLOW
RATINGS OR INSTALLATION OPTIONS.**

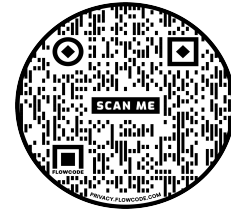

SOFA Model No.	Pipe Size (Nominal)	Pipe Depth (Minimum)	Orientation (Wall / Floor)	Flow Rating (GPM)	Head Loss Curve
PC-22.3f_A-2b_B2.9_C0_D0_E1.3_F16	2" (b)	2.9"	Floor (f)	104	A
PC-22.3f_A-2.5b_B2.9_C0_D0_E1.3_F16	2.5" (b)	2.9"	Floor (f)	120	B
PC-22.3f_A-2x2b_B2.9_C0_D0_E1.3_F16	2" x 2 (b)	2.9"	Floor (f)	120	C
PC-22.3f_A-2.5x2b_B2.9_C0_D0_E1.3_F16	2.5" x 2 (b)	2.9"	Floor (f)	200	D
PC-22.3f_A-3x2b_B2.9_C0_D0_E1.3_F16	3" x 2 (b)	2.9"	Floor (f)	184	E
PC-22.3f_A-2.5x4b_B2.9_C0_D0_E1.3_F16	2.5" x 4 (b)	2.9"	Floor (f)	400	F

Note 1: "SOFA Model No" nomenclature; bottom pipe = (b), side pipe = (s). See Fig 1 for capital letters A through E

Note 2: Head loss inHg is measured 16 to 24 inches from the finish surface of the pool. Reference Fig 1 dimension F.

