


Timing Adjustment on an MVP Metering Cartridge

- ① With handle in place, purge cartridge of air by pushing completely down 4-8 times rapidly, then check timing cycle.
- ② Remove handle with a 3/32 allen wrench.
- ③ Use a standard pair of pliers (other tools may damage the adjustment nut) to change height of adjustment nut by 1/4 turn only. Turn adjustment nut clockwise to increase time.
- ④ Replace handle and time flow. NOTE: TIMING MUST BE CHECKED WITH HANDLE IN PLACE
- ⑤ If more adjustment is needed, follow steps 3 and 4 until timing is right.
- ⑥ Attach handle and tighten screw. Press index button into handle opening.

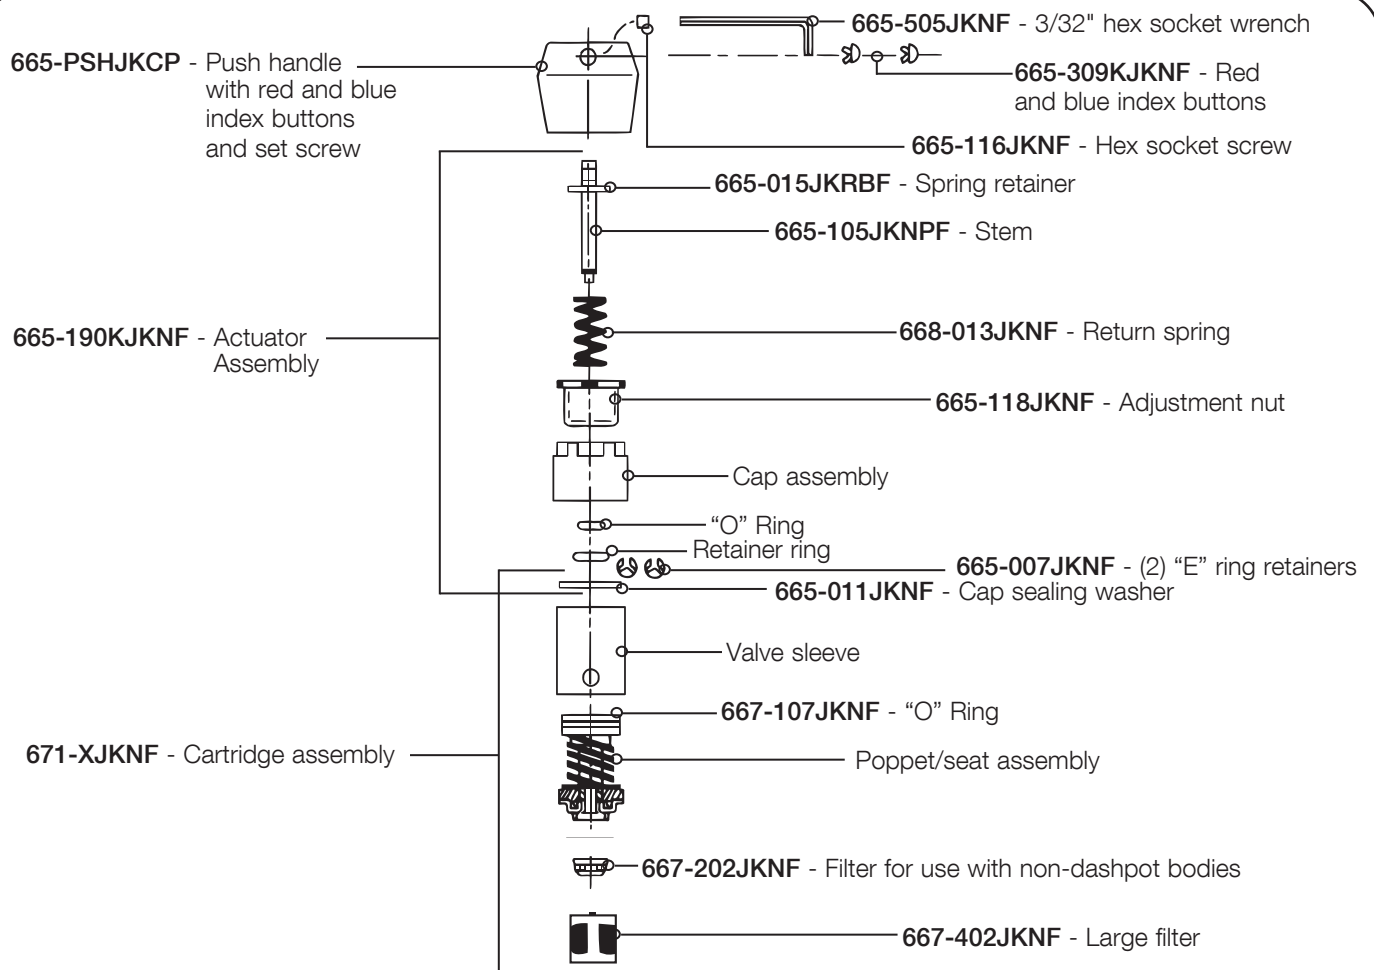