




DB68-07053A-00

MERV Filter installation manual (MF-C6A0)

Accessories

- Before installation, check if the following accessories are supplied with the package.

Name	MERV Filter	Installation manual
Quantity	12	1
Shape		

Installing the MERV filter into the 4-way cassette indoor unit



CAUTION


- Handle with extreme care:** Do not apply excessive force to the MERV filter. This action may break the filter.
When moving or handling with the MERV filter, be careful not to damage the filter with any sharp objects.
- Install with extreme care:** When installing the MERV filter on a high altitude place, take extra care for safety accidents.



NOTE


- The MERV filter is an optional component that is installed separately after installing an indoor unit on the ceiling.

- 1 Open the indoor unit panel and remove the pre-installed filter from the indoor unit.

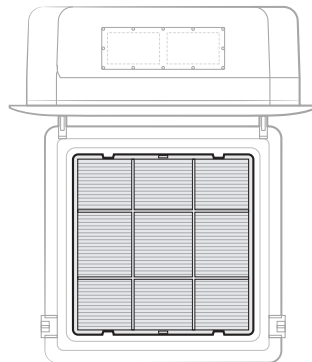



- 2 Install the MERV filter onto the specified position by using the jaws on the panel.

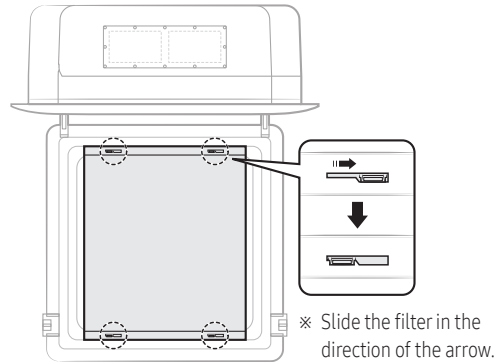

- 3 Close the indoor unit panel.

NOTE

- The performance of the indoor unit may differ depending on the option codes. For more information, refer to the Technical Data Book (TDB).

Setting the operating options for the MERV Filter

- The MERV filter is an optional component, so factory default setting of an indoor unit is not to use the MERV filter.
When installing the MERV filter additionally, set the options for correct operation of MERV filter by referring to the following table.
- Input the setting option more than twice for sure setup.

NOTE

- MERV Filter does not operate until you set the operating options after installation.
- When the Step2 option is used, the minimum circuit ampacity (MCA) of the indoor unit can increase by up to 1.5 times. Consider this fact before selecting a power cable.

	Classification	AM009FN4DCH/AA	AM012FN4DCH/AA	AM018FN4DCH/AA	AM024FN4DCH/AA	AM030FN4DCH/AA	AM036FN4DCH/AA	AM048FN4DCH/AA
Option code	MERV13 (Spec)	01404F-1950CA-201A1A-330000	01404F-1950CA-202323-330000	01404F-1950CA-203434-330000	01404F-1950EA-204848-330000	01404F-19541F-205A5A-330020	01404F-19542F-206E6E-330020	01404F-195550-209191-330020
	MERV13 (Step1)	01404F-1950DA-201A1A-330000	01404F-1950DA-202323-330000	01404F-1950DA-203434-330000	01404F-19540A-204848-330000	01404F-19545F-205A5A-330020	01404F-195560-206E6E-330020	01404F-195573-209191-330020
	MERV13 (Step2)	01404F-1950EA-201A1A-330000	01404F-1950EA-202323-330000	01404F-1950EA-203434-330000	01404F-19541A-204848-330000	01404F-19548F-205A5A-330020	01404F-195591-206E6E-330020	01404F-195596-209191-330020

